



Home » Support » MZD8391 C35-J-4W Battery-Powered Photo String Lights User Manual 🥦

Contents [hide]

- 1 MZD8391 C35-J-4W Battery-Powered Photo String Lights
- 2 INTRODUCTION
- 3 SPECIFICATIONS
- 4 WHAT'S IN THE BOX
- **5 FEATURES**
- 6 SETUP GUIDE
- 7 CARE & MAINTENANCE
- 8 TROUBLESHOOTING
- 9 PROS & CONS
- 10 WARRANTY
- 11 FREQUENTLY ASKED QUESTIONS
- 12 VIDEO PRODUCT OVERVIEW
- 13 References



MZD8391 C35-J-4W Battery-Powered Photo String Lights



INTRODUCTION

The \$16.99 MZD8391 C35-J-4W Battery-Powered Photo String Lights showcase your best memories. This updated version has 50 brighter, more adaptable LED clips than the 20 or 30-clip models, excellent for hanging photographs, cards, messages, or artwork. The 17.5-foot rope with clips every 4 inches lets you display several lightweight decorations. With a remote, you may choose from 8 lighting settings and lower brightness to 100%, 75%, 50%, 25%. The 6-hour timer switches lights on and off daily, making it simple for daily usage. These LED lights, powered by 3 AA batteries (not included), are excellent for bedrooms, living rooms, patios, and special events like weddings, birthdays, Valentine's Day, and Christmas. These chic, sleek, and simple lights provide a lovely, customized glow to any environment.

SPECIFICATIONS

Brand	MZD8391
Model	C35-J-4W

Price	\$16.99
Color	Warm White
LED Count	50 LEDs with clips
Total Length	17.5 ft
Clip Interval	4 inches
Power Sourc e	3 x AA Batteries (Not Included)
Lighting Mod	8 (Combination, In Wave, Sequential, Slo Glo, Chasing/Flash, Slow F ade, Twinkle/Flash, Steady On)
Dimmable	4 Levels (100%, 75%, 50%, 25%)
Timer Functi	6 hrs ON / 18 hrs OFF
Indoor/Outdo or	Yes
Color Tempe rature	2700K
Voltage	120 Volts
Wattage	4 Watts
Bulb Base	GU5.3
Controller Ty	Remote Control
Theme	Christmas, Birthday, Valentine's Day, Wedding
Style	Modern

Recommend ed Use	Hanging photos, cards, memos, artwork, decorations
------------------	--

WHAT'S IN THE BOX

- 1 x 17.5 ft Photo String Light with 50 LED clips
- 1 x Remote Control for adjusting brightness and modes
- User Manual

FEATURES

- **50 LED Clips:** Includes 50 LED clips designed to hold photos, greeting cards, artwork, or notes for a personalized display.
- Total Length: Measures 17.5 ft in length with 4-inch spacing between each clip for even placement.
- Battery Powered: Runs on 3 AA batteries (not included) for cordless convenience and flexible setup.
- **Dimmable Brightness:** Features 4 brightness levels—100%, 75%, 50%, and 25%—for customized lighting.
- Smart Timer Function: Built-in 6 hours ON / 18 hours OFF timer enables automatic operation.
- 8 Lighting Modes: Offers Combination, In Wave, Sequential, Slo Glo, Chasing/Flash, Slow Fade, Twinkle/Flash, and Steady On modes for versatile ambiance.
- Remote Control: Includes a convenient remote for easy adjustments of modes and brightness from a distance.
- Warm White LED Glow: Provides a cozy and inviting illumination perfect for any indoor setting.
- Indoor/Outdoor Use: Suitable for decorating windows, walls, ceilings, patios, or garden spaces.
- Portable and Lightweight: Easy to move and position anywhere, ideal for temporary or permanent displays.
- Safe Low-Voltage Operation: Designed for extended use around children, pets, and household areas.
- Versatile Decoration: Perfect for holidays, weddings, parties, and general home

décor.

- Modern Design: Clear wires and minimalist clips blend seamlessly with any décor style.
- **Brighter LED Clips:** Improved brightness compared to previous 20-clip or 30-clip models for better visibility.
- Creative Display Option: Ideal for showcasing personal memories, photos, or special mementos in a stylish and fun way.



SETUP GUIDE

- **Unpack:** Carefully remove the photo string lights from packaging.
- Verify Clips: Ensure all 50 LED clips are securely attached to the string.
- Insert Batteries: Place 3 AA batteries into the battery case (batteries not included).
- **Position Battery Case:** Store the battery case in a safe, discreet location out of sight.
- Hang String: Drape or hang lights across walls, windows, doors, ceilings, or furniture.
- Attach Photos: Clip photos, cards, or artwork onto the LED clips securely.

- Even Spacing: Make sure clips are evenly spaced for balanced illumination.
- **Power On:** Turn on the lights using the remote control.
- **Select Mode:** Choose your preferred lighting mode using the remote.
- Adjust Brightness: Use Dim+ or Dim- buttons to set the desired brightness level.
- Activate Timer: Enable the 6-hour timer for automatic ON/OFF operation.
- Arrange Wires: Keep wires neat and untangled for a clean, polished display.
- Safe Placement: Avoid hanging near open flames, heaters, or other heat sources.
- Test LEDs: Check all clips to ensure each LED is working properly.
- Enjoy Display: Relax and admire your cozy, warm-lit display showcasing photos and décor.



CARE & MAINTENANCE

- Remove Batteries: Take out batteries when lights are not in use to prevent leakage.
- Avoid Mixing Batteries: Do not combine old and new batteries or different battery

types.

- Proper Storage: Store lights in a cool, dry place to prevent damage.
- Clean Clips and Wires: Wipe gently with a soft, dry cloth to remove dust and dirt.
- Handle Wires Carefully: Avoid bending or stretching wires excessively to maintain durability.
- Keep Battery Case Dry: Do not submerge the battery case in water.
- Check Clips: Ensure all LED clips are securely attached before each use.
- Inspect Wires: Regularly examine for fraying or damage to maintain safe operation.
- Avoid Sun Exposure: Keep out of direct, harsh sunlight for prolonged periods.
- Child and Pet Safety: Keep away from small children or pets.
- Prevent Damage: Avoid placing heavy objects on the string lights.
- Secure Hanging: Use hooks, tape, or clips for stable installation.
- Test Periodically: Confirm all LEDs are functioning properly before use.
- Enjoy Safely: Use the lights responsibly to highlight memories and décor for years to come.

TROUBLESHOOTING

Problem	Possible Cause	Solution	
Lights not turning on	Dead or incorrectly inserted batteries	Replace or reinsert batteries cor rectly	
LED flickering	Loose battery connection	Secure battery contacts firmly	
Lighting mode not c hanging	Remote malfunction or wea	Replace remote batteries or res et string	
Dim brightness	Low battery power	Replace batteries	
Timer not working	Timer function not activated	Press timer button to enable 6-h our cycle	
Some clips not lighti	Broken LED or wire	Inspect string and replace dama ged section	

Problem	Possible Cause	Solution	
Remote not respond ing	Out of range	Move closer and aim at string	
Lights too dim	Incorrect dim level selected	Adjust using Dim+ or Dim- on re mote	
String tangled	Improper storage	Coil string neatly before storage	
Clips falling off	Weak attachment	Secure clips firmly onto photos o r décor	
Flickering in sunlight	Bright ambient light	Use indoors or in dimmer areas	
Battery case leaking	Improper battery insertion	Check and insert batteries corre ctly	
Overheating	Continuous long-term use	Turn off lights periodically	
Uneven lighting	LEDs spaced incorrectly	Adjust clips evenly along string	
Lights not turning off	Timer malfunction	Turn off manually using remote	

PROS & CONS

Pros:

- 50 LED clips allow for extensive photo or artwork display.
- 8 lighting modes and 4 dimmable levels for versatile ambiance.
- Battery-powered and portable for flexible placement.
- Warm white LEDs create a cozy, romantic atmosphere.
- Smart timer simplifies daily operation.

Cons:

- Batteries not included.
- Limited to 17.5 ft string length.

- Remote may require line-of-sight operation.
- Clips can be delicate; avoid rough handling.
- Not ideal for very heavy decorations.

WARRANTY

The MZD8391 C35-J-4W Photo String Lights come with a standard manufacturer warranty covering defects in materials and workmanship. If the product fails under normal use, MZD8391 offers repair or replacement. Proper battery use, storage, and care ensure longevity and maintain warranty eligibility. Keep your purchase receipt for any warranty claims.

FREQUENTLY ASKED QUESTIONS

What is the MZD8391 C35-J-4W Battery-Powered Photo String Lights?

The MZD8391 C35-J-4W is a 17.5 ft battery-operated string light with 50 LED clips for hanging photos, cards, or memos, providing warm white illumination for indoor and outdoor decoration.

How many LED clips are included in the MZD8391 C35-J-4W Photo String Lights?

The set includes 50 LED clips, spaced approximately 4 inches apart.

Can the brightness of the MZD8391 C35-J-4W Photo String Lights be adjusted?

The lights are dimmable with 4 levels: 100, 75, 50, and 25 percent adjustable via the included remote control.

What lighting modes are available on the MZD8391 C35-J-4W Photo String Lights?

There are 8 modes: Combination, In Wave, Sequential, Slo Glo, Chasing/Flash, Slow Fade, Twinkle/Flash, and Steady On.

What type of power source does the MZD8391 C35-J-4W Photo String Lights use?

It is battery-powered, requiring 3 AA batteries (not included).

What if some LEDs on the MZD8391 C35-J-4W Photo String Lights do not light up?

Check that the batteries are installed correctly and have sufficient charge. Ensure the remote is functioning and the ON switch is pressed. Inspect the string for damaged clips or wires.

How long is the MZD8391 C35-J-4W Photo String Lights?

The total length is 17.5 ft, including 50 LED clips spaced evenly along the wire.

VIDEO – PRODUCT OVERVIEW

https://manuals.plus/wp-content/uploads/2025/09/MZD8391-C35-J-4W-Battery-Powered-Photo-String-Lights-User-Manual.mp4

References

- User Manual
- MZD8391
- ▶ B01EW7PAA6, Battery-Powered Photo String Lights, C35-J-4W, MZD8391, MZD8391 C35-J-4W, user manual

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name		
Email		
<u> </u>		
Website		
☐ Save my name, email, and website in this browser for the next time I com	ment.	
Post Comment		
Search:		
e.g. whirlpool wrf535swhz	Search	

Manuals+ | Upload | Deep Search | Privacy Policy | @manuals.plus | YouTube

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.