



# NANLINK WS-RC-C2 2.4GHz Remote Controller User Manual

[Home](#) » [NANLINK](#) » NANLINK WS-RC-C2 2.4GHz Remote Controller User Manual 

# NANLINK

USER MANUAL  
WS-RC-C2



Contents

1 Product Details

2 Detailed Description


3 Usage

4 Notice

5 Documents / Resources

6 Related Posts

Product Details

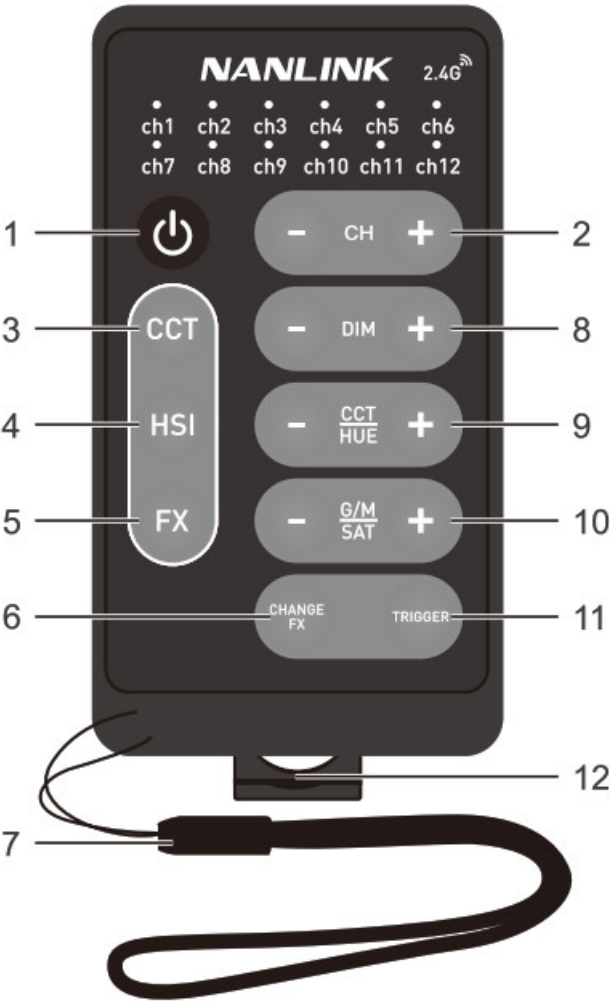

Detailed Description

|                                                                                                                 |                                                                                                                                                        |
|-----------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------|
| <div>1. Switch/<br/>2. CH + – Key<br/>3. CCT Key<br/>4. HSI Key<br/>5. FX Key<br/>6. CHANGE Holder FX Key</div> | <div>7. Safety Strap Reset Key<br/>8. DIM +- Key<br/>9. CCT/HUE + – Key<br/>10. G/M &amp; SAT + – Key<br/>11. TRIGGER Key<br/>12. Button Battery</div> |
|-----------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------|

## Usage

1. Switch/Reset Key Press Switch/Reset key, the DIM function of the fixture will reset to 0%, press the Switch/Reset key again to restore the previous setting of DIM.
2. CH Setting Press CH + – key to select the channel address corresponding to the fixture you wish to control. There are 12 channel addresses for selection, the channel address of the remote controller must match with the fixtures.
3. CCT Setting Press the CCT key to select CCT mode, then press + – to adjust the value of CCT.
4. Color Setting Press the HSI key to select color mode, then press + – to adjust the value of CCT, HUE, G/M and SAT.
5. FX Setting Press FX key to select FX mode, then press the CHANGE FX key to change the function of the special effect, press the TRIGGER key to manually trigger the effect.

## Notice

1. Please use the CR2032 button battery to power the remote controller.
2. The Switch/Reset key is only used to adjust the DIM function of the fixture/s, and can't power on or off the fixture/s.
3. The special effect control function of the remote controller is only applicable to the fixtures using the new protocol, and cannot control the fixtures which use the old protocol.
4. When the remote controller is not in use for a long time, please remove the battery to avoid mildew and corrosion of the internal circuit.
5. The remote controller should be placed where it won't be at risk of getting wet or exposed to extreme temperatures.

Version: V1 2021-03-10



<http://www.nanlink.com>



+86-754-85300887


+86-754-85751187



[service@nanlite.com](mailto:service@nanlite.com)



Zhanglin,324, Dongli Chenghai Shantou Guangdong China
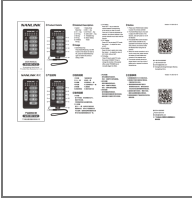
|                                                                                   |                                                                                                                           |
|-----------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------|
|  | <p><a href="#">NANLINK WS-RC-C2 2.4GHz Remote Controller</a> [pdf] User Manual<br/>WS-RC-C2, 2.4GHz Remote Controller</p> |
|-----------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------|