




NAPOLEON W190-0202 IoT Module User Manual

[Home](#) » [Napoleon](#) » **NAPOLEON W190-0202 IoT Module User Manual** 

NAPOLEON W190-0202 IoT Module User Manual

Contents

- [1 IoT Module instructions](#)
- [2 FCC Statements](#)
- [3 Documents / Resources](#)
- [4 Related Posts](#)

IoT Module instructions

1. Connect 4p shielded cable to IoT module COM port. And connect the end of shielded cable to host device COM port. (Make sure host device COM port VCC is rated for 3.3V). IoT module will be powered by host device COM port.
2. Connect an extension button cable to AP port if required to extends AP button location.
3. Connect an extension LED cable to LED port if required to extends LED location.
4. Connect 4p cable to ACC port if required to communicate with 3rd device.
5. Reset button can be pressed to reboot IoT module.

FCC Statements

FCC Caution

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

IC Caution:

This device complies with Industry Canada licence-exempt RSS standard(s).
Operation is subject to the following two conditions:

1. This device may not cause interference, and
2. This device must accept any interference, including interference that may cause undesired operation of the device.

Documents / Resources

<div><p>IoT Module instructions</p><p>1. Connect the IoT module cable to the module (IoT port) and connect the end of the cable to the IoT module (IoT port). Make sure the cable is connected properly. The IoT module cable is provided by the device (IoT port).</p><p>2. Connect the IoT module cable to the IoT port of the module (IoT port) and connect the end of the cable to the IoT module (IoT port).</p><p>3. Connect the IoT module cable to the IoT port of the module (IoT port) and connect the end of the cable to the IoT module (IoT port).</p><p>4. Connect the IoT module cable to the IoT port of the module (IoT port) and connect the end of the cable to the IoT module (IoT port).</p><p>5. Connect the IoT module cable to the IoT port of the module (IoT port) and connect the end of the cable to the IoT module (IoT port).</p></div>	<div><p>NAPOLEON W190-0202 IoT Module [pdf] User Manual</p><p>W190-0202, W1900202, VA8W190-0202, VA8W1900202, W190-0202 IoT Module, IoT Module, Module</p></div>
--	--