

NATIONAL INSTRUMENTS GPIB-ENET-100 Interface Adapter



NATIONAL INSTRUMENTS GPIB-ENET-100 Interface Adapter Installation Guide


[Home](#) » [NATIONAL INSTRUMENTS](#) » NATIONAL INSTRUMENTS GPIB-ENET-100 Interface Adapter Installation Guide 

Contents

- [1 NATIONAL INSTRUMENTS GPIB-ENET-100 Interface Adapter](#)
- [2 Specifications](#)
- [3 Internal Controllers](#)
- [4 External Controllers](#)
- [5 Where to Go for Support](#)
- [6 COMPREHENSIVE SERVICES](#)
- [7 SELL YOUR SURPLUS](#)
- [8 FAQ](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)



NATIONAL INSTRUMENTS GPIB-ENET-100 Interface Adapter

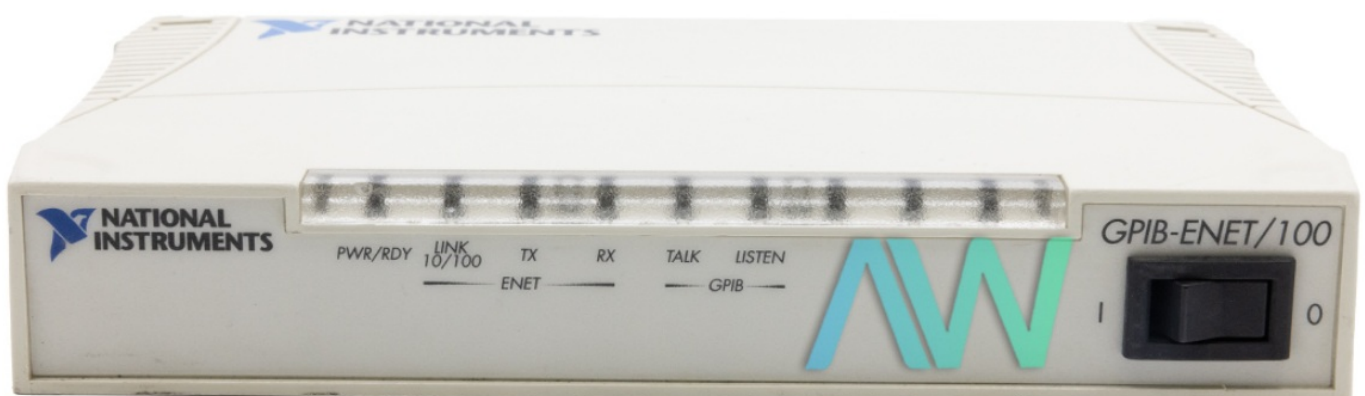


Specifications

- **Product Name:** GPIB-ENET-100
- **Compatibility:** GPIB NI-488.2 for Windows
- **Controller Types:**
 - **Internal Controllers:** PCI, PXI, PCI Express, PMC, ISA
 - **External Controllers:** Ethernet, USB, ExpressCard, PCMCIA
- **Release Date:** January 2013

Internal Controllers

(PCI, PXI, PCI Express, PMC, ISA)

1. Insert the NI-488.2 media and choose Install Software.

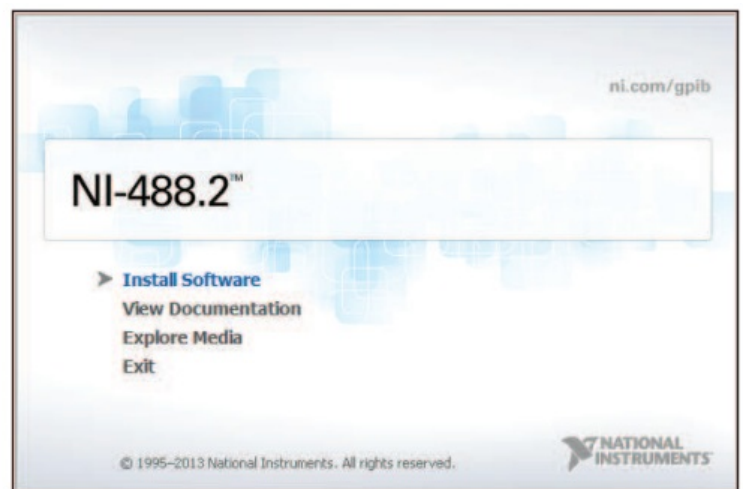


Tip The View Documentation link provides access to NI-488.2 documentation, including detailed hardware installation instructions.

2. When you have completed the software installation, shut down the computer. Make certain it is powered off before proceeding.



3. Install your GPIB hardware and then power on the computer.


PCI, PCI Express, ISA

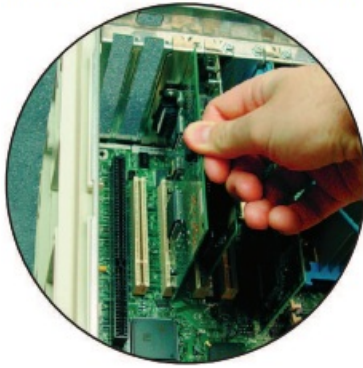

PXI




PMC

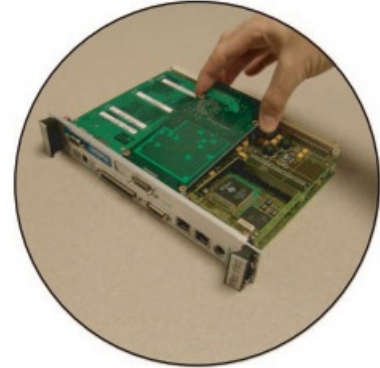

External Controllers

(Ethernet, USB, ExpressCard™, PCMCIA)

1. Insert the NI-488.2 media and choose Install Software.

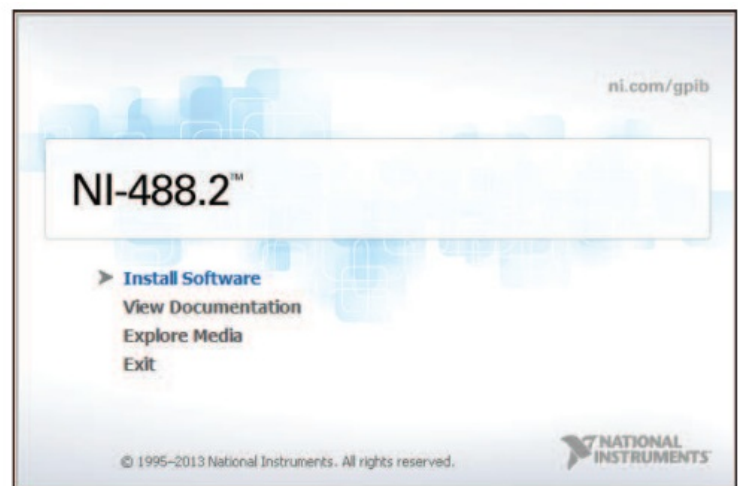

Tip The View Documentation link provides access to NI-488.2 documentation, including detailed hardware installation instructions.

2. When you have completed the software installation, restart the computer.



3. Install your GPIB hardware.

Ethernet



USB



ExpressCard™, PCMCIA



Caution The GPIB devices and the computer must share the same ground potential.

4. Ethernet Only

- After the computer has restarted, complete the GPIB Ethernet Wizard to configure your Ethernet interface.
- (Windows XP/Vista/7) Run the GPIB Ethernet Wizard from the National Instruments» NI-488.2 program group in the Start menu.
- (Windows 8) Run the GPIB Ethernet Wizard from the National Instruments» NI-488.2 program group in the NI Launcher.



Where to Go for Support

The National Instruments Web site is your complete resource for technical support. At ni.com/support you have access to everything from troubleshooting and application development self-help resources to email and phone assistance from NI Application Engineers.

National Instruments corporate headquarters is located at 11500 North Mopac Expressway, Austin, Texas, 78759-3504. National Instruments also has offices located around the world to help address your support needs. For telephone support in the United States, create your service request at ni.com/support and follow the calling instructions or dial 512 795 8248. For telephone support outside the United States, visit the Worldwide Offices section of ni.com/niglobal to access the branch office Websites, which provide up-to-date contact information, support phone numbers, email addresses, and current events.

COMPREHENSIVE SERVICES

We offer competitive repair and calibration services, as well as easily accessible documentation and free downloadable resources.

SELL YOUR SURPLUS

- We buy new, used, decommissioned, and surplus parts from every NI series.
- We work out the best solution to suit your individual needs.



Sell For Cash



Get Credit



Receive a Trade-In Deal

OBSOLETE NI HARDWARE IN STOCK & READY TO SHIP

We stock New, New Surplus, Refurbished, and Reconditioned NI Hardware.

- Request a Quote [CLICK HERE](#) GPIB-ENET-100

Bridging the gap between the manufacturer and your legacy test system.

- 1-[800-915-6216](tel:800-915-6216)
- www.apexwaves.com
- sales@apexwaves.com

All trademarks, brands, and brand names are the property of their respective owners.

LabVIEW, National Instruments, NI, ni.com, NI-488.2, the National Instruments corporate logo, and the Eagle logo are trademarks of National Instruments Corporation. Refer to the Trademark Information at ni.com/trademarks for other National Instruments trademarks. The ExpressCard™ word mark and other product and company logos are owned by the PCMCIA and any use of such marks by National Instruments is under license. Other product and company names mentioned herein are trademarks or trade names of their respective companies. For patents covering National Instruments products/technology, refer to the appropriate location: Help» Patents in your software, the patents.txt file on your media, or the National Instruments Patents Notice at ni.com/patents. Refer to the Export Compliance Information at ni.com/legal/export-compliance for the National Instruments global trade compliance policy and how to obtain relevant HTS codes, ECCNs, and other import/export data.

© 2004–2013 National Instruments. All rights reserved.

FAQ

- **Where to Go for Support**

If you need further assistance or support, please refer to the support resources provided by the manufacturer.



[NATIONAL INSTRUMENTS GPIB-ENET-100 Interface Adapter](#) [pdf] Installation Guide GPIB-ENET-100 Interface Adapter, GPIB-ENET-100, Interface Adapter, Adapter

References

- [NI Test and Measurement Systems, a part of Emerson - NI](#)
- [NI Test and Measurement Systems, a part of Emerson - NI](#)
- [NI Support - NI](#)
- [NI Trademarks and Logo Guidelines - NI](#)
- [Contact Us - NI](#)
- [Support - NI](#)
- [User Manual](#)

Manuals+ Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.