



naxa EDS-8000 Portable 8 Inch Bluetooth Party Speaker with Multi-Color Round Running Lights Instruction Manual

[Home](#) » [NAXA](#) » naxa EDS-8000 Portable 8 Inch Bluetooth Party Speaker with Multi-Color Round Running Lights Instruction Manual 

Contents

- [1 naxa EDS-8000 Portable 8 Inch Bluetooth Party Speaker with Multi-Color Round Running Lights](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 IMPORTANT SAFETY INSTRUCTIONS](#)
- [5 IN THE BOX](#)
- [6 KEY FEATURES](#)
- [7 PRODUCT OVERVIEW](#)
- [8 PAIRING A BLUETOOTH® DEVICE](#)
- [9 TWS FUNCTION](#)
- [10 TF MODE](#)
- [11 USB MODE](#)
- [12 FM RADIO](#)
- [13 BATTERY](#)
- [14 SPECIFICATION](#)
- [15 FCC NOTICE](#)
- [16 SUPPORT](#)
- [17 Documents / Resources](#)
 - [17.1 References](#)
- [18 Related Posts](#)



naxa EDS-8000 Portable 8 Inch Bluetooth Party Speaker with Multi-Color Round Running Lights



Product Information

The Bluetooth Speaker Party Speaker with Multi-Color Round Running Lights EDS-8000 is a portable speaker that provides high-quality audio and a visually appealing light display. It features Bluetooth connectivity, allowing you to wirelessly stream music from your devices. The speaker also supports TWS (True Wireless Stereo) function, which enables you to connect multiple speakers for a stereo audio experience. Additionally, it has a TF card slot for playing audio files directly from external storage devices.

 
Product Usage Instructions

1. **Charging the Battery:** Before first use, it is recommended to fully charge the battery to optimize its lifetime performance.
2. **Basic Controls:** The speaker has various control buttons:
 - M/TWS: In FM/USB/TF/Bluetooth mode, press to move to the previous channel/track. Press and hold to decrease the volume.
 - Play/Pause: In USB/TF/Bluetooth mode, press to play and pause. In FM mode, it is used for station selection and frequency modulation. Press and hold to perform an automatic search. Press and hold to change the RGB light mode.
 - /+: In FM/USB/TF/Bluetooth mode, press to move to the next channel/track. Press and hold to increase the volume.
 - DC-5V: USB charge port for charging the speaker.
 - MIC-IN: Microphone input for connecting an external microphone.
 - LED display: Displays relevant information and settings.
3. **TWS Function:** To use the TWS function and enjoy stereo audio, follow these steps:
 1. Purchase 2 Bluetooth speakers.
 2. Turn on one speaker and connect it via Bluetooth to your device. The speaker should appear as “EDS-8000” in the list of Bluetooth devices.
 3. Turn on the second speaker and press the M(TWS) button, holding it for 3 seconds. You will hear a tone

sound, indicating that the devices are connected in TWS mode.

4. You can now enjoy True Wireless Stereo (TWS) for a stereo audio experience.
5. To disconnect from TWS mode, press the M(TWS) button on either speaker. You will hear a tone sound, indicating that the devices are disconnected from TWS mode. To reconnect, repeat the steps above.
4. **TF Mode:** The speaker supports playing audio from external storage devices, such as TF cards. To use this mode:
 1. Insert a TF card with your favorite audio files into the TF card slot on the speaker.
 2. The speaker will automatically detect and play the audio files from the TF card.

WARNING

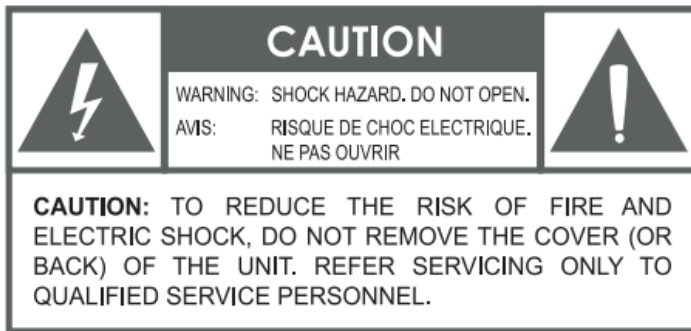

The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of significant magnitude to constitute risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operation and servicing instructions in the literature accompanying the appliance.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Guard this manual.
3. Obey all alerts.
4. Follow all instructions.
5. **WARNING:**

Do not store and operate this product near liquid.
6. Clean only with dry cloth.
7. . Not store and not operate this product near any heat sources such as radiators and heat registers, stove or other appliances (including amplifiers) that produce heat. Keep this product in a well ventilated place.
8. Not ignore the safety purpose of the polarized or grounding plug. A polarized plug has two blades being wider than the other. A grounding plug has two blades plus a round pin to ground.

The wide blade or the third prong is intended to provide security. If the provided plug does not fit into your outlet, consult an electrician to replace the outlet.
9. Protect all wires connected to this unit from being walked on or pinched, particularly at plugs and the point where the cord exits the unit. When unplugging from the electrical outlet, grasp the plug and do not pull the cord.
10. Disconnect the unit during lightning storms or when long period is to remain unused.
11. Keep this unit off when connecting all the devices connected to it.
12. After finishing the installation and connections, connect all your equipment with low volume level. Once all devices are connected, slowly increase the volume or level controls to achieve the proper position.
13. Before placement, installation, assembly or suspending any product, inspect all equipment, suspension,

cabinets, transducers, brackets and associated equipment. Any missing component, corroded, deformed, or with non-nominal load can reduce the intensity, placement and arrangement of the installation significantly. Any of these conditions can reduce the security of the facility and must be corrected immediately. Use only suitable equipment for the loading conditions of the installation and that any possibility of reducing term, unexpected overload, never exceed the capacity of the material or equipment.

14. Consult a licensed professional to install the equipment and make sure that all local, regional and national regulations related to security are understood and adhered to.
15. All services should be performed by qualified professionals. Servicing is required when the apparatus has been damaged in any way, as if having the power cord or its damaged connector, or if the machine breaks contact with liquid or if any object is inserted in the unit or if the unit is exposed to rain or moisture, or if the unit does not operate normally, or has been dropped.

IN THE BOX

 
Upon opening your new dual wireless speakers, first check to ensure all of the following contents are present:

- Wireless Speaker
- Charging Cable
- Wired Microphone
- User Manual

KEY FEATURES

- 8" Full-frequency speakers pump out room-filling, high-quality audio with ease
- Bluetooth® functionality allows you to wirelessly stream all your favorite music content from Bluetooth-enabled devices in high-quality audio
- Start the party off right with multiple lighting effects and schemes that will leave a lasting impression on all your friends and family
- Live out your inner rockstar dreams during a fun time of karaoke with friends and family thanks to the MIC input and included wired microphone
- Lighting effects that dance along with the music and make you want to dance along too
- Connect to other speaker True Wireless Speakers (TWS) allowing you to sync speakers from each other without any wires
- Ensure the fun never has to stop by keeping the speaker at a full charge with the included USB charging cable
- Built-in TF card slot and USB port gives you with the option of playing all your favorite audio files with removable storage devices, such as TF memory cards and USB flash drives
- Tune in on all your favorite local radio stations thanks to the FM tuner
- Accessories included: User Manual, Wired Microphone, and USB charging cable.

PRODUCT OVERVIEW

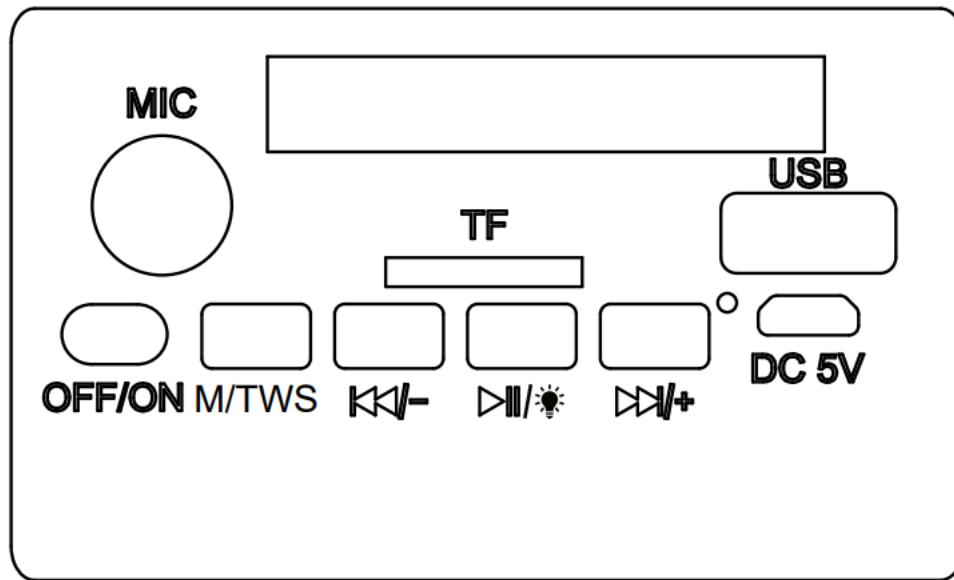

1. **POWER ON/OFF/**: Turn on/off the machine
2. **MODE** :change to the different function, Press and hold for TWS function
3. **◀◀/-**: In FM/USB/TF/Bluetooth mode, press to move to previous channel/track. Press and hold to decrease the volume
4. **Play/Pause**: In USB/TF/Bluetooth mode, press for play and pause. In FM mode, Press: station selection and frequency modulator alternation, press and hold for automatic search. Press and hold to change the RGB light mode
5. **▶▶/+**: In FM/USB/TF/Bluetooth mode, press to move to next channel/track. Press and hold to increase the volume
6. **DC-5V**: DC-5V USB charge port
7. **TF slot**: Play the Mp3 file from TF card
8. **USB slot**: Play the Mp3 file from USB
9. **MIC-IN**: Microphone-in
10. LED display

PAIRING A BLUETOOTH® DEVICE

Use Bluetooth® mode to stream music from a Bluetooth® enabled player (e.g., smartphone or tablet device). A device must be paired with the unit before using them together for the first time.

To pair a Bluetooth® enabled device with the Speaker, follow these steps:

1. Make sure Bluetooth® is enabled on your device and that it is next to the unit before attempting to pair it.
2. Turn on the Speaker. Use the Mode button to switch to Bluetooth® mode.
3. Use your device to search for nearby Bluetooth devices. The Speaker will be listed as “EDS-8000”. (This function is usually in the Bluetooth® settings menu; refer to your device’s instruction manual to learn more.)
4. Select “EDS-8000” from the list of found/available devices. The Speaker will make a confirmation tone to indicate a successful connection.

You can now start playback on your connected device to begin streaming music to the speaker.





TWS FUNCTION

The Wireless speaker allows you to enjoy your favorite audio played over multiple speakers at the same time thanks to the included TWS function. To use the TWS function, follow these steps:

1. Please purchase 2 Bluetooth speaker if you want to use TWS function.
2. Turn on one speaker, connect the speaker via Bluetooth to your device. You should see “EDS-8000” in the list over Bluetooth devices.
3. Turn on the second speaker, press the M(TWS)button and hold it for 3 seconds. You will hear a tone sound, the devices are connected in TWS mode. You can now enjoy True Wireless Stereo (TWS)* for Stereo Audio Experience
4. To disconnect the speaker from TWS, press and hold the TWS button on the first speaker.
NOTE: You will hear a tone sound, the devices are disconnected from TWS mode. To connect TWS again repeat the steps above.

TF MODE


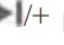

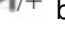
The Wireless speaker allows you to enjoy your favorite audio played from external storage devices, such as TF cards. To use do so, follow these steps:

1. Insert the TF card into the TF card slot.
2. Press the “Play/Pause” button to start or stop playback. Briefly press the /- or /+ button to skip to the previous or next song. Press and hold the /- or /+ button to decrease or increase the volume.

NOTE: When a TF card is inserted into the TF card slot, the unit will automatically switch to TF mode and begin playing Mp3 audio files from the inserted TF card. You can also enter TF mode by pressing the “MODE” button to cycle through modes.

USB MODE

The Wireless speaker allows you to enjoy your favorite audio played from external storage devices, such as USB flash drives. To use do so, follow these steps:





1. Insert the USB into the USB port.
2. Press the “Play/Pause” button to start or stop playback. Briefly press the /- or /+ button to skip to the previous or next song. Press and hold the /- or /+ button to decrease or increase the volume.

NOTE: When a USB flash drive is inserted into the USB port, the unit will automatically switch to USB mode and begin playing Mp3 audio files from the inserted USB flash drive. You can also enter USB mode by pressing the “MODE” button to cycle through modes.

FM RADIO

The Wireless speaker allows you to enjoy your favorite local FM radio stations. To use do so, follow these steps:

1. Press the MODE button to change to FM radio mode.
2. Press the “Play/Pause” button to automatically search for available FM channels.

3. Once the scan is complete, you can use the /- or /+ button to search the previous or next stations. Press and hold the /- or /+ button to decrease or increase the volume.
- NOTE:** During the station scan, the Bluetooth speakers will pre-record all found stations into memory. The scan procedure will take several minutes to complete and should not be interrupted.

BATTERY

1. When in low power mode that requires charging, speaker volume will automatically fall to about 70% of the main volume and low battery icon will appear on the LED display.
2. Use DC 5V adaptor for charging, the charging indicator light will turn on when the product is being charged.
3. Upon reaching a full charge, the charging indicator light turns off.

NOTE: If the speaker is not used for a prolonged period of time, charge speaker more than 12 hours; otherwise, it will cause damage to the battery.

SPECIFICATION

Speakers	8" x 1
Wireless Source	Bluetooth®, V5.0+EDR
Feature Function	TWS
PMPO Output	2000W
Media Inputs	USB Port, TF Card Slot
Radio Tuner	FM
	Multi-Color LED
Power Source	1500mAh Rechargeable Battery
Battery Type	Built-in Lithium Rechargeable
Play Time	Up to 2 Hours. (Play time will vary depending on the volume level and type of media played)
Accessories Included	User Manual, Wired Microphone, and USB Charging Cable

FCC NOTICE

- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including that may cause undesired operation.
- **NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which

can be interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION ON MODIFICATIONS


- Any changes or modifications not expressly approved by the grantee of this device may void the authority granted by the FCC to operate the equipment
- This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body..

SUPPORT



If you have problems with your device, please consult the instructions in this manual. Please also visit us on the web at www.naxa.com to get up-to-the-minute news, alerts, and documentation for your device. For additional assistance, please contact Naxa Technical Support.

- Naxa Technical Support
- 2320 East 49th St.
- Vernon, CA 90058
- (866) 411-6292
- <http://www.naxa.com/supportcenter/>

Documents / Resources

	<p>naxa EDS-8000 Portable 8 Inch Bluetooth Party Speaker with Multi-Color Round Running Lights [pdf] Instruction Manual SXX-EDS8000, SXXEDS8000, eds8000, EDS-8000, Portable 8 Inch Bluetooth Party Speaker with Multi-Color Round Running Lights, EDS-8000 Portable 8 Inch Bluetooth Party Speaker with Multi-Color Round Running Lights</p>
---	--

References

-  [Naxa Electronics – Naxa Electronics](#)
-  [Support Center – Naxa Electronics](#)