



NBCP PS5 Handle Direct Insertion Back Clip Button User Manual

[Home](#) » [NBCP](#) » NBCP PS5 Handle Direct Insertion Back Clip Button User Manual 

NBCP PS5 Handle Direct Insertion Back Clip Button



Contents

- 1 Installation Instruction
- 2 Product Brief
- 3 Product Photo
- 4 Product Feature
- 5 PS5 Function
- 6 PC WINDOWS Function
- 7 Product Usage
- 8 Mapping Function
- 9 Combination key mapping function
- 10 Turbo Continuous Shooting Function
- 11 Product Upgrade
- 12 Documents / Resources
 - 12.1 References

Installation Instruction

- Fastened the Back Paddles to the button next to the earphone jack



- Buckle up the front flat cables



TYPE C

Connect the TYPE-C cable one end to the Back Paddles and the other end to the PS5 Console as shown in the picture on the right

Product Brief

This product is suitable for PS5 Dual Sense original controller, with Turbo and Macro to extend the original controller more features.

Product Photo



Product Feature

- Standard Buttons: M1, M2, M3, M4, ON, Turbo, Macro, Clear, total 8 buttons.
- It support TYPE-C USB data cable connection.
- It support PS5 Dual Sense original controller.
- With RGB LED color indicator, can indicate different working states.
- The product can be upgraded online by PC USB, can be optimized by firmware upgrade.

PS5 Function

Install the back paddle on the PS5 Dual Sense controller, connect the back paddle with PS5 console through the data cable, then you can control all PS5 games running on the console

PC WINDOWS Function

Install the back paddle on the PS5 Dual Sense controller, connect the back paddle with PC WINDOWS through the data cable, then you can use PS5 Dual Sense control all games running on the PC. The supported systems are WINDOWS systems which supported by PS5 Dual Sense controller)

Product Usage

- The back paddle uses USB wired mode to connect the PS5 console, please enable the USB connection function of the PS5 console before use, setting method:
(Settings — Peripherals — Controller (general) — Connection method — Use USB wired connection).
- Insert the TYPE C male head of the back paddle into the TYPE C charging port of the PS5 controller, and then fasten the back paddle into the plastic shell of the headphone hole of the PS5 controller, as shown in the following picture after assembly.
- Connect one end of the TYPE C data cable to the back paddle TYPE C seat, and connect the other end to the PS5 console.
- If the back paddle is successfully connected, the indicator automatically turns blue, and the back paddle can be used normally.
- If the user presses the ON key on the back paddle again, the blue light goes out. At this time, the back paddle

does not work, and the PS5 controller is used normally.

Remark: After the connection is complete, if the back paddle indicator blinks, the back paddle needs to be powered on again until the indicator is blue.



Mapping Function

- Press the Macro button, the green light blinks, and you enter mapping setup mode.
- When a user presses a function key on the controller and then presses a back paddle key, the function key is mapped to the back key.
- Press the Macro button again to exit mapping setup mode. At this time, the blue light is on, and the product can work normally.
- When the user enters mapping mode by pressing the Macro button, multiple back key mappings can be performed. For example, press the X, then press the M1; continue to press the L2, then press the M2. After the mapping is complete, press the Macro to exit the mapping setup mode. In this time, M1 corresponds to the X key and M2 corresponds to the L2 key.
- Clear mapping and combination keys: Press and hold the Macro key for about 3 seconds, the green light changes from slow blinking to fast blinking, and then the blue light is on, which means that all mapping and combination key Settings are cleared.

Remark: All buttons of the controller can be mapped except the MIC On/Off button.

Combination key mapping function

- Press the Macro button, the green light blinks, and you enter mapping setup mode.
- The user alternately presses multiple function keys on the controller and then presses a back paddle key.
- Press the Macro button again to exit mapping setup mode. At this time, the blue light is on. When a user presses this back key, it is equivalent to pressing multiple controller function keys at the same time.
- Clear mapping and combination keys: Press and hold the Macro key for about 3 seconds, the green light changes from slow blinking to fast blinking, and then the blue light is on, which means that all mapping and combination key Settings are cleared.

Remark: All buttons of the controller can be mapped except the MIC On/Off button.


Turbo Continuous Shooting Function

- Press the Turbo button, and the red light blinks to enter the continuous shooting setting mode.
- The user presses one or more function keys (including the back paddle key) on the controller one by one to set these keys to have the continuous shooting function.
- Press the Turbo button again to exit the continuous shooting setting mode. At this time, the blue light is on. The key set by the user has the function of continuous shooting.
- The keys which can be set Turbo as follows:
Controller keys ↑, ↓, ←, →, X, ○, □, △ L1, L2, L3, R1, R2, R3.
Back paddle keys M1, M2, M3, M4.
- **Clear the Continuous Shooting function:** Press and hold the Turbo key for about 3 seconds, if the red light changes from slow blinking to fast blinking, and then the blue light is on, it indicates that all continuous shooting Settings are cleared.
- Hold down the Clear key for 3 seconds to clear all Macro and Turbo Settings at the same time.

 
Product Upgrade

* From the official website (<https://www.xiazai7.com>) to download the latest software and upgrade the firmware upgrade tool, and extract it to a computer disks and then unpack it.


* Hold down the ON button of the back paddle, insert the back paddle into the USB port of the WINDOWES PC through the data cable, and then release the ON button.

* Open the upgrade folder  index.html with your Microsoft Edge browser, follow these steps: Hold down the back paddle ON button, connect it to the USB port of the Computer through the USB cable, and the indicator light shows cyan.

P5 Back Button Update

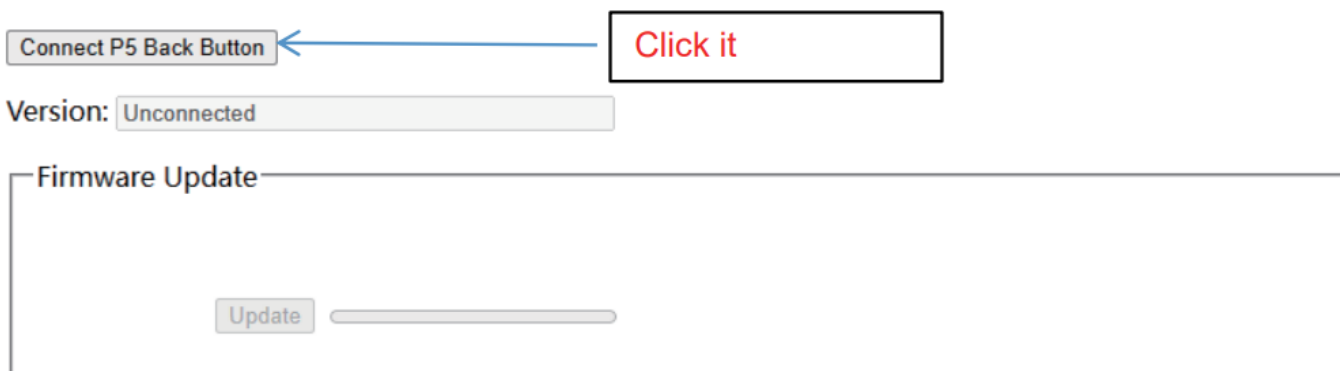


P5 Back Button Update

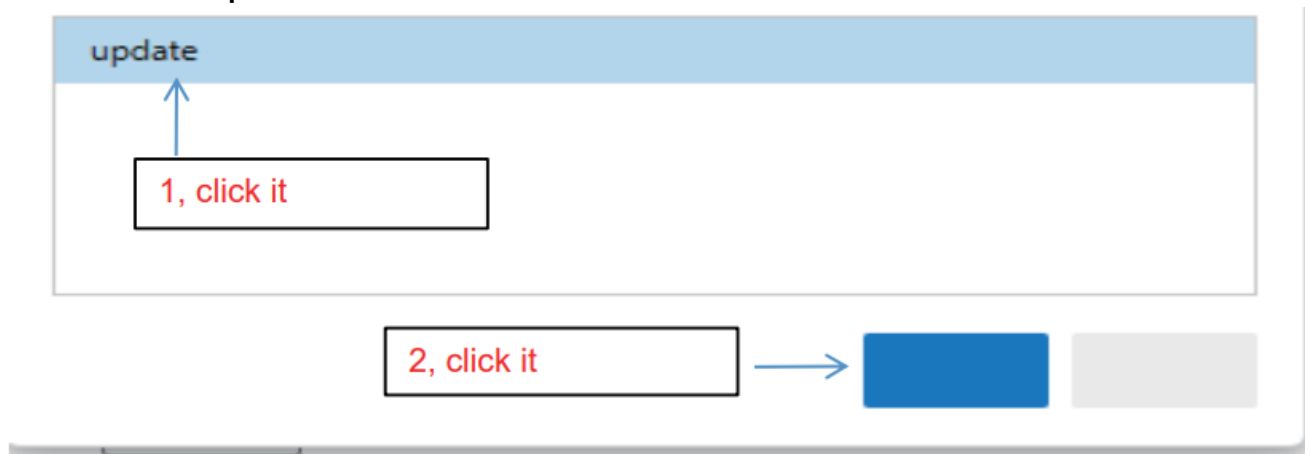 


(2)

 P5 Back Button Update

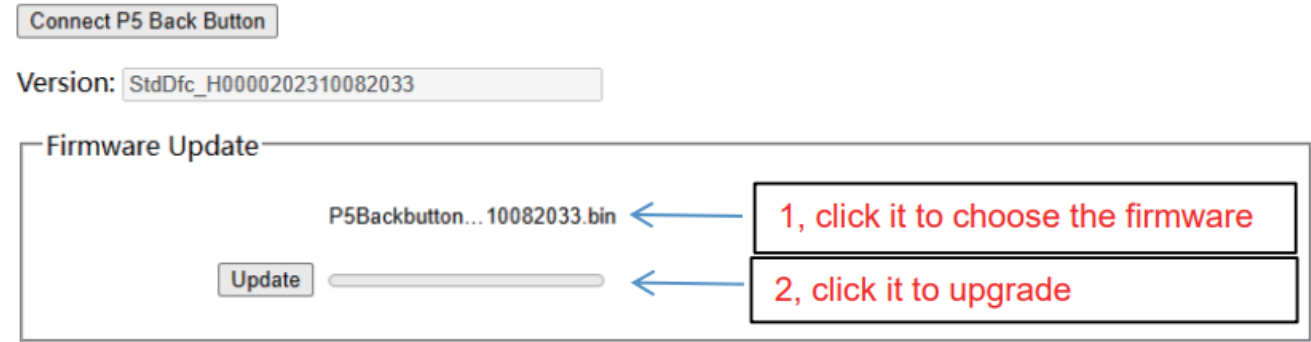

P5 Back Button Update

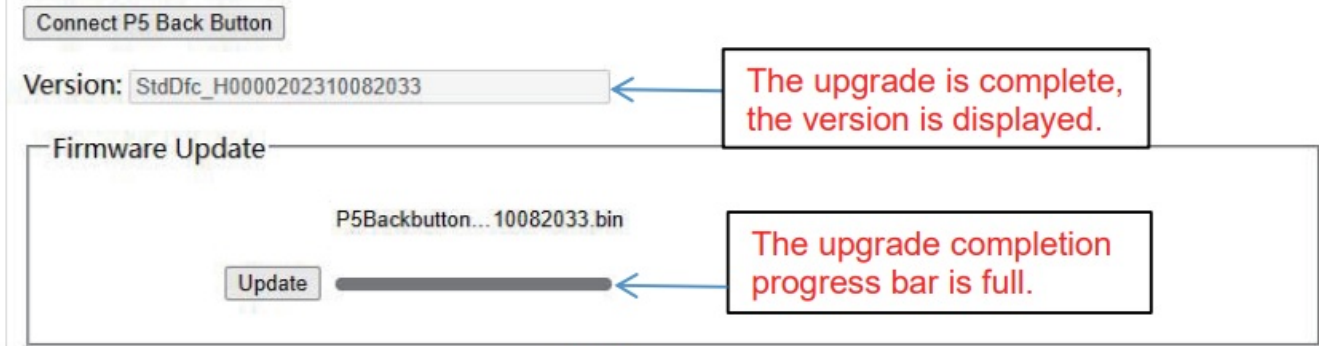 

(图4)

Documents / Resources

	NBCP PS5 Handle Direct Insertion Back Clip Button [pdf] User Manual PS5 Handle Direct Insertion Back Clip Button, PS5, Handle Direct Insertion Back Clip Button, Direct Insertion Back Clip Button, Insertion Back Clip Button, Clip Button
--	--

References

- [Forum - Mobile - Powered by Discuz!](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.