

# neat NFD1 Bar Pro Pad Zoom Rooms System User Manual

Home » neat » neat NFD1 Bar Pro Pad Zoom Rooms System User Manual





Neat Bar Pro packs a stack of tech into a simple and elegant slimline device.

It's capable of driving three large screens, has two extreme resolution cameras, a multiple microphone array, and three full-range speakers.

Ideal for delivering superior-quality audio, video, and other unique capabilities to your huddle, focus, the meeting, and conference rooms, Neat Bar Pro comes with a dedicated Neat Pad controller and integrated environmental sensors.

### **Contents**

- 1 Simple setup
- 2 Neat Bar Pro
- 3 Neat Pad
- 4 Mounting & releasing
- 5 Size & weight
- 6 Setup & connectivity
- 7 Documents /

Resources

**8 Related Posts** 

# Simple setup

All you need is in the box.

including mounts. cables and clear instructions. So it's easy for anyone to install and set up, above or below one. two or three screens.









### Screen mount







# Table stand





### **Neat Bar Pro**

Neat Bar comes with everything you need to get started, including cables. wall mount. screen mount and table stand.



## In the box


Neat Bar Pro: Video conferencing device

HDMI cable: 6.5ft (2m) Ethernet cable: 9.8ft (3m) Power cord: 9.8ft (3m)

Mount adapter. wall mount. screen mount and table stand

4x M8 screw (0.94 in / 24 mm) for VESA mount 4x M6 screw (0.94 in / 24 mm) for VESA mount 2 x spacer (to secure parallel TV mount) 15 mm hex key for the screen mount 1×2 mm hex key for the mount adapter

2 additional screw bags for dual or triple screen setup 4x M8 screw (0.94 in / 24 mm) for VESA mount 2 x 4x M6 screw (0.94 in / 24 mm) for VESA mount 4x spacer (to secure alignment of all screens)

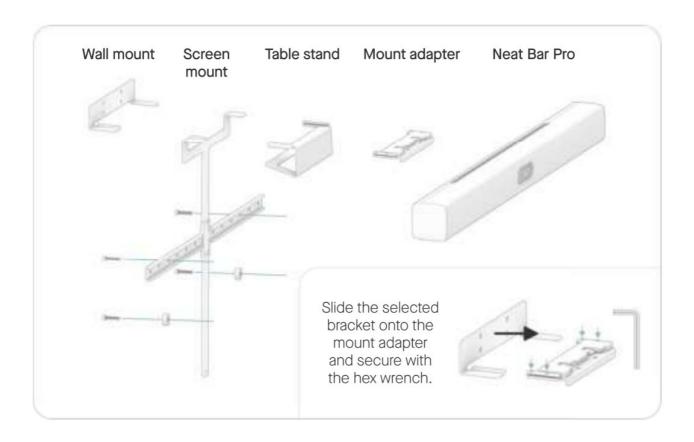

Screws for mounting to the wall are not included. Mounting on a wall should only be performed by qualified personnel in line with applicable facility and state regulations. The wall and the mounting equipment must safely withstand the load of the product.

### **Neat Pad**

Neat Pad works as a Controller for Neat Bar and can also be configured as a Scheduling Display for the Meeting Room. It comes with everything you need to get started, including cables and mounting options.



#### In the box

Neat Pad: 8-inch touch screen


2 x Ethernet cable: 9.8ft (3m) + 16.4ft (5m)

PoE power adapter

Mount adapter, side mount, and wall mount

4M4 screw (0.30 in / 7.5 mm) for the wall mod 3M4 screw (0.19 in / 4.7 mm) for the side mod 12.5 mm hex key for the adapters

1×2 mm hex key to secure Neat Pad to the w

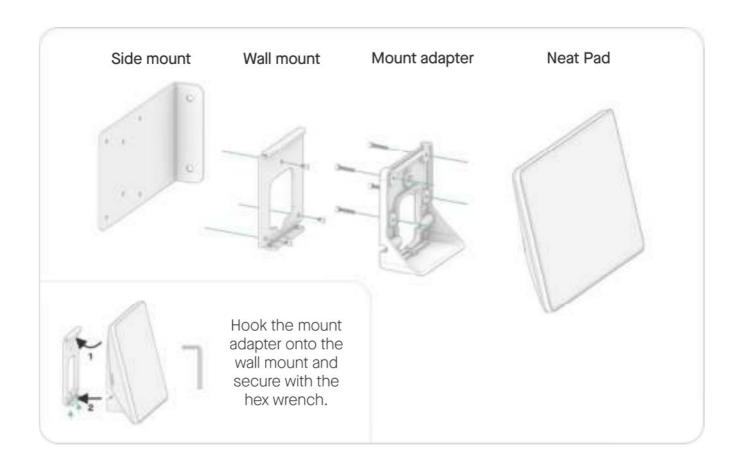


Screws for mounting to the wall are not included. Mounting on a wall should only be performed by qualified personnel in line with applicable facility and state regulations. The wall and the mounting equipment must safely withstand the load of the product.

### Mounting & releasing

### Mounting

Slide Neat Bar onto the selected mounting option (1). When fully inserted tilt Neat Bar back to horizontal and check if it is secure by carefully pulling it towards you.

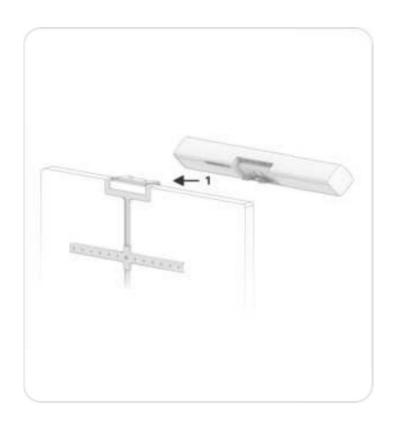

## Releasing


Tilt Neat Bar fully forward (1). Pull towards you (2) until the unit stops and the red release lever appears (3). Push the release lever up and pull Neat Bar gently off the mount adapter.



# Size & weight


### **Neat Bar Pro**

Width: 35.04 in (890 mm)	Depth: 3.15 in (80 mm)
Height: 3.15 in (80 mm)	Weight: 6.83 pounds (3.1 kg)

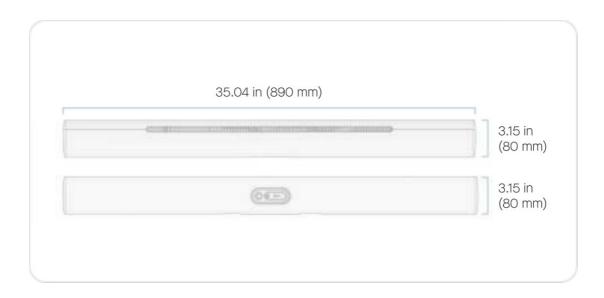

### **Neat Pad**

Width: 7.8 in (198 mm)	Depth: 5 in (127 mm)
Height: 1.7 in (42 mm)	Weight: 1.15 pounds (520 g)

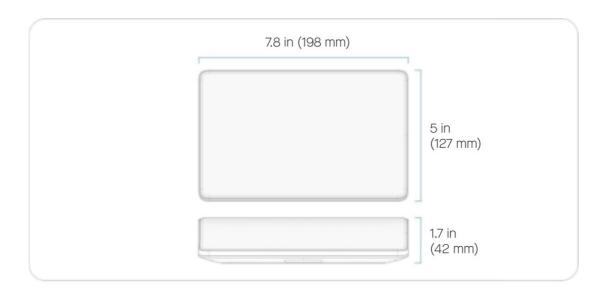


# **Setup & connectivity**

### Setup

Use the provided cables to set up Neat Bar. Connect the cables according to the illustration. Cables marked - are included. Cables marked - - are optional and not required for basic use of the system.

## Requirements for a complete setup

Display Internet connection Video service

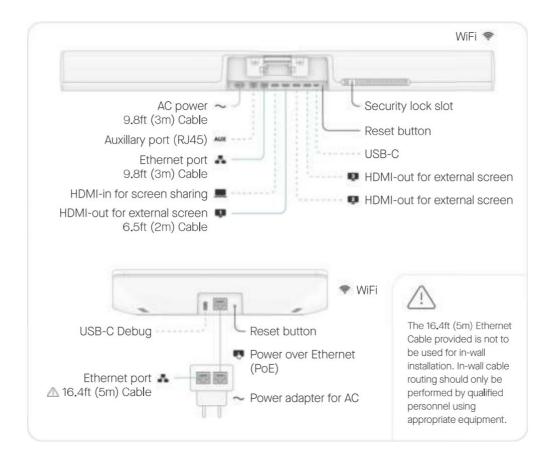

#### **Environmental Requirements**

Ambient operating temperature: 32° to 95° F (0°- 35° C)

Storage temperature:  $5^{\circ} - 149^{\circ} \text{ F } (-15^{\circ} - 65^{\circ} \text{ C})$ 

Relative humidity: 20% to 80%

Network standby: <8W (after 20 minutes)

### **Additional Product Information**

https://neat.no/bar-pro

Neat Bar Pro and Neat Pad - User Manual rev02

### **Documents / Resources**



neat NFD1 Bar Pro Pad Zoom Rooms System [pdf] User Manual

NFD1, 2AUS4-NFD1, 2AUS4NFD1, Bar Pro Pad Zoom Rooms System, Pad Zoom Rooms System, Rooms System

Manuals+,