



NEBULA D0724 Projector Stand User Guide

[Home](#) » [NEBULA](#) » NEBULA D0724 Projector Stand User Guide

NEBULA D0724 Projector Stand User Guide

NEBULA



Quick Start Guide


Contents [[hide](#)]

- [1 Wall/Ceiling-Mounted Extension Stand](#)
- [2 What is Included](#)
- [3 At a Glance](#)
- [4 Using the Wall/Ceiling-Mounted Stand](#)
- [5 Safety Instructions](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)


Wall/Ceiling-Mounted Extension Stand

Thank you for choosing the NEBULA projector stand. Please read the Quick Start Guide before use to avoid any accidental damage.

What is Included

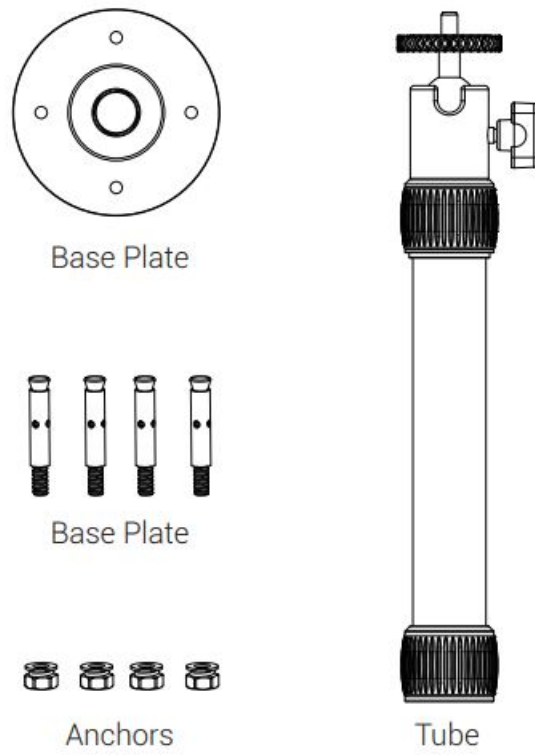

At a Glance

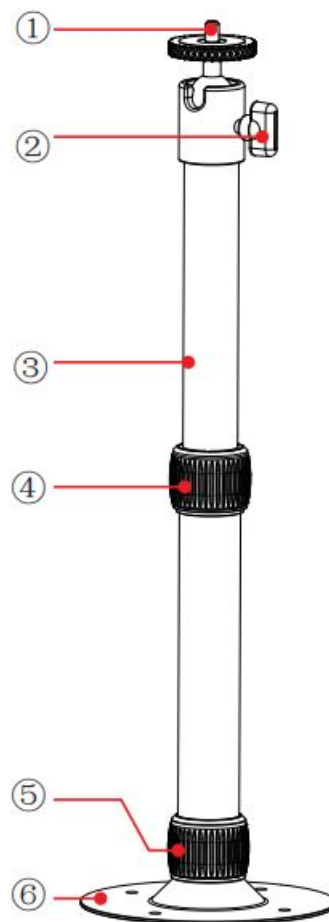


1. 1/4 Screw-Type Mounting Head
2. Locking Knob

3. Extension Tube
4. Twist Lock
5. Assembly Knob
6. Base Plate

Using the Wall/Ceiling-Mounted Stand

1. Detach the Base Plate

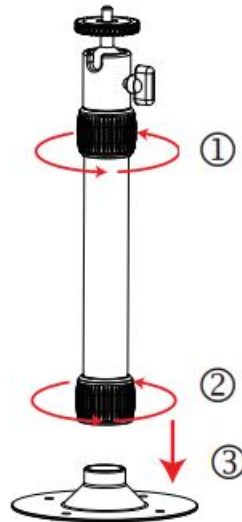


1. Rotate the knob from left to right to extend or contract the tube.
2. Loosen the knob to detach the base plate.
3. The base plate is detached.

2. Mount Your Projector on the Stand Before mounting the stand:


- Determine how you want to mount the stand: from the wall or the ceiling.
- For safe installation, make sure mount is positioned on a load-bearing wall or ceiling that can bear the load of the mounted device.

To mount the stand on the wall or ceiling:


1. Place the base plate against the wall or ceiling. Mark the screw holes with a pencil.

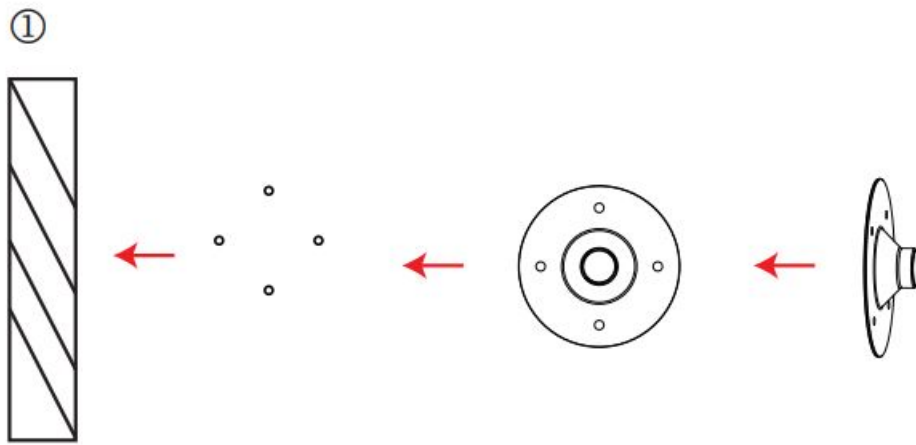

2. Drill holes into the wall or ceiling using an M6 drill bit and then insert anchors into the holes. Anchors are not needed for wooden walls.

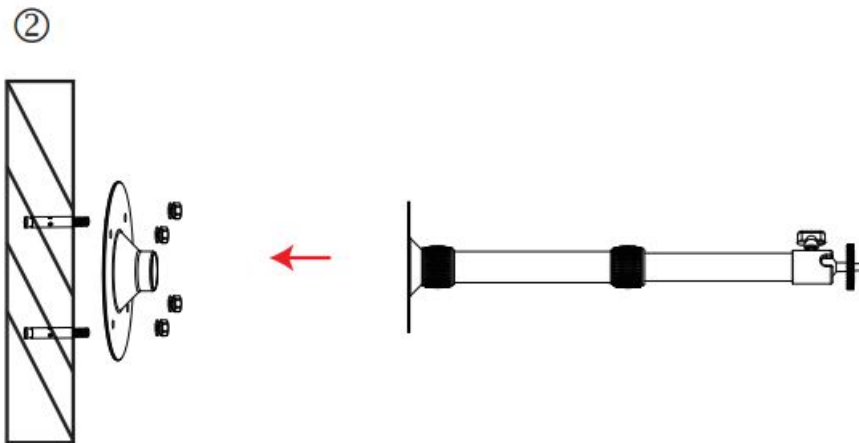


3. Fix the base plate onto the load-bearing wall or ceiling.

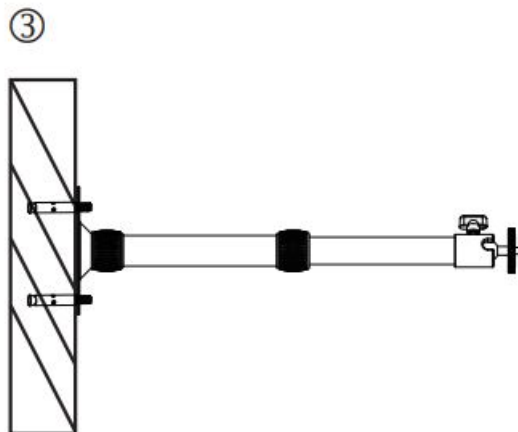

4. Screw the stand into the base plate until it locks in place, then mount your projector on the stand with the mounting screws.

④

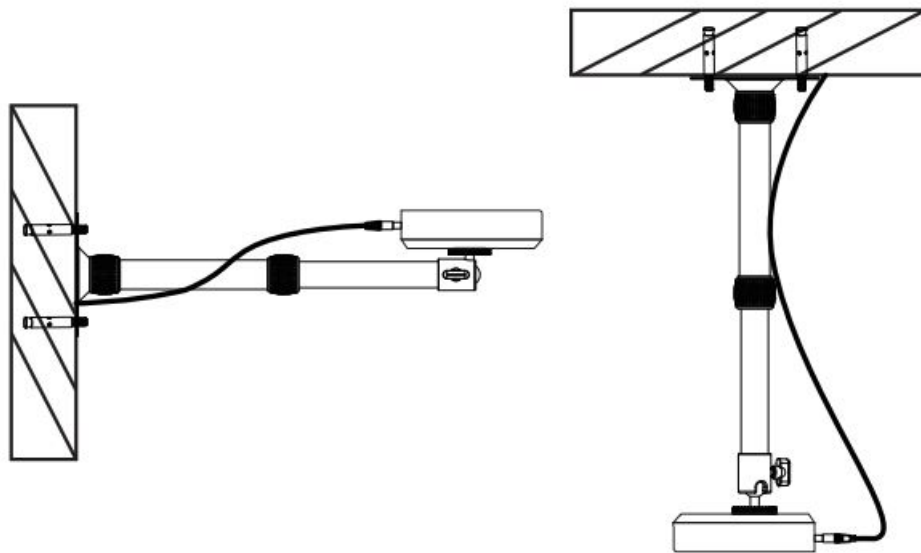

Safety Instructions

1. Open the stand carefully to avoid damage to the components.
2. Ensure all screws are well-tightened prior to use.
3. Do not use the stand under unstable conditions.
4. Remove the stand when moving to another place.
5. Do not add oil to any part of the stand and ball head.
6. Do not leave the stand and ball head inside a vehicle exposed to high temperatures.
7. Do not use this product when there is lightning or near high-voltage wires.
8. Avoid overload, otherwise the product may become damaged.
9. Remember to clean the product after use, especially in humid and sandy environments.
10. Clean the product with a soft cloth and detergent, then wipe it up and keep it in good condition.

NEBULA

For FAQs and more information, please visit: www.SeeNebula.com

✉ support@SeeNebula.com

☎ +1 (800) 988 7973 (US) Mon-Fri 9:00 – 17:00 (PT)

© Anker Innovations Limited. All rights reserved. NEBULA and the NEBULA logo are trademarks of Anker Innovations Limited, registered in the United States and other countries. Model: D0724

51005002291 V01

Documents / Resources

	<p>NEBULA D0724 Projector Stand [pdf] User Guide D0724, Projector Stand, Mini Wall or Ceiling Projector Mount</p>
--	---

References

- [N Nebula | Smart Projectors.](#)