



# NEC ME Series MultiSync Large Format Installation Guide

[Home](#) » [NEC](#) » NEC ME Series MultiSync Large Format Installation Guide 

## Contents

- 1 NEC ME Series MultiSync Large Format Installation Guide**
  - 1.1 Product Description**
  - 1.2 Rotation**
  - 1.3 Ventilation Recommendations**
  - 1.4 Display Dimensions**
    - 1.4.1 ME431**
    - 1.4.2 ME501**
    - 1.4.3 ME551**
    - 1.4.4 ME651**
  - 1.5 Installing and Removing the Optional Table Top Stand**
  - 1.6 Table Top Stand Dimensions (ST-401 pictured below)**
  - 1.7 Table Top Stand Dimensions (ST-65M)**
  - 1.8 Optional Large Wall Mount (WMK-6598)**
  - 1.9 Optional Speaker Dimensions (SP-RM3a)**
  - 1.10 Intel® Smart Display Module Integration**
  - 1.11 Compute Module Integration**
  - 1.12 Input Panel**
  - 1.13 ASCII Common Commands**
  - 1.14 PD Comms Tool**
  - 1.15 Cable Connection**
  - 1.16 Browser Control**
- 2 Documents / Resources**
  - 2.1 References**
- 3 Related Posts**

## NEC ME Series MultiSync Large Format Installation Guide





## Product Description

Type: LCD Display  
Resolution: 3840 x 2160  
Aspect Ratio: 16:9  
EMI: Class B

	Dimensions (without stand)	Weight (without stand)	Power Consumption (Typical) (Max Brightness) (Absolute Max*)	BTU's (Typical) (Max Brightness) (Absolute Max*)
<b>ME431</b>	38.3 x 22.1 x 2.5 in. 973.0 x 561.2 x 62.6mm	13.9kg / 30.6lbs.	80W 95W 175W	272.99 BTU/hr 324.18 BTU/hr 597.17 BTU/hr
<b>ME501</b>	44.4 x 25.6 x 2.5 in. 1128.4 x 649.0 x 62.6mm	17.3kg / 38.1lbs.	85W 100W 210W	290.06 BTU/hr 341.24 BTU/hr 716.61 BTU/hr
<b>ME551</b>	48.9 x 28.1 x 2.5 in. 1241.8 x 712.6 x 62.6mm	19.8kg / 43.7lbs.	120W 155W 265W	409.49 BTU/hr 528.92 BTU/hr 904.29 BTU/hr
<b>ME651</b>	57.6 x 33.0 x 2.7 in. 1462.3 x 837.3 x 68.1mm	29.4kg / 64.8lbs.	165W 215W 320W	563.05 BTU/hr 733.67 BTU/hr 1091.97 BTU/hr


**\*Absolute Max refers to when the display is at full brightness with all slots active and volume at 100.**

## NOTES:

- This document is intended to be used as a reference guide to supply useful information for a design or installation. It is not intended to be a step-by step procedure for installation.
- Any ceilings or walls must be strong enough to support the monitor and the installation must be in accordance with any local building codes. All mounts should make secure contact to wood studs.
- Distances are in inches, for millimeters multiply by 25.4. Distances may vary  $\pm 5\%$ .


## Rotation

- If display is to be used in portrait orientation, rotation needs to be **counterclockwise**.

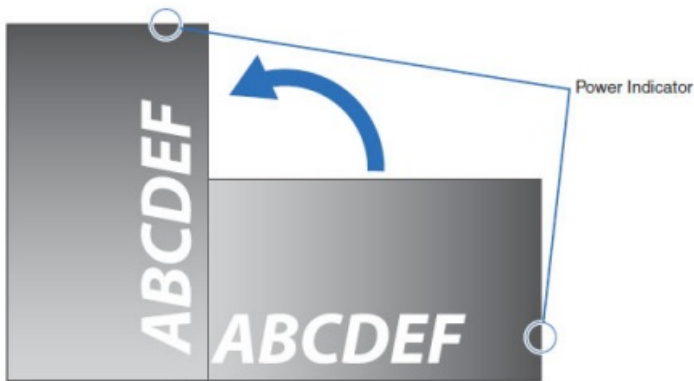

## Ventilation Recommendations

Dimensions below are minimum recommended for proper ventilation.

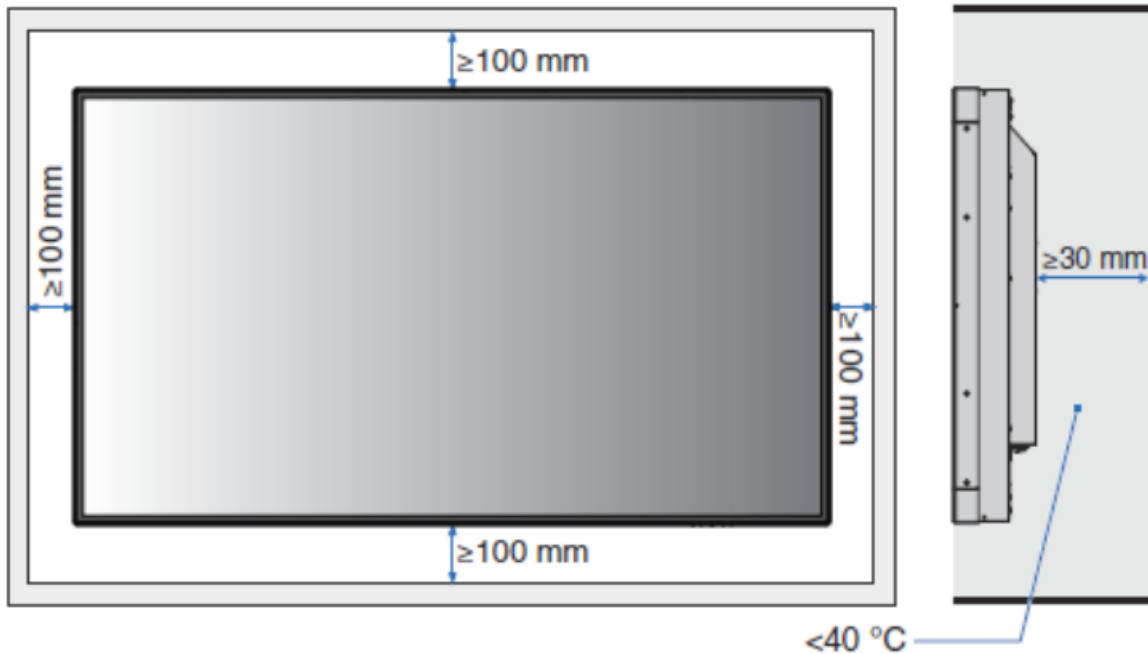



### NOTE:

- The above are recommendations in order to keep your display as cool as possible. If the distances are less than the 100mm, extra ventilation may be necessary. The ventilation space should not be covered or closed off at the front of the opening. If for some reason the opening needs to be covered, other means of ventilation will need to be incorporated into the design. Contact NEC for design review and recommendations.


## Display Dimensions

ME431



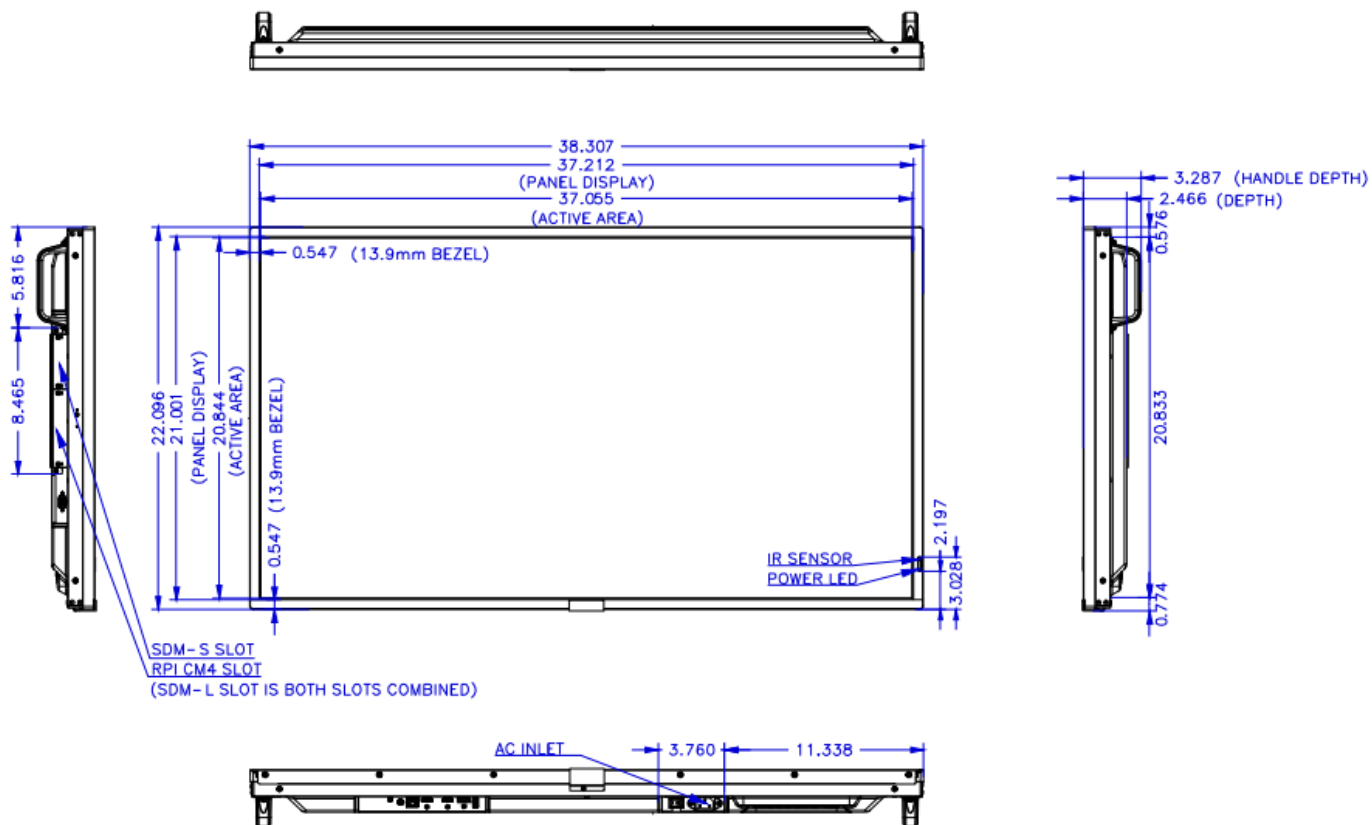


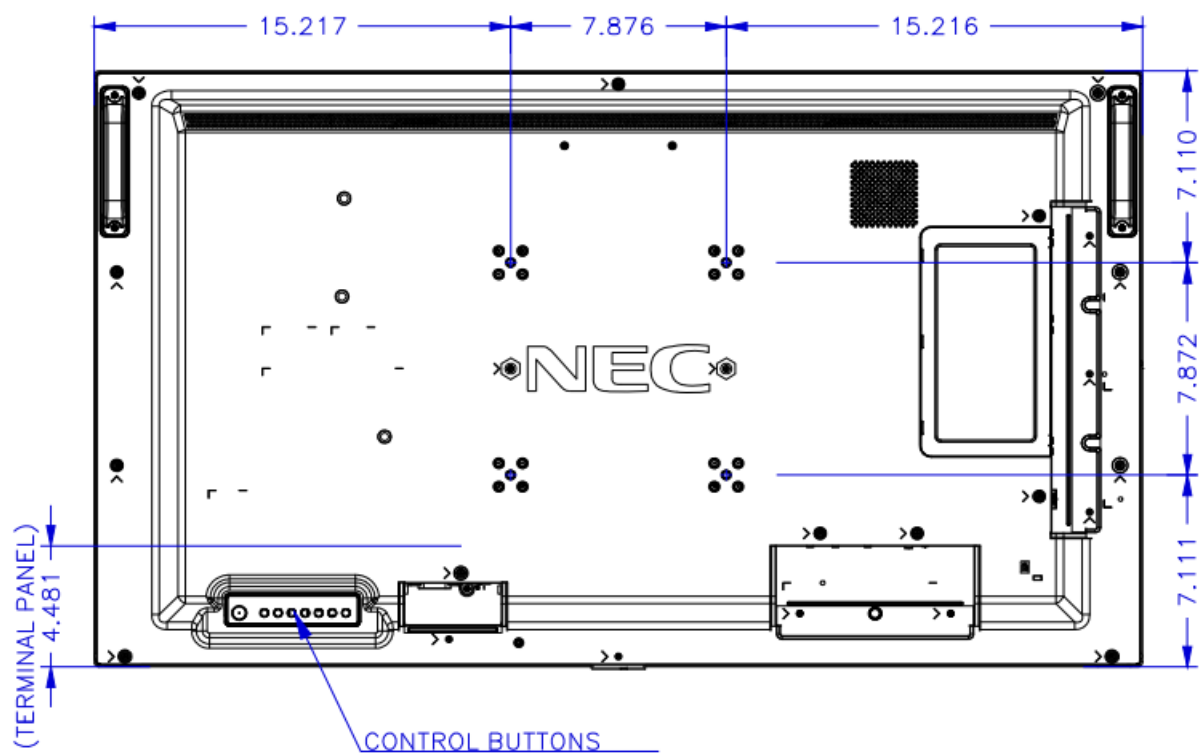


NEC strongly recommends using size M6 screws (10-12mm + the thickness of the bracket and washers in length).


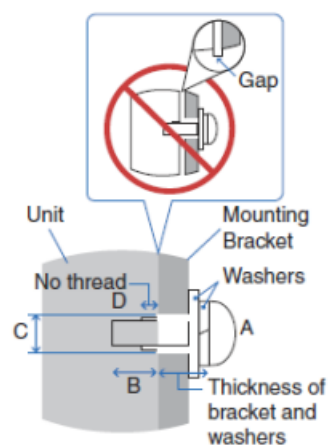


ME501

 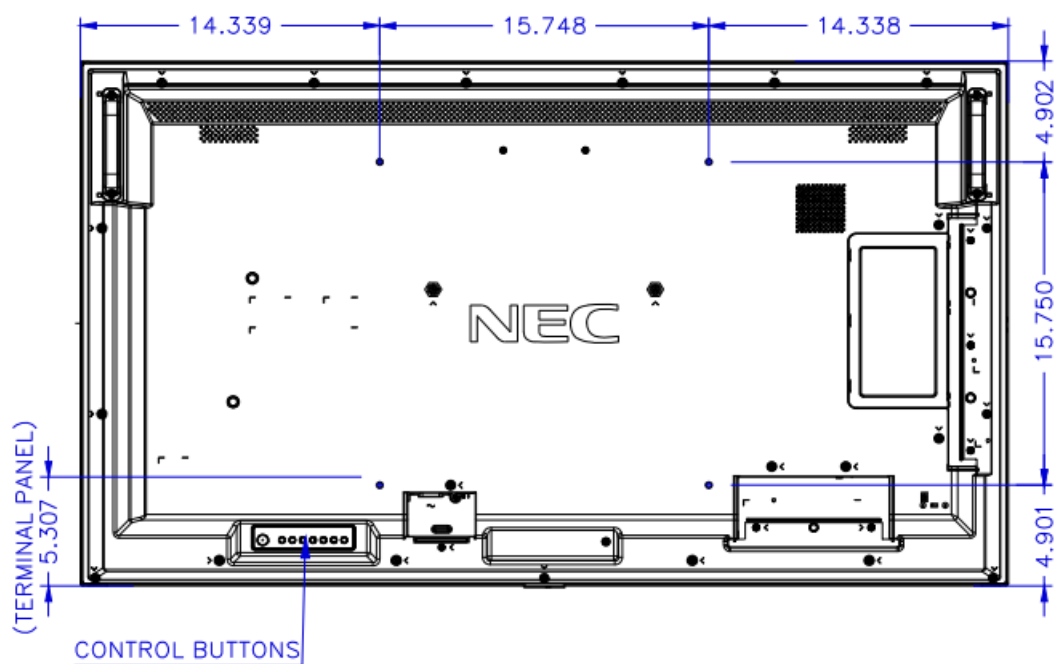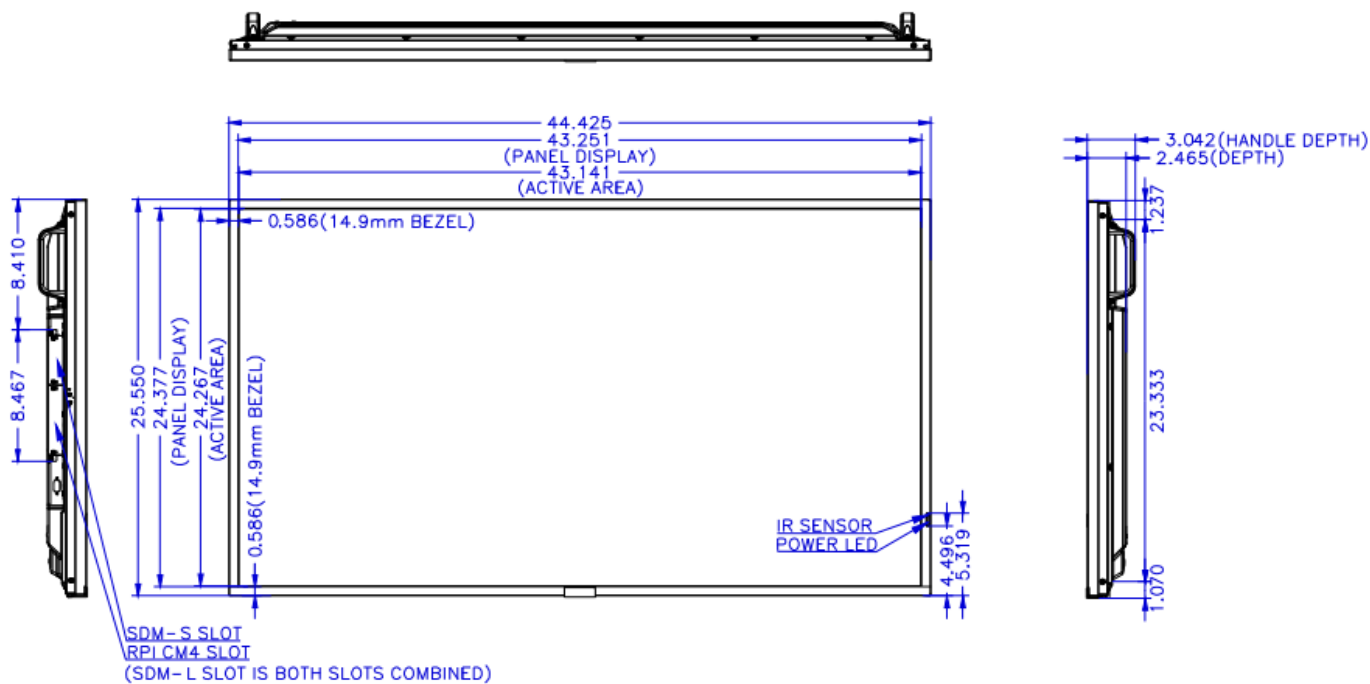



NEC strongly recommends using size M6 screws (10-12mm + the thickness of the bracket and washers in length).

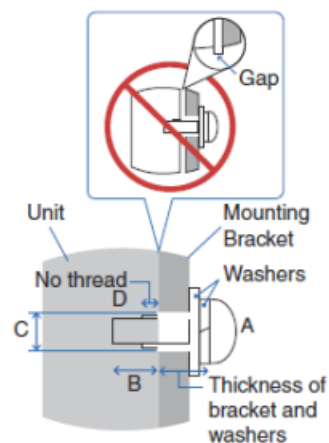

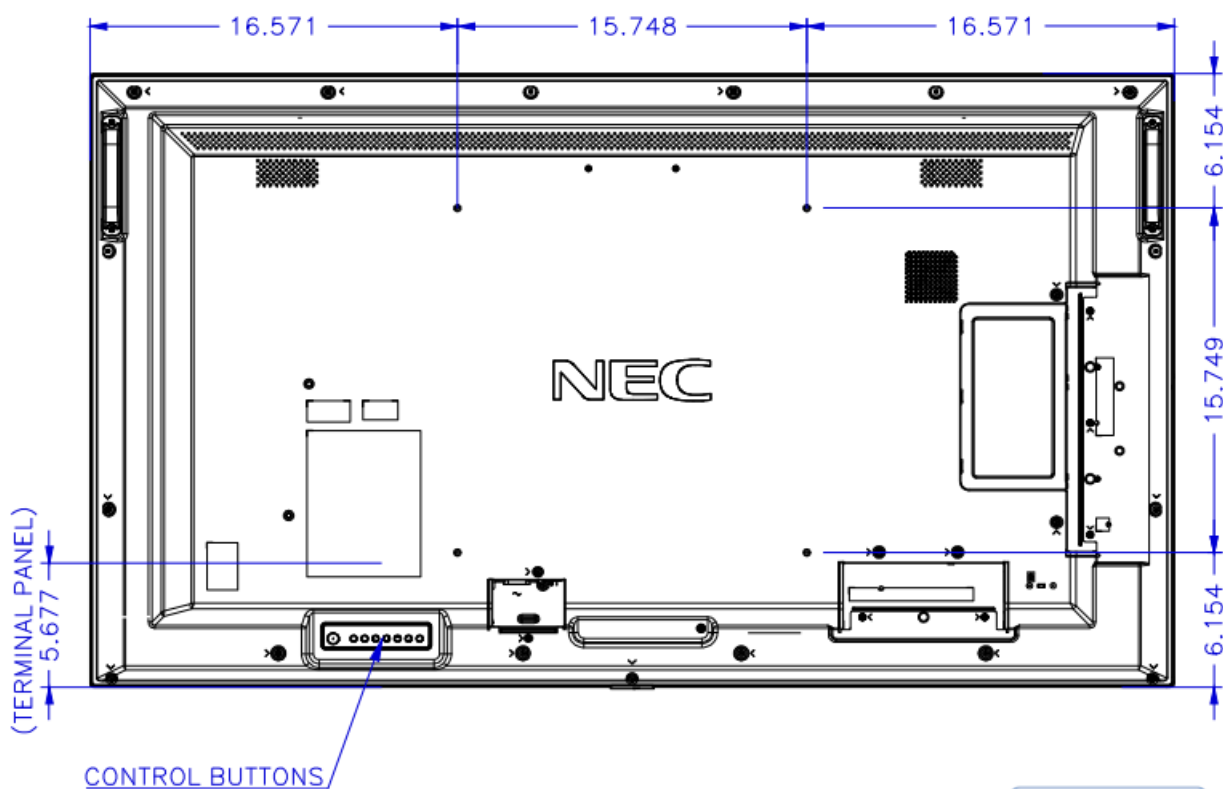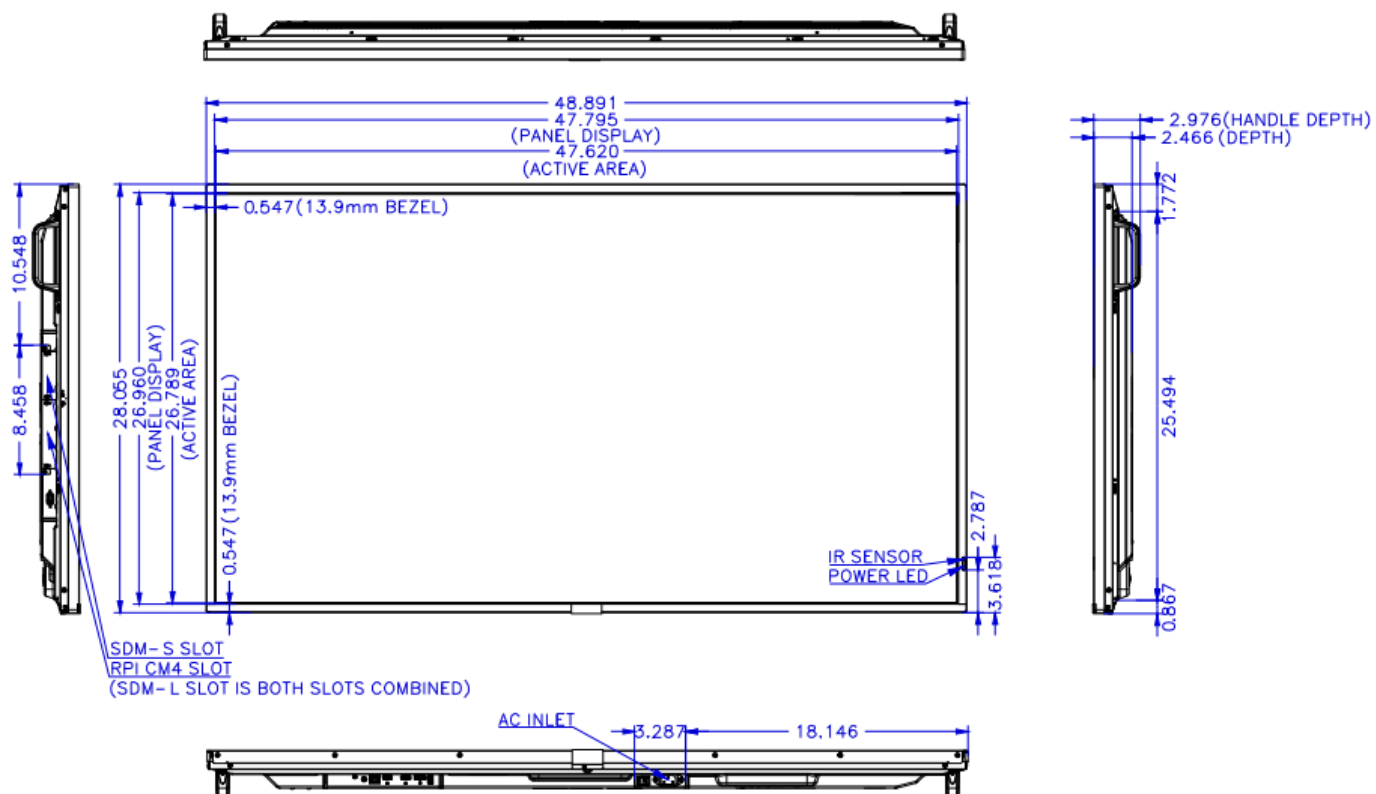


NEC strongly recommends using size M6 screws (10-12mm + the thickness of the bracket and washers in length).

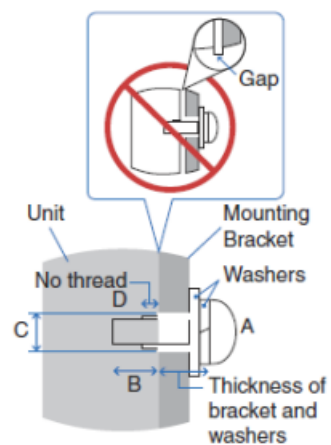


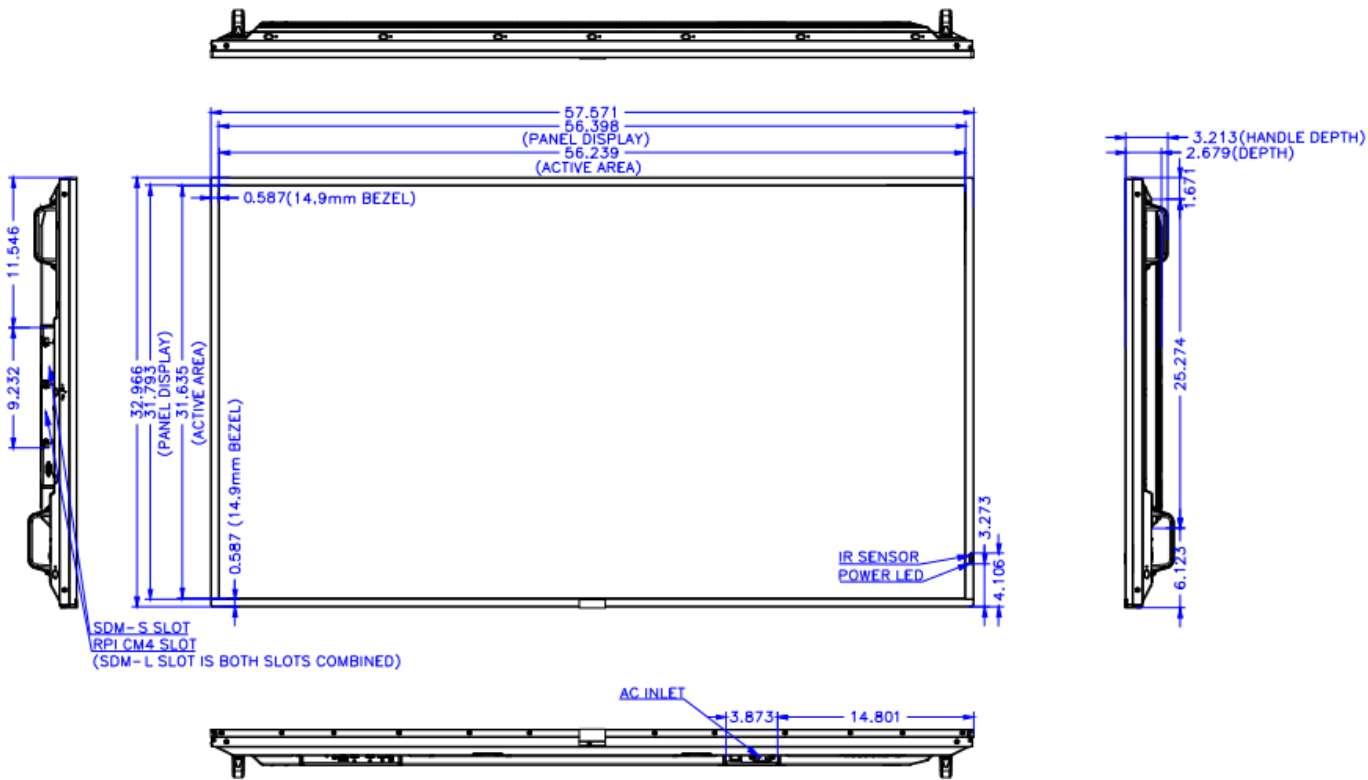



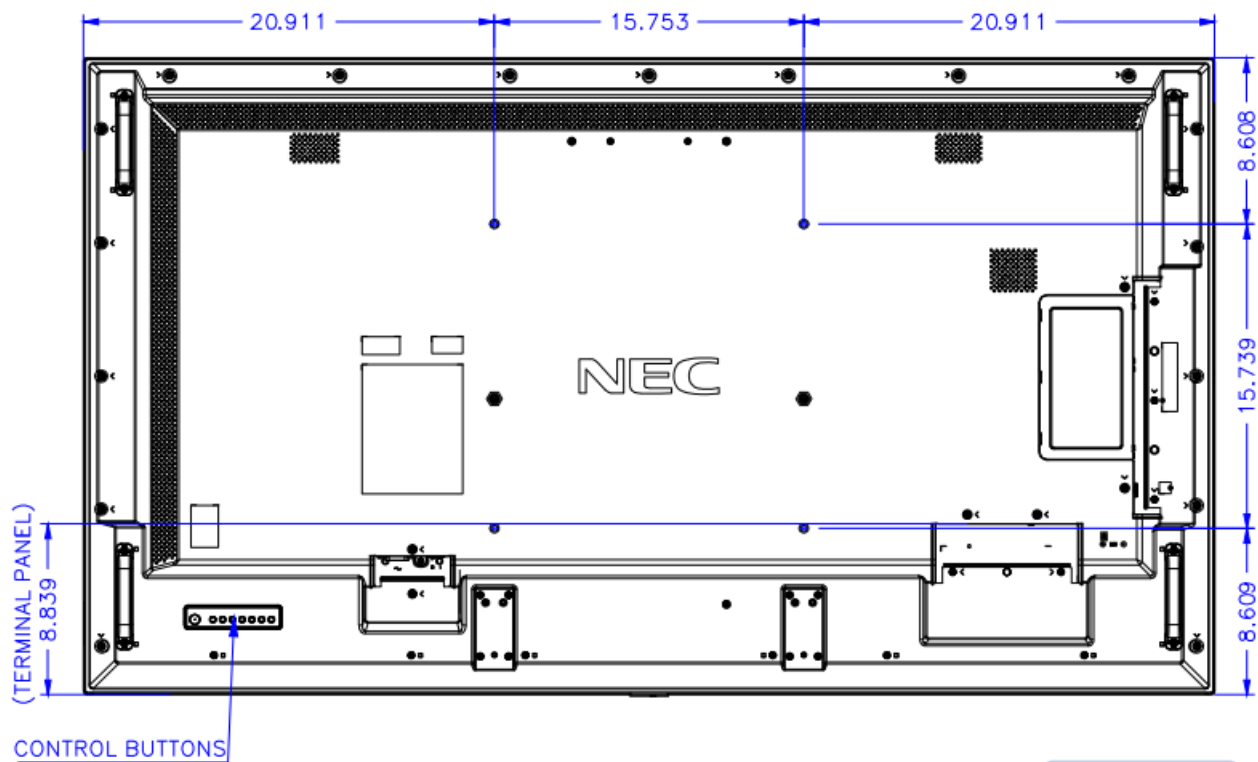

NEC strongly recommends using size M8 screws (16-18mm + the thickness of the bracket and washers in length).

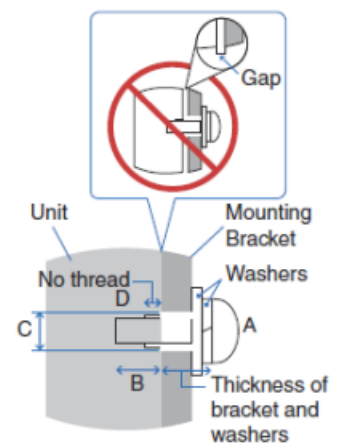


## Installing and Removing the Optional Table Top Stand


- The ME431, M501 and M551 use the ST-401 or ST-43M. The ME651 utilizes the ST-65M
- Only use the screws that are included with the optional stand. The ST-65M will need included stand holders to also be attached

ME431	ST-43M (screws are included)
ME501 ME551	ST-401 or ST-43M (screws are included)
ME651	ST-65M (thumbscrews, screws, and stand holders are included)


## ME651

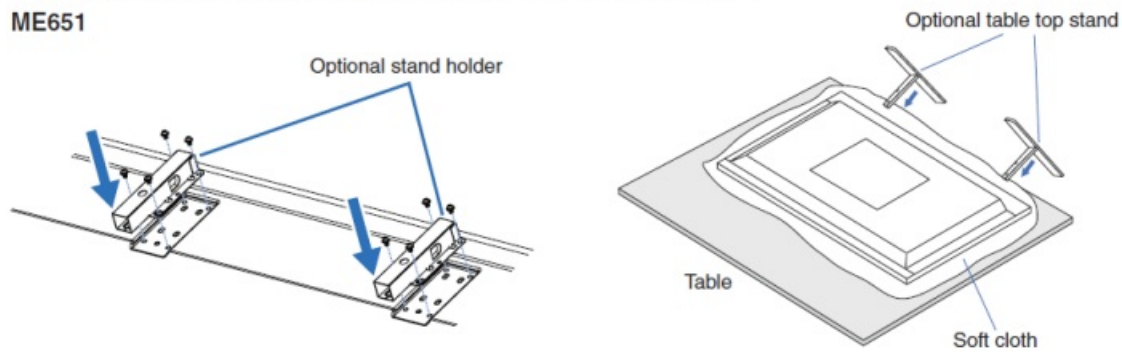

## ME431/ME501/ME551



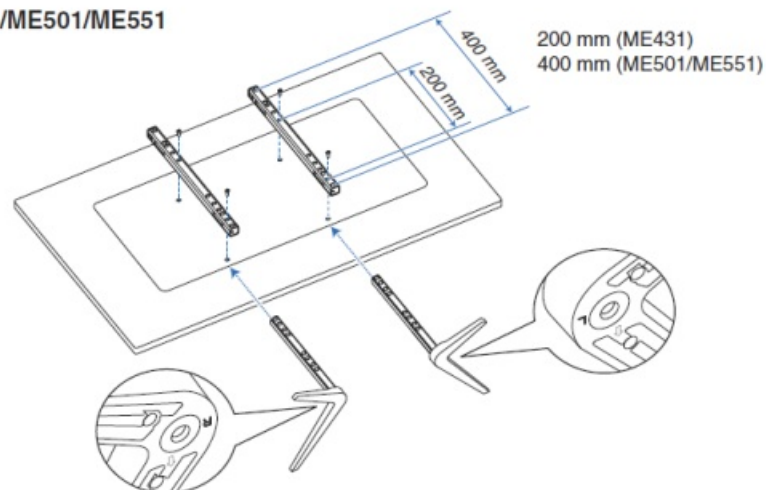


## Table Top Stand Dimensions (ST-401 pictured below)

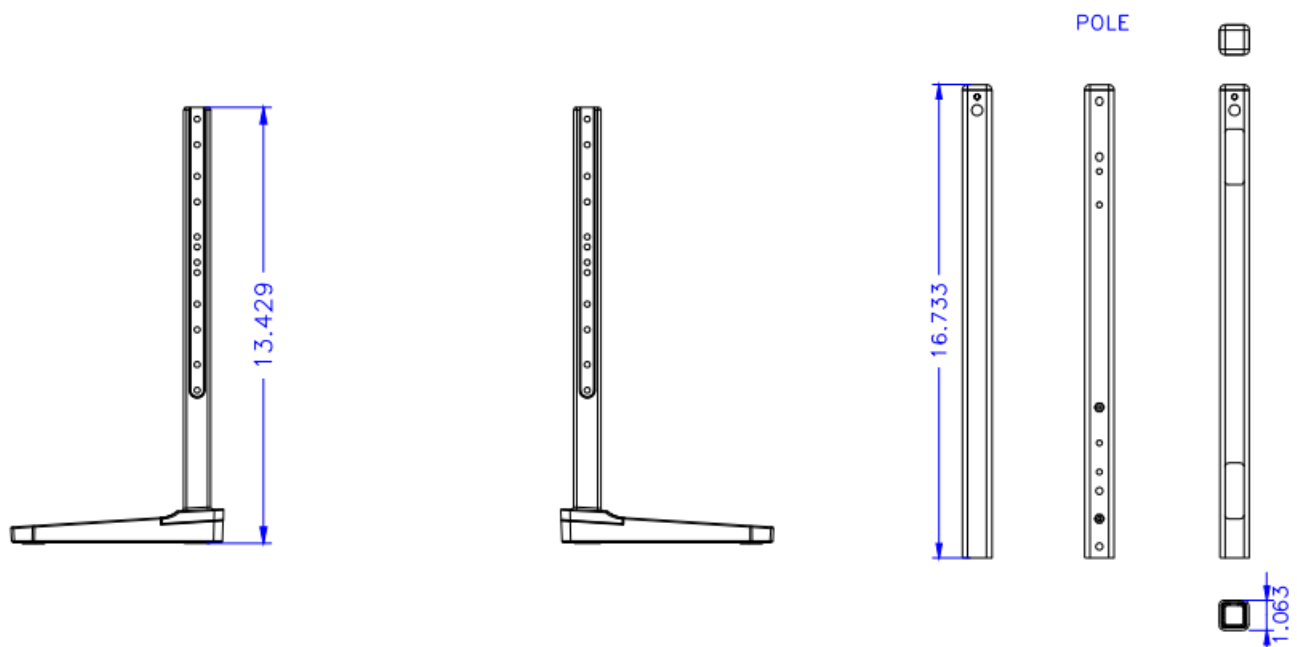


## Table Top Stand Dimensions (ST-65M)


Note – stand holder is included when stand is purchased but is not included in drawing below

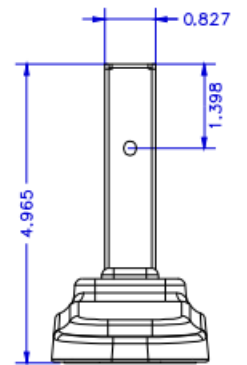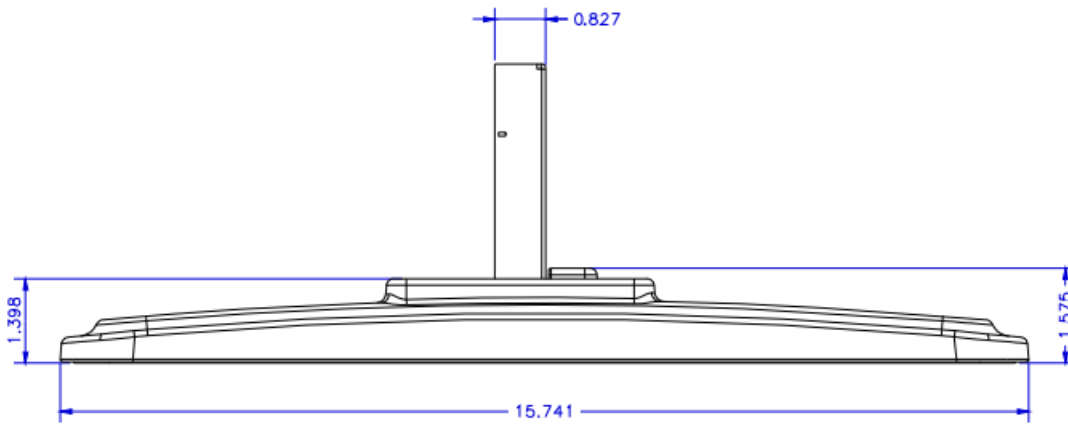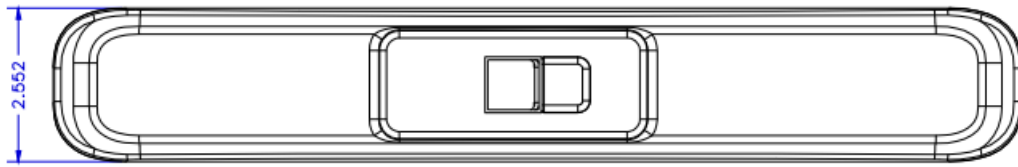

**Optional Large Wall Mount (WMK-6598)**

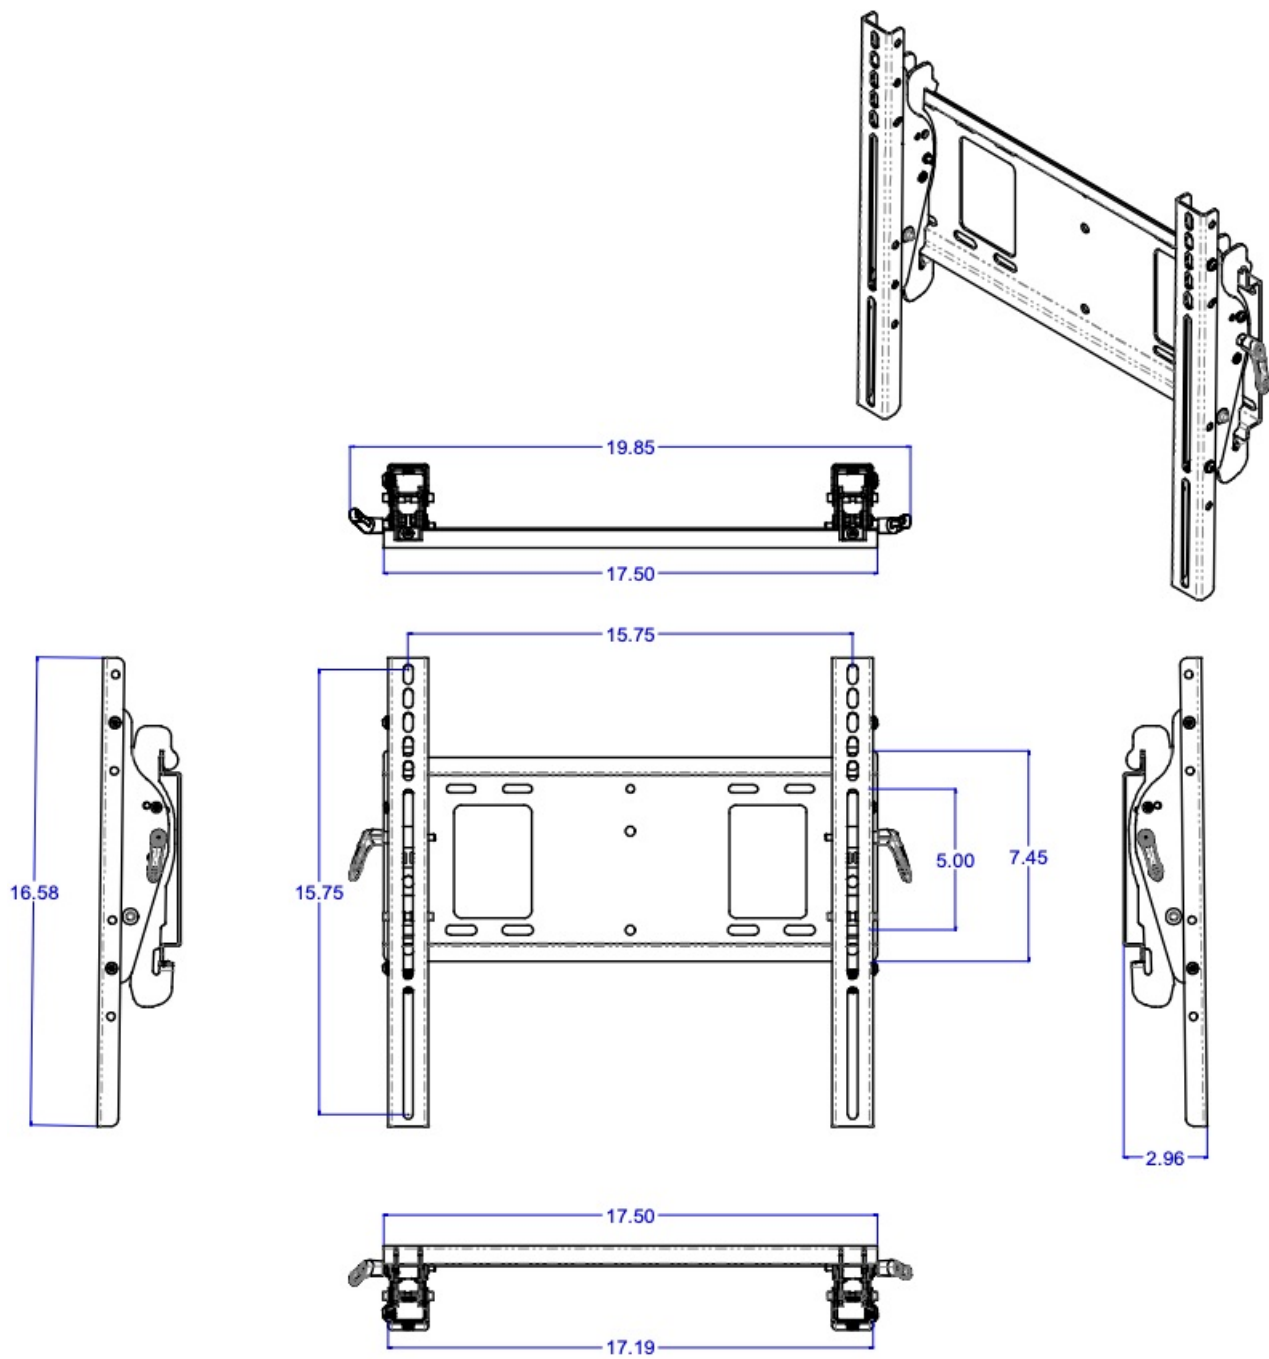


**Optional Speaker Dimensions (SP-RM3a)**

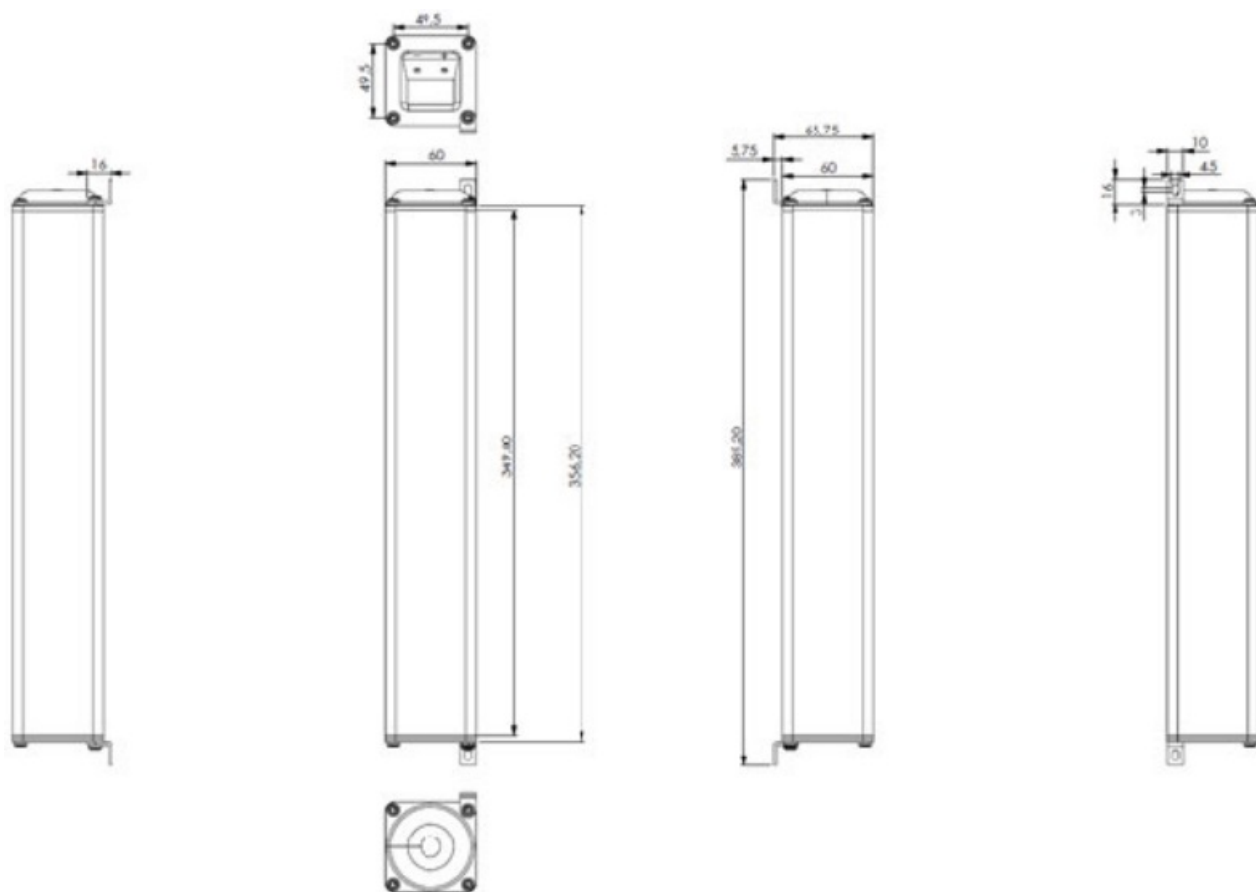


## Intel® Smart Display Module Integration

1. Place the monitor face down on a flat even surface that is larger than the monitor screen. Use a sturdy table that can easily support the weight of the monitor. To avoid scratching the LCD panel, always place a soft cloth, such as a blanket that is larger than the monitor's screen area, on the table before laying the monitor face down. Make sure there is nothing on the table that can damage the monitor.
2. Remove the SLOT COVER and the OPTION COVER. Note when using Intel® SDM-L type option board, slide the CENTER RAIL to the right and remove. Reverse the process to re-attach
3. Gently push in SDM-S or SDM-L module
4. Attach included Option Cover after installation of SDM device

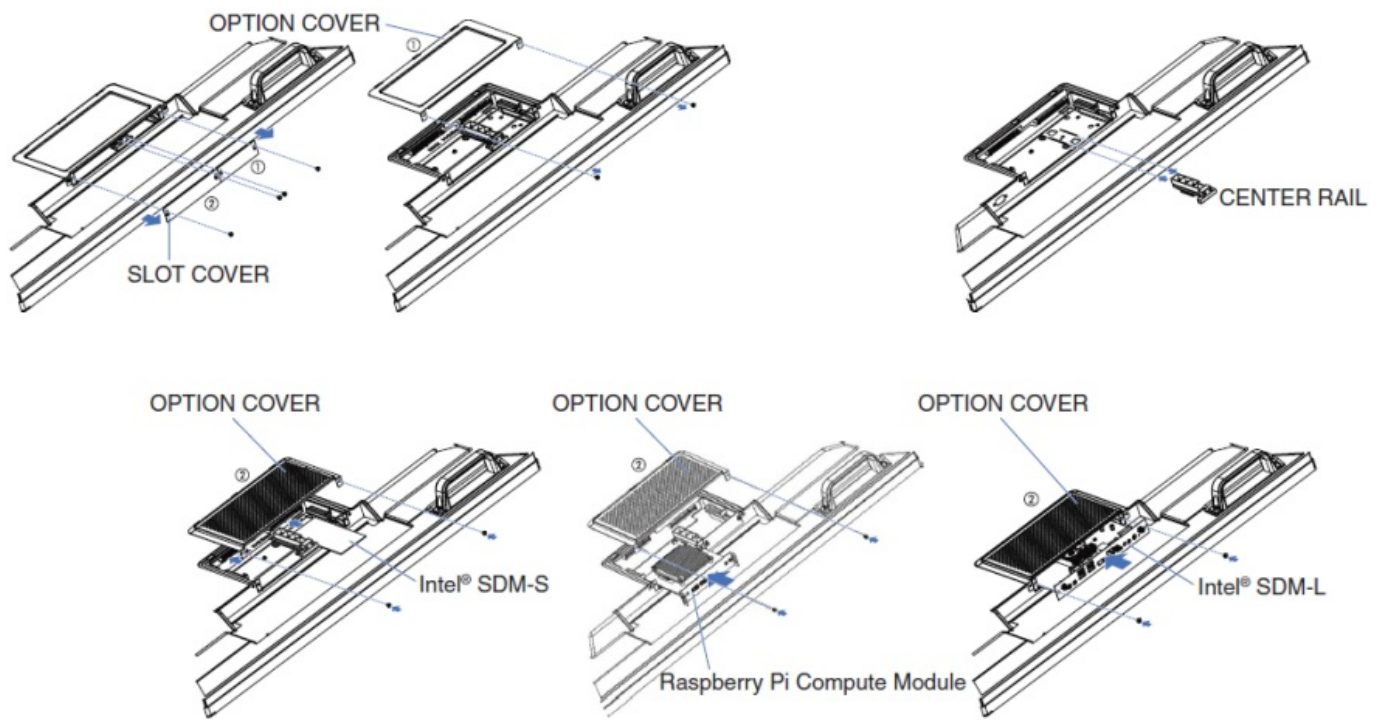

## Compute Module Integration

- Please see separate DS1-IF20CE installation guide for full integration. Image below may not represent actual back of unit but the concept is the same.
- Removing the OPTION COVER is necessary for installation

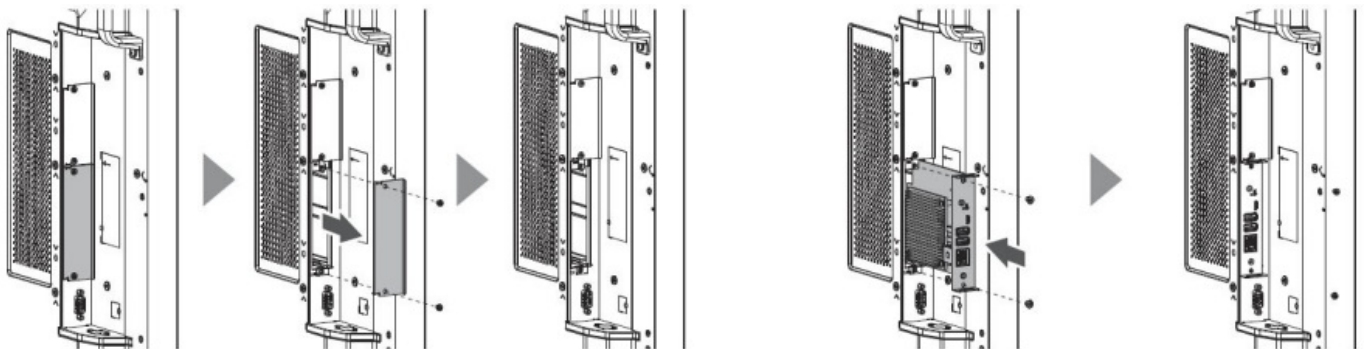

**Final installed DS-IF20CE with RPI CM4 below**



**Input Panel**

**Bottom**



**Side (Rotated)**





### ASCII Common Commands

- This monitor supports common ASCII control commands with many other NEC projectors. For more information on this, please see our website.

#### Parameter

##### Input command

Input signal name	Response	Parameter
DisplayPort1	DisplayPort1	DisplayPort1 or DisplayPort
DisplayPort2	DisplayPort2	DisplayPort2
HDMI1	hdmi1	hdmi1 or hdmi
HDMI2	hdmi2	hdmi2
HDMI3	hdmi3	hdmi3
MP	mp	mp
OPTION	option	option


##### Status command

Response	Error status
error:temp	Temperature abnormal
error:fan	Cooling fan abnormal
error:light	Inverter or backlight abnormal
error:system	System error

### PD Comms Tool

- Please download PD Comms Tool and open the Communications Log by going to View Communications Log. From here you can find any external control code necessary for your installation
- PD Comms Tool can be downloaded from here: <https://www.sharpnecdisplays.us/faqs/pdcommstool/179>



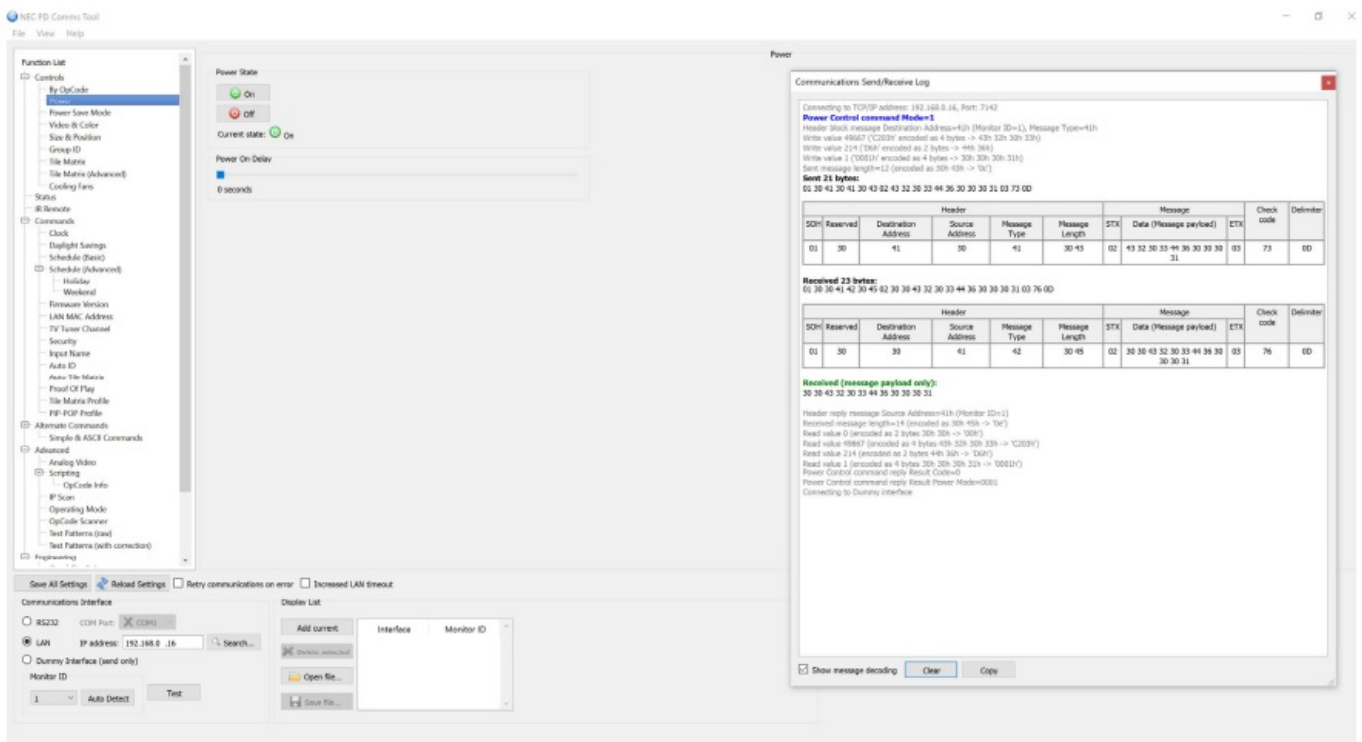

## Cable Connection

### Communication Protocol:

Interface: RS-232C

Communication System: Asynchronous


Baud Rate: 9600 bps

Data Length: 8 bits

Parity: None

Stop Bit: 1 bit

Communication Code: ASCII

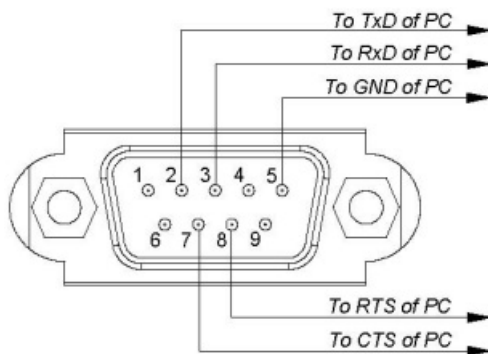


Interface: Ethernet (CSMA/CD)

Communication System: TCP/IP (Internet Protocol Suite)

Communication Layer: Transport layer (TCP)

IP Address: 192.168.0.10 (default out of box)

Port Number: 7142 (Fixed)

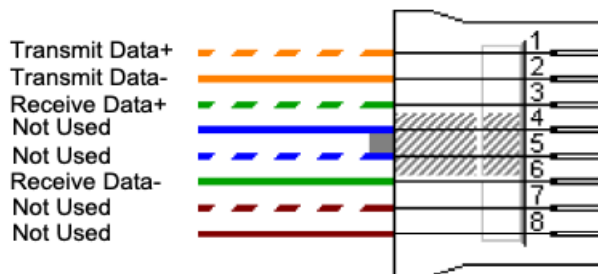

## Browser Control

Information and control can also be available through the HTTP browser control menu.

In order to accomplish this, type: **http://<the Monitor's IP address>/pd\_index.html**

Note that the LAN Power needs to be turned on in order for the display to be controlled while the units are off. All displays are set to the IP address 192.168.0.10 out of the box unless changed through the initial setup guide

Communicating network PC needs to be on the same subnet as display that is being communicated with

**NEC**

HDMI1

HOME  
REMOTE CONTROL  
PICTURE  
ADJUST  
AUDIO  
SCHEDULE  
MULTI PICTURE CONTROL  
OSD  
MULTI DISPLAY  
DISPLAY PROTECTION  
EXTERNAL CONTROL  
ADVANCED OPTION1  
ADVANCED OPTION2  
NETWORK  
MAIL  
SNMP  
AMX  
CRESTRON  
NAME  
NETWORK PASSWORD  
PD LIST  
MEMO  
UPDATE FIRMWARE  
PORT  
UPDATE FIRMWARE(ALL)

HOME

Welcome to the management and configuration web interface.  
You can use the navigation menus on the left to access additional pages.

### MONITOR INFORMATION

MODEL NAME	
SERIAL	45500005TA

### FIRMWARE VERSION

FIRMWARE1	0.017
FIRMWARE2	0.008
FIRMWARE3	0.011
FIRMWARE4	0.002

### ETHERNET

MAC ADDRESS	58:C2:32:33:00:03
IPv4 ADDRESS	192.168.0.10
SUBNET MASK	255.255.255.0
DEFAULT GATEWAY	0.0.0.0
DNS PRIMARY	0.0.0.0
DNS SECONDARY	0.0.0.0


### ID

Copyright © NEC Display Solutions, Ltd. 2014. All rights reserved.

[www.necdisplay.com](http://www.necdisplay.com)

MultiSync ME Series Large Format Displays

## Documents / Resources

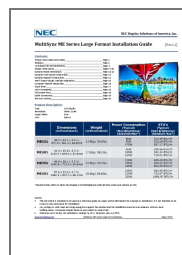

[NEC ME Series MultiSync Large Format \[pdf\] Installation Guide](#)

ME Series, MultiSync Large Format, ME Series MultiSync Large Format, Large Format, Format

## References

- [SN LCD Displays, Projectors, Desktop Monitors, Digital Signage](#)
- [SN Sharp/NEC Desktop and LCD Monitor Software](#)

