



# NEC MultiSync P Series Large Format LCD Display Installation Guide

[Home](#) » [NEC](#) » NEC MultiSync P Series Large Format LCD Display Installation Guide 



NEC Display Solutions of America, Inc.

## MultiSync P Series Large Format Installation Guide



## Contents

- [1 Product Description:](#)
- [2 Rotation/Face Up:](#)
- [3 Ventilation Recommendations:](#)
- [4 Display Dimensions – P435:](#)
- [5 Display Dimensions – P495:](#)
- [6 Display Dimensions – P555:](#)
- [7 Installing and Removing the Optional Table Top Stand](#)
- [8 Table Top Stand Dimensions \(ST-401 pictured below\):](#)
- [9 Input Panel:](#)
- [10 Cable Connection](#)
- [11 Documents / Resources](#)
- [12 Related Posts](#)

## Product Description:

Type:	LCD Display
Resolution:	3840 x 2160
Aspect Ratio:	16:9
EMI:	Class B

	VESA Hole Pattern	Dimensions (without stand)	Weight (without stand)	Power Consumption (Typical) (Max Brightness) (Absolute Max*)	BTU's (Typical) (Max Brightness) (Absolute Max*)	Current Rating
P435	300 x 300mm M6 x 12mm	38.1 x 22.1 x 2.6 in. 968.2 x 561.0 x 67.1mm	18.5kg / 40.7lbs.	90W 110W 265W	307.09 BTU/hr 375.34 BTU/hr 904.22 BTU/hr	3.3A @ 100V 1.4A @ 240V
P495	300 x 300mm M6 x 12mm	43.4 x 25.1 x 2.4 in. 1103.4 x 636.2 x 61.1mm	22.9kg / 50.5lbs.	105W 135W 290W	358.27 BTU/hr 460.64 BTU/hr 989.52 BTU/hr	3.2A @ 100V 1.3A @ 240V
P555	300 x 300mm M6 x 12mm	48.8 x 28.1 x 2.4 in. 1239.6 x 713.0 x 61.1mm	27.6kg / 60.8lbs.	110W 145W 295W	375.34 BTU/hr 494.76 BTU/hr 1006.58 BTU/hr	2.9A @ 100V 1.2A @ 240V

\*Absolute Max refers to when the display is at full brightness with all slots active and volume at 100.


## NOTES:

- This document is intended to be used as a reference guide to supply useful information for a design or installation. It is not intended to be a step-by-step procedure for installation.
- Any ceilings or walls must be strong enough to support the monitor and the installation must be in accordance with any local building codes. All mounts should make secure contact with wood studs.
- Distances are in inches, for millimeters multiply by 25.4. Distances may vary  $\pm 5\%$ .

## Rotation/Face Up:


- If the display is to be used in portrait orientation, the rotation needs to be **counterclockwise**. Note that if the

unit is rotated in the wrong direction, a symbol should appear on the display notating the correct direction. Face Up orientation is supported for these models **only** if the fan setting is on **HIGH** and if the ambient temperature stays less than 35 degrees Celsius.

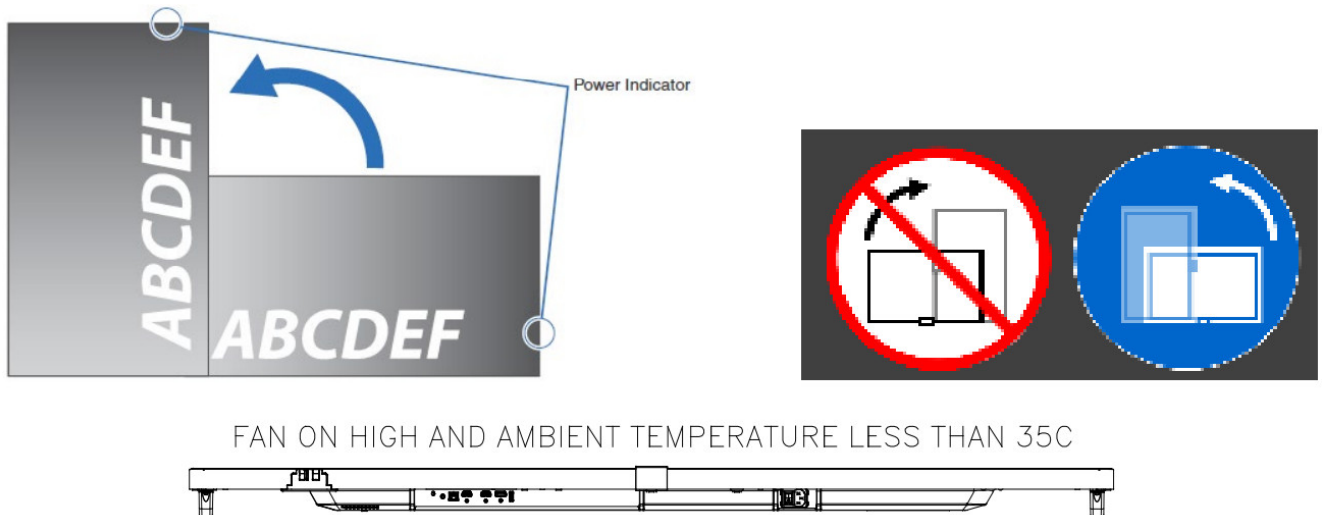

### Ventilation Recommendations:

Dimensions below are minimum recommended for proper ventilation

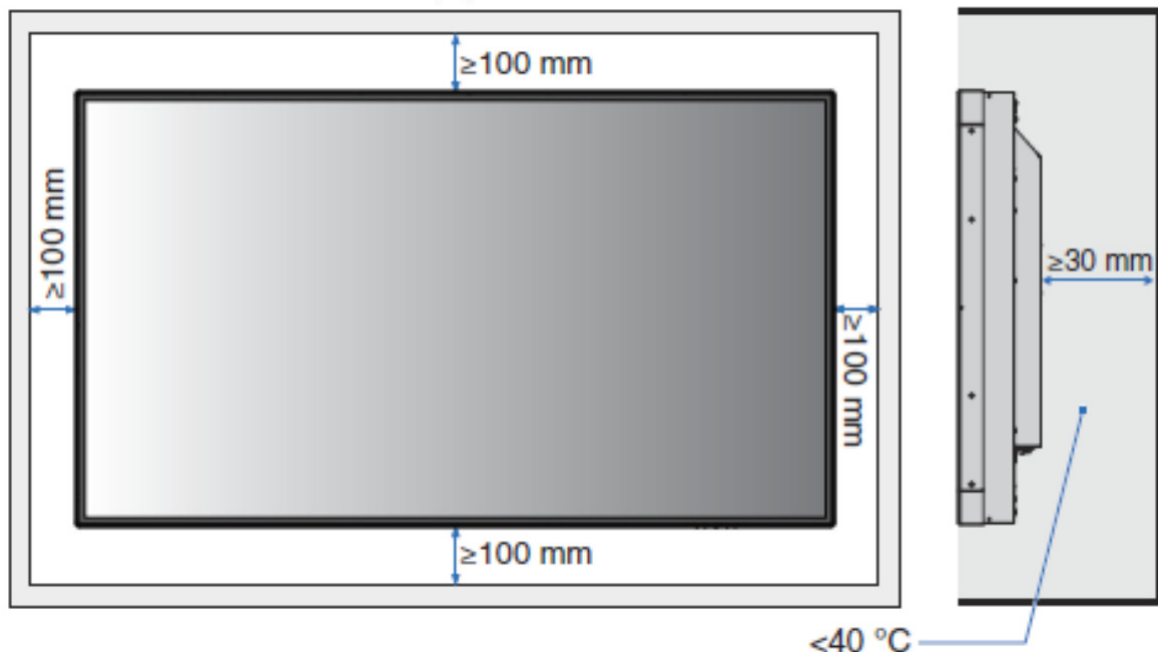


### NOTE:


- The above are recommendations in order to keep your display as cool as possible. If the distances are less than 100mm, extra ventilation may be necessary. The ventilation space should not be covered or closed off at the front of the opening. If for some reason the opening needs to be covered, other means of ventilation will need to be incorporated into the design. Contact NEC for design review and recommendations.

### Display Dimensions – P435:




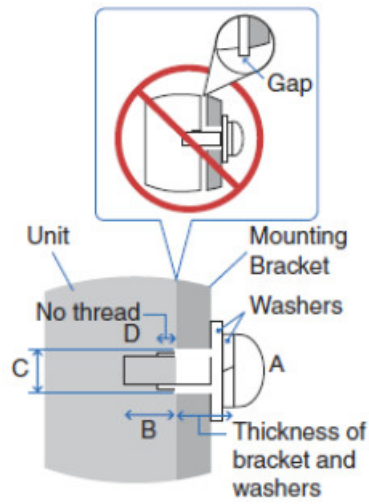

## Display Dimensions – P555:

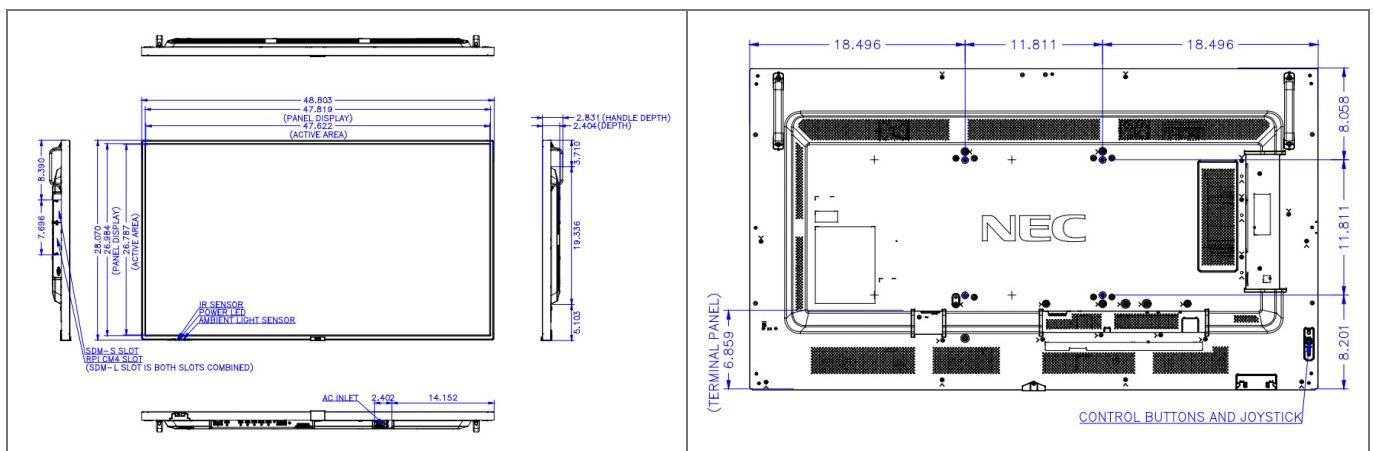


NEC strongly recommends using size M6 screws (10-12mm + the thickness of the bracket and washers in length).

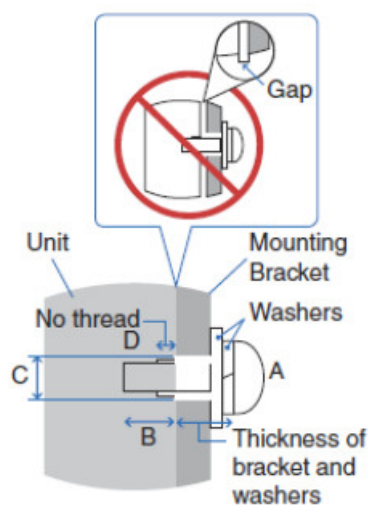


## Installing and Removing the Optional Table Top Stand


- The P435, P495, and P555 use the ST-401 or ST-43M.
- Only use the screws that are included with the optional stand.

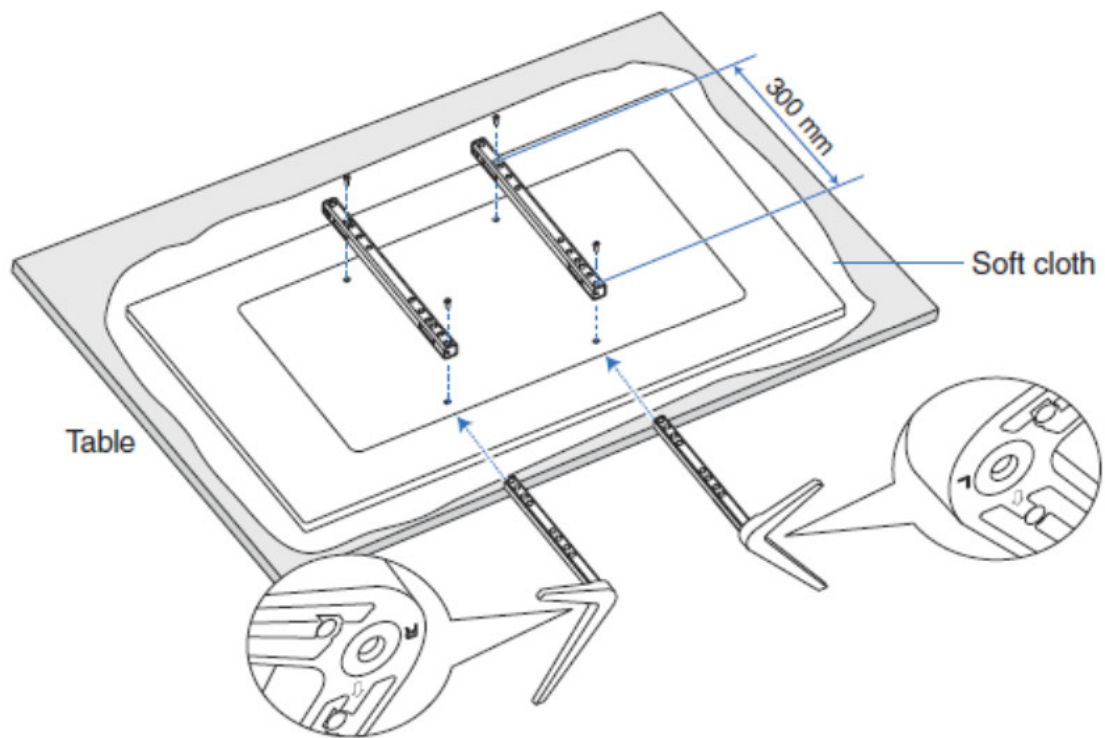

**Table Top Stand Dimensions (ST-401 pictured below):**

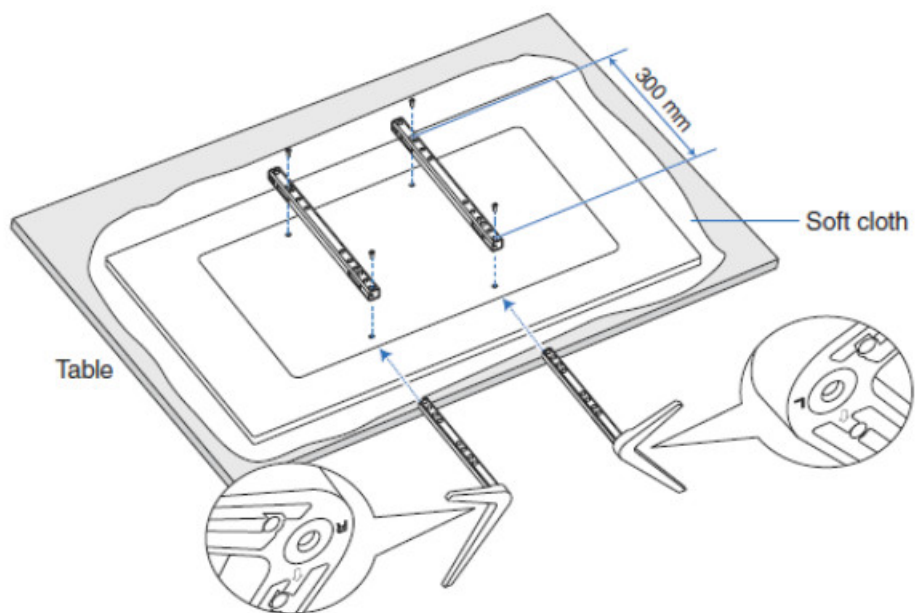


**Table Top Stand Dimensions (ST-401 pictured below):**

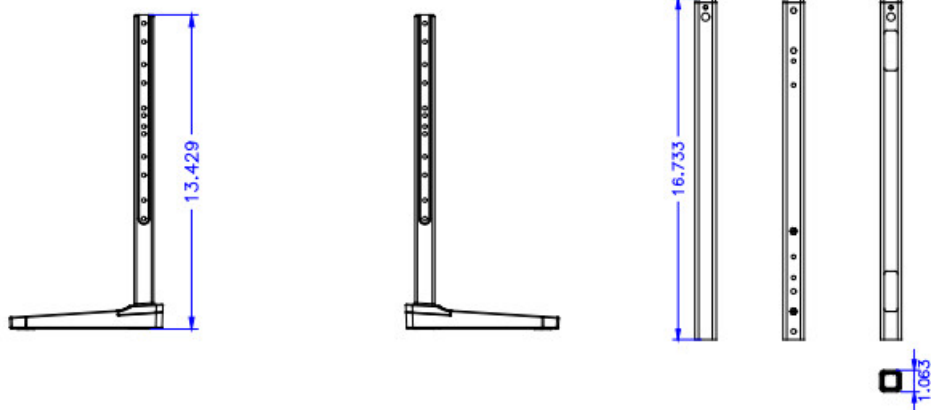




**Optional Large wall Mount (WMK-6598):**

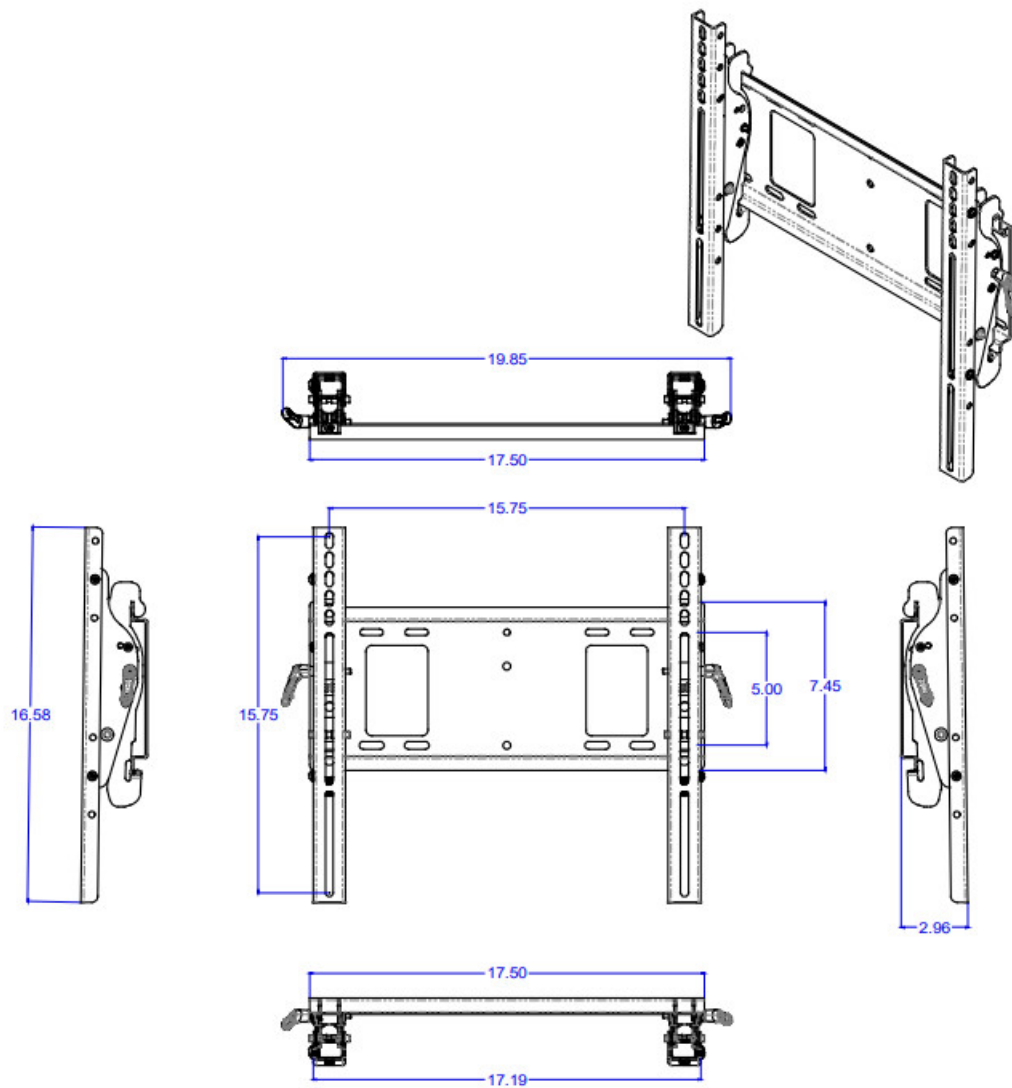


**Optional Speaker Dimensions (SP-RM3):**

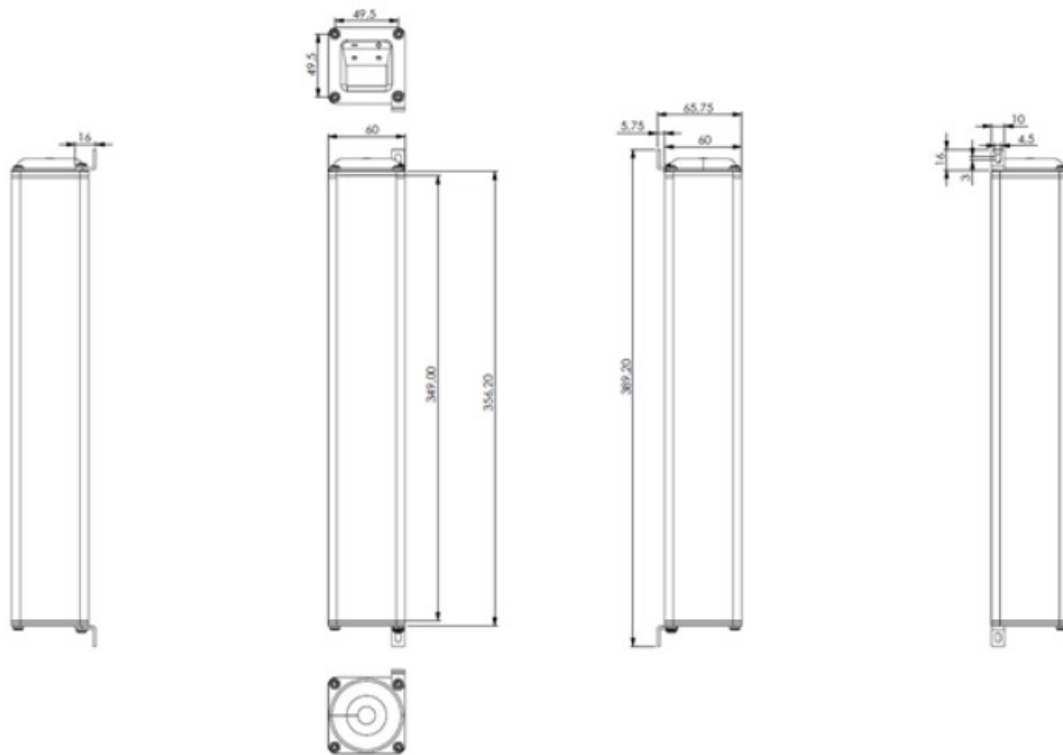

### Intel® Smart Display Module Integration:

1. Place the monitor face down on a flat even surface that is larger than the monitor screen. Use a sturdy table that can easily support the weight of the monitor. To avoid scratching the LCD panel, always place a soft cloth, such as a blanket that is larger than the monitor's screen area, on the table before laying the monitor face down. Make sure there is nothing on the table that can damage the monitor.
2. Remove the SLOT COVER and note that when using Intel® SDM-L type option board, the CENTER RAIL will also need to be removed. Reverse the process to re-attach
3. Gently push in SDM-S, Raspberry Pi Compute Module IF Board, or SDM-L module until you feel a slight click.
4. Screw-in module using SLOT COVER screws if necessary

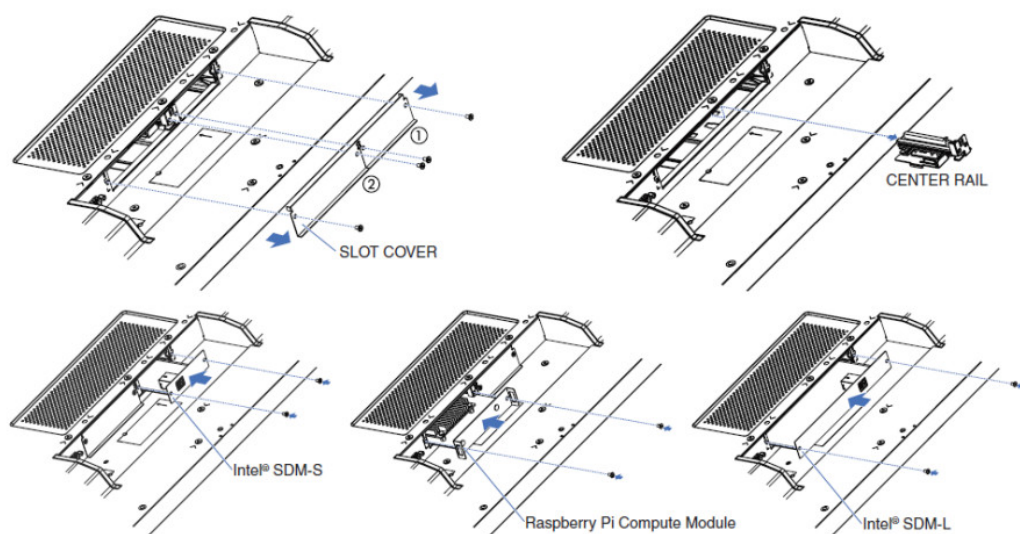


### Compute Module Integration:

- Please see the separate DS1-IF20CE installation guide for full integration. The image below may not represent



the actual back of the unit but the concept is the same.

- Removing the OPTION COVER is necessary for the installation

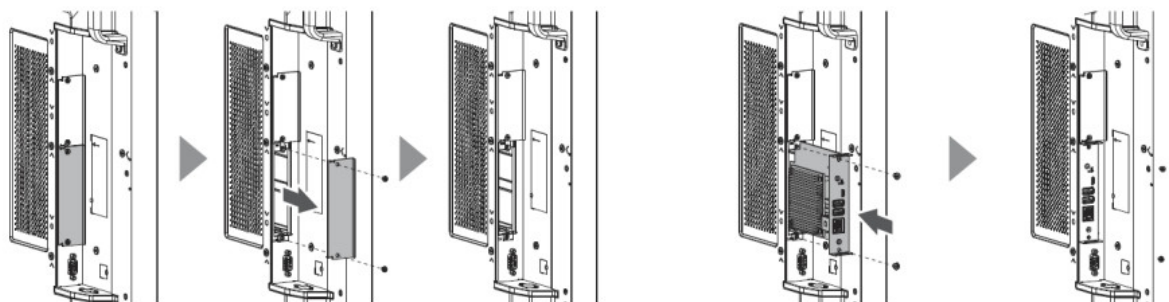

**Final installed DS-IF20CE with RPI CM4 below**



**Input Panel:**

**Bottom**



**Side (Rotated)**



### ASCII Common Commands:

- This monitor supports common ASCII control commands with many other NEC projectors. For more information on this, please see our website.

### Parameter

Input command


Input signal name	Response	Parameter
DisplayPort1	DisplayPort1	DisplayPort1 or DisplayPort
DisplayPort2	DisplayPort2	DisplayPort2
HDMI1	HDMI	HDMI or HDMI
HDMI2	hdmi2	hdmi2
HDMI3	hdmi3	hdmi3
MP	mp	mp
OPTION	option	option

### Status command

Response	Error status
error: temp	Temperature abnormal
error: fan	Cooling fan abnormal
error:light	Inverter or backlight abnormal
error: system	System error


## PD Comms Tool

- Please download PD Comms Tool and open the Communications Log by going to View → Communications Log. From here you can find any external control code necessary for your installation
- PD Comms Tool can be downloaded from here: <https://www.sharpnecdisplays.us/faqs/pdcommstool/179>

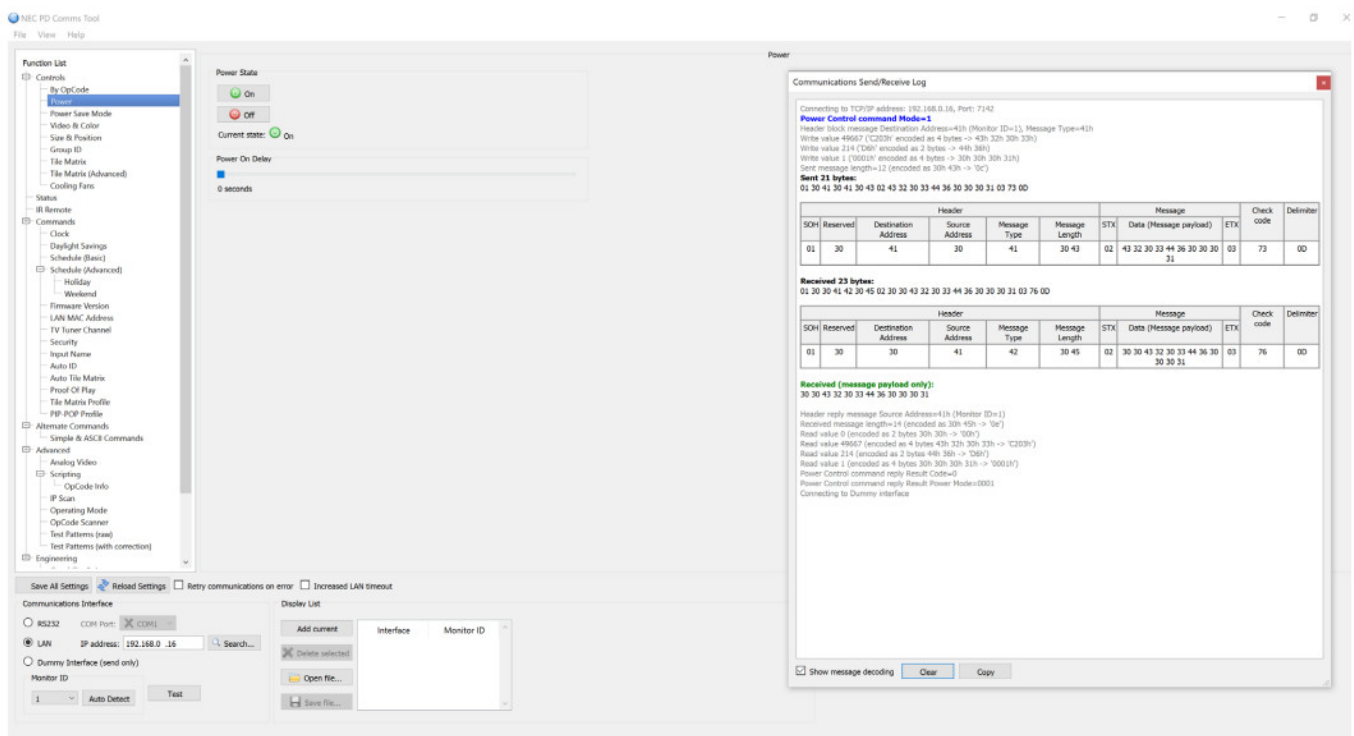


## Cable Connection

### Communication Protocol:

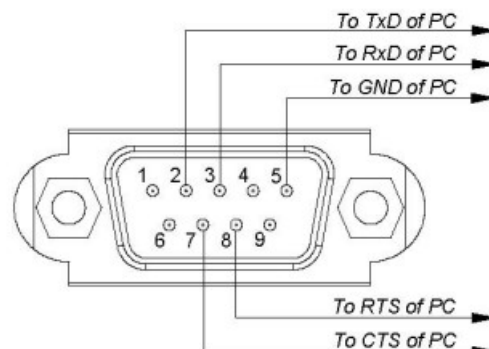

Interface:	RS-232C
Communication System:	Asynchronous
Baud Rate:	9600 bps
Data Length:	8 bits
Parity:	None
Stop Bit	1 bit
Communication Code:	ASCII

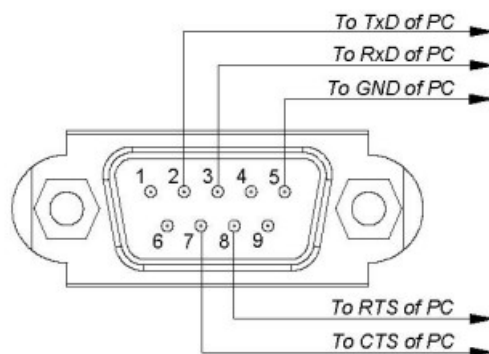

Interface:	Ethernet (CSMA/CD)
Communication System:	TCP/IP (Internet Protocol Suite)
Communication Layer:	Transport layer (TCP)
IP Address:	192.168.0.10 (default out of box)
Port Number:	7142 (Fixed)

#### Browser Control:

Information and control can also be available through the HTTP browser control menu.

In order to accomplish this, type: **[https://<theMonitor'sIPAddress>/pd\\_index.html](https://<theMonitor'sIPAddress>/pd_index.html)**

Note that the LAN Power needs to be turned on in order for the display to be controlled while the units are off. All displays are set to the IP address 192.168.0.10 out of the box unless changed through the initial setup guide. Communicating network PC needs to be on the same subnet as a display that is being communicated with.

[HOME](#)

[REMOTE CONTROL](#)

[PICTURE](#)

[ADJUST](#)

[AUDIO](#)

[SCHEDULE](#)

[MULTI PICTURE CONTROL](#)

[OSD](#)

[MULTI DISPLAY](#)

[DISPLAY PROTECTION](#)

[EXTERNAL CONTROL](#)

[ADVANCED OPTION1](#)

[ADVANCED OPTION2](#)

[NETWORK](#)

[MAIL](#)

[SNMP](#)

[AMX](#)

[CRESTRON](#)

[NAME](#)

[NETWORK PASSWORD](#)

[PD LIST](#)

[MEMO](#)

[UPDATE FIRMWARE](#)

[PORT](#)

[UPDATE FIRMWARE\(ALL\)](#)

HOME

Welcome to the management and configuration web interface.  
You can use the navigation menus on the left to access additional pages.

MONITOR INFORMATION

MODEL NAME	
SERIAL	45500005TA

FIRMWARE VERSION

FIRMWARE1	0.017
FIRMWARE2	0.008
FIRMWARE3	0.011
FIRMWARE4	0.002

ETHERNET

MAC ADDRESS	58:C2:32:33:00:03
IPv4 ADDRESS	192.168.0.10
SUBNET MASK	255.255.255.0
DEFAULT GATEWAY	0.0.0.0
DNS PRIMARY	0.0.0.0
DNS SECONDARY	0.0.0.0


ID

Copyright © NEC Display Solutions, Ltd. 2014. All rights reserved.

[www.necdisplay.com](http://www.necdisplay.com)

MultiSync P Series Large Format Displays

Documents / Resources

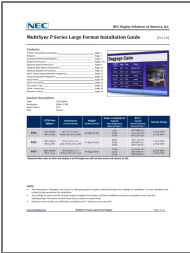

[NEC MultiSync P Series Large Format LCD Display](#) [pdf] Installation Guide  
NEC, MultiSync, P Series, Large Format, LCD Display