



# nedis ACAM21BK Action Camera User Guide

[Home](#) » [nedis](#) » nedis ACAM21BK Action Camera User Guide 



Quick start guide  
Action camera

## Contents

- [1 ACAM21BK Action Camera](#)
- [2 Intended use](#)
- [3 Safety instructions](#)
- [4 Turn on camera](#)
- [5 Switching between modes](#)
- [6 Disposal](#)
- [7 Declaration of Conformity](#)
- [8 Documents / Resources](#)
  - [8.1 References](#)

## ACAM21BK Action Camera



For more information see the extended manual online: [ned.is/acam21bk](https://ned.is/acam21bk)

## Intended use

This product is intended as a recording device.  
Any modification of the product may have consequences for safety, warranty and proper functioning.

## Main parts (image A)

1. OK button

2. Power indicator LED
3. Power button
4. Camera lens
5. UP button
6. DOWN button
7. Speaker
8. Display
9. Charging indicator LED
10. Status indicator LED
11. Battery cover
12. Microphone
13. USB-C port
14. MicroSD card slot

**Additional parts (not shown in illustration)**

15. Battery
16. Waterproof housing
17. Mounting accessories (×10)
18. Bandages
19. USB-C cable
20. 3M mats
21. Tethers
22. Lens cloth

## **Safety instructions**



### **WARNING**

- Ensure you have fully read and understood the instructions in this document before you install or use the product. Keep the packaging and this document for future reference.
- Only use the product as described in this manual.
- Do not use the product if a part is damaged or defective. Replace a damaged or defective device immediately.
- Do not drop the product and avoid bumping.
- This product may only be serviced by a qualified technician for maintenance to reduce the risk of electric shock.
- Disconnect the product from the electrical outlet and other equipment if problems occur.
- Do not expose the product to water or moisture.

## **Insert or change memory card (image B)**

A microSD card (not included) is required to take pictures or videos. Insert the microSD card into the microSD card slot 14.



Use a microSD card with a maximum of 32 GB storage capacity.



Format the microSD card before use.

## Battery (image C)






Charge the camera from any USB outlet with the supplied USB-C cable. The camera can be charged while recording video. Fully charging the battery takes about 3 hours.

 When battery level is low, a low battery notification is shown on the screen and the camera turns off.

## Turn on camera

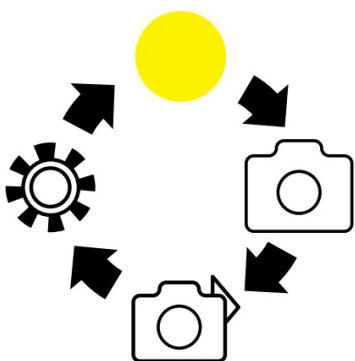Hold the power button 3 for about 3 seconds until the status indicator LED 10 lights up blue. A welcome screen appears, and the camera enters video mode.

## Switching between modes

		Video mode
		Picture mode
		Playback mode
		Setup mode

Switch between modes by pressing the power button 3.

## Attachment

Attach the action camera into the protective casing. The protective casing can be fitted with supplied mounting accessory to your clothing, action gear, helmet, etc.

## Record pictures and video images

In video mode, press OK to start or stop recording video.


In picture mode, press OK to take a picture.

## View pictures and video images

In view mode, press UP or DOWN to go to the next or previous picture or video. Press OK to play and stop videos.

## Settings menu navigation

In the settings menu, use UP and DOWN to navigate between options. Press OK to select and confirm options.

 For a description of the settings menu, consult the extended manual online.


## Transfer files to external device

Connect the camera to your device with the USB-C cable. Transfer files you want to save to your device.

Alternatively, take the microSD card from your camera and insert it into a card reader that is connected to your device.

## Use with GoPlus Cam App App

Use the GoPlus Cam App App on your mobile device to review images and videos, transfer them to your mobile device, take pictures, record video, toggle picture and video modes and change settings.

 The app works best with iPhone or Android version 8.0 and up.

1. Download the GoPlus Cam App App from the Apple App Store or Google Play.
2. Switch on your camera. Press UP to activate Wi-Fi.
3. Open the Wi-Fi settings on your mobile device. Select Wi-Fi network GoPlus Cam App.

Enter password 12345678.

4. Install and open the GoPlus Cam App. Select Wi-Fi network. Enter password to connect.

Once the connection is established, you see the live view of the camera. You can now control the camera with the app.

When you are done, press UP on the camera to return to the video or picture mode.

## Disposal




For more information, contact the retailer or the local authority responsible for the waste management. The product is designated for separate collection at an appropriate collection point. Do not dispose of the product with household waste.

 
 
## Declaration of Conformity

We, Nedis B.V. declare as manufacturer that the product ACAM21BK from our brand Nedis®, produced in China, has been tested according to all relevant CE standards and regulations and that all tests have been passed successfully. This includes, but is not limited to the RED 2014/53/EU regulation.

 
The complete Declaration of Conformity (and the safety datasheet if applicable) can be found and downloaded via:

[nedis.com/acam21bk#support](https://nedis.com/acam21bk#support)

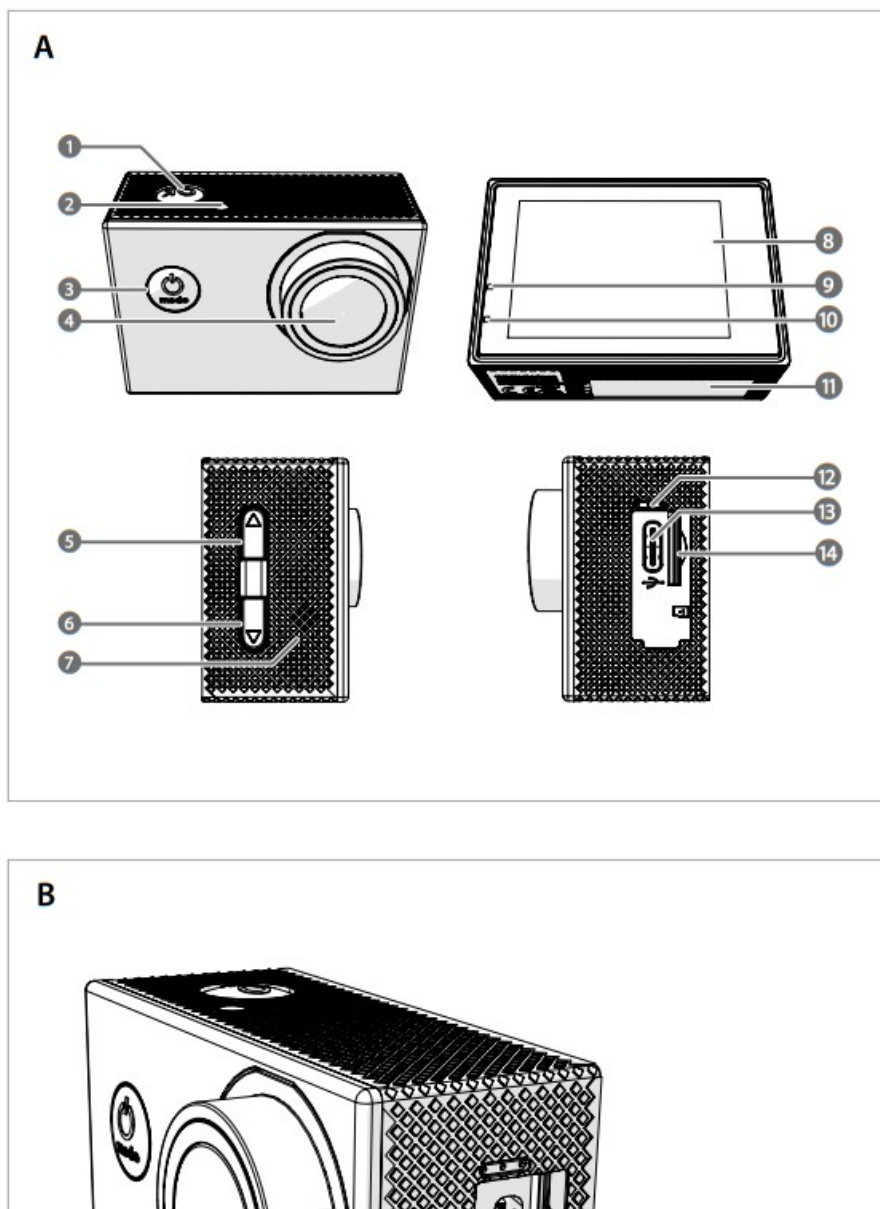

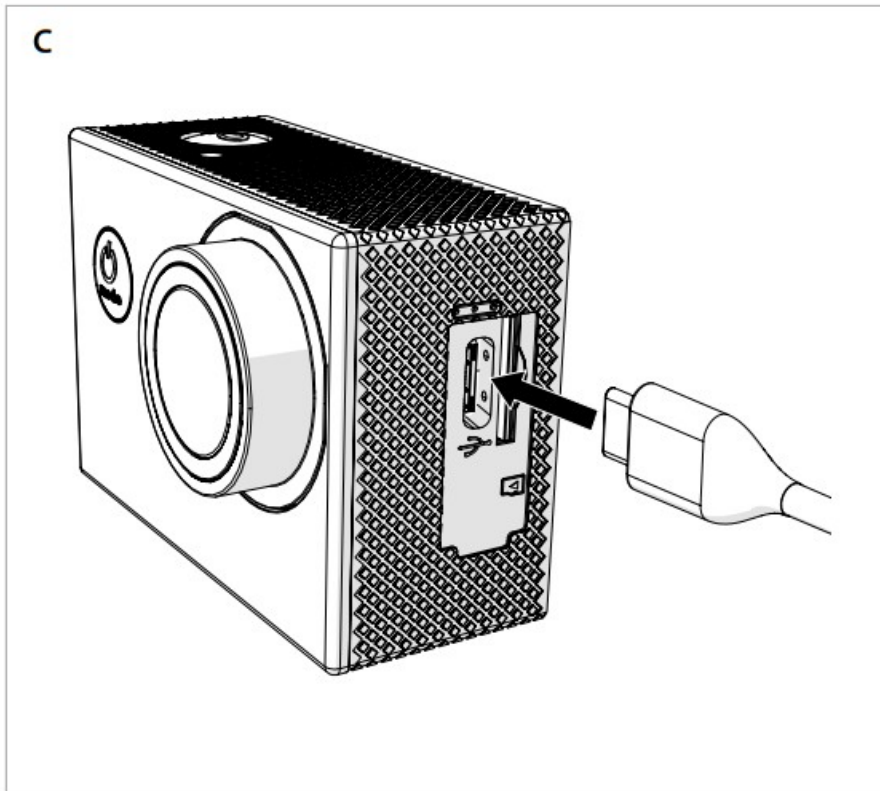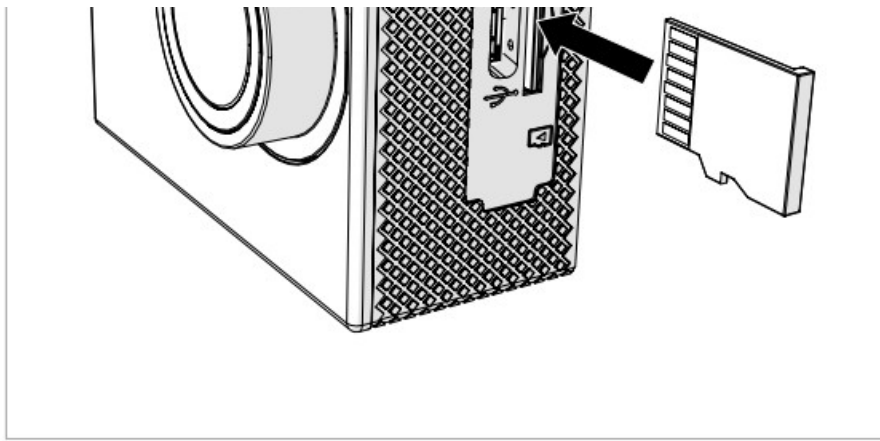

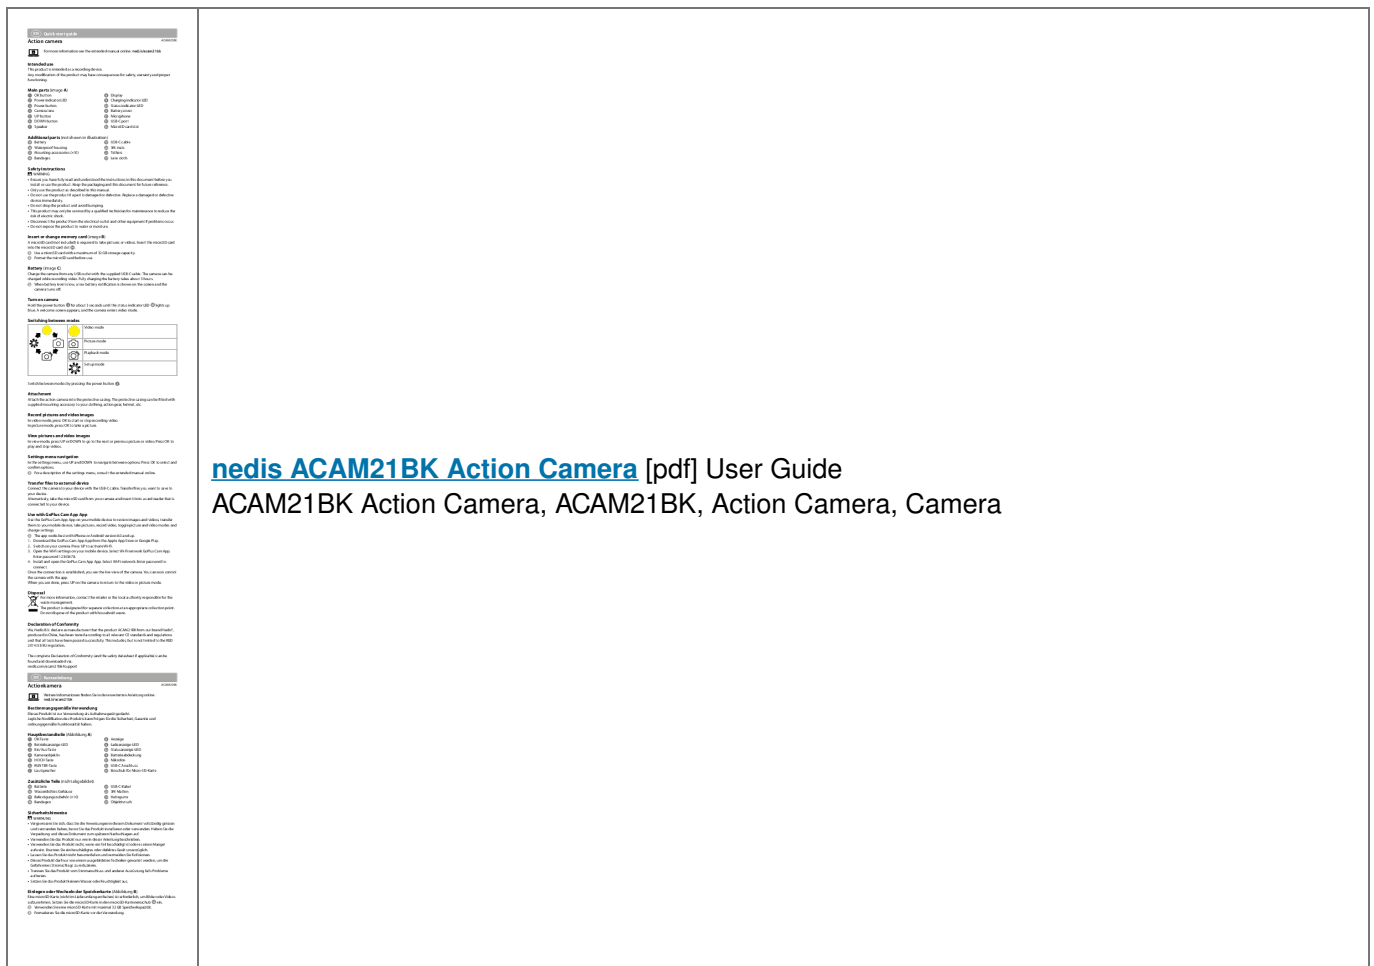

*nedis*



[nedis ACAM21BK Action Camera \[pdf\] User Guide](#)  
ACAM21BK Action Camera, ACAM21BK, Action Camera, Camera

## References

- [📷 Action Cam | Single Screen | 1080p@30fps | 12 MPixel | Waterproof up to: 30.0 m | 90 min | Wi-Fi | App available for: Android™ / IOS | Mounts included | Black](#)
- [📷 Action Cam | Single Screen | 1080p@30fps | 12 MPixel | Waterproof up to: 30.0 m | 90 min | Wi-Fi | App available for: Android™ / IOS | Mounts included | Black](#)
- [📷 Akční Kamera | Jedna Obrazovka | 1080p@30fps | 12 MPixel | Vodotěsné do: 30.0 m | 90 min | Wi-Fi | Aplikace ke stažení pro: Android™ / IOS | Včetně držáků | Černá](#)
- [📷 Action Cam | Einzelbildschirm | 1080p@30fps | 12 MPixel | Wasserdicht bis: 30.0 m | 90 min | Wi-Fi | App erhältlich für: Android™ / IOS | Inkl. halterung | Schwarz](#)
- [📷 Action Cam | Enkelt Skærm | 1080p@30fps | 12 MPixel | Vandtæt op til: 30.0 m | 90 min | Wi-Fi | App tilgængelig til: Android™ / IOS | Montering inkluderet | Sort](#)
- [📷 Caméra d'action | Écran Unique | 1080p@30fps | 12 MPixel | Étanche jusqu'à: 30.0 m | 90 min | Wi-Fi | Application disponible pour: Android™ / IOS | Montures incluses | Noir](#)
- [📷 Action Cam | Schermo Singolo | 1080p@30fps | 12 MPixel | Impermeabile fino a: 30.0 m | 90 min | Wi-Fi | App disponibile per: Android™ / IOS | Supporti inclusi | Nero](#)
- [📷 Action Cam | Enkel Scherm | 1080p@30fps | 12 MPixel | Waterbestendig tot: 30.0 m | 90 min | Wi-Fi | App beschikbaar voor: Android™ / IOS | Mounts inbegrepen | Zwart](#)
- [📷 handling Cam | Enkel Skjerm | 1080p@30fps | 12 MPixel | Vanntett opptil: 30.0 m | 90 min | Wi-Fi | App tilgjengelig for: Android™ / IOS | Montering inkludert | Sort](#)
- [📷 Action Cam | Single Screen | 1080p@30fps | 12 MPixel | Waterproof up to: 30.0 m | 90 min | Wi-Fi | App available for: Android™ / IOS | Mounts included | Black](#)

-  [Action Kamera](#) | [Enkel Skärm](#) | [1080p@30fps](#) | [12 MPixel](#) | [Vattentät upp till: 30.0 m](#) | [90 min](#) | [Wi-Fi](#) | [App tillgänglig för: Android™ / IOS](#) | [Fästen ingår](#) | [Svart](#)
-  [Action Cam](#) | [Single Screen](#) | [1080p@30fps](#) | [12 MPixel](#) | [Waterproof up to: 30.0 m](#) | [90 min](#) | [Wi-Fi](#) | [App available for: Android™ / IOS](#) | [Mounts included](#) | [Black](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.