

nedis

BTRC3024BK
Bluetooth Receiver



nedis BTRC3024BK Bluetooth Receiver User Guide

[Home](#) » [nedis](#) » nedis BTRC3024BK Bluetooth Receiver User Guide 

Contents

- [1 nedis BTRC3024BK Bluetooth Receiver](#)
- [2 Specifications](#)
- [3 FAQ](#)
- [4 Intended use](#)
- [5 Main parts](#)
- [6 Safety instructions](#)
- [7 Charging the product](#)
- [8 Connecting the product](#)
- [9 Answering phone calls](#)
- [10 Clearing the pairing memory](#)
- [11 CONTACT](#)
- [12 Documents / Resources](#)
 - [12.1 References](#)
- [13 Related Posts](#)

nedis

nedis BTRC3024BK Bluetooth Receiver



Specifications

- Model: BTRC3024BK
- Audio Jack: 3.5 mm
- Bass Button
- LED Light
- USB-C Charging Port

FAQ

- **Q:** How do I know if the device is fully charged?
- **A:** The red LED light (A3) indicates charging status. When the light turns off, the battery is fully charged.
- **Q:** How do I activate the voice assistant?
- **A:** Press the play/pause button (A4) twice to activate Siri/Google Assistant.


For more information see the extended manual online: ned.is/btrc3024bk

Intended use

- This product is a Bluetooth® audio receiver that enables Bluetooth® connectivity for devices with a 3.5 mm audio jack. Connect your Bluetooth® device to the product to start streaming music or other audio.
- This product is intended for indoor use only.
- This product is intended to be used in households and similar applications such as kitchen areas.
- This product is not intended for professional use. Any modification of the product may have consequences for safety, warranty, and proper functioning.

Main parts

(image A)

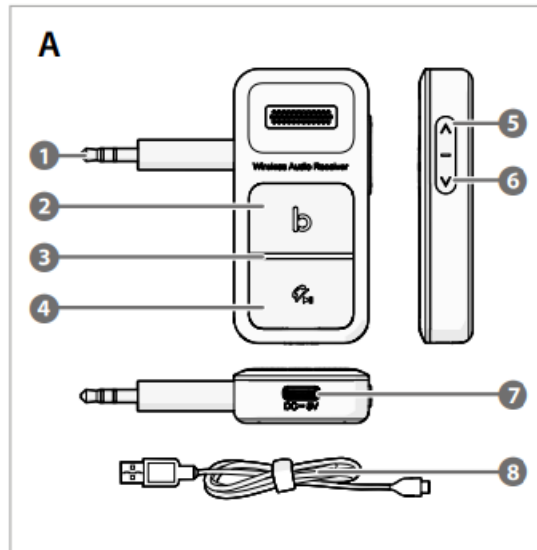

1. 3.5 mm audio jack
2. Bass button
3. LED light
4. Play/pause – answer/ end calls button
5. Volume up/previous track button
6. Volume down/next track button
7. USB-C charging port
8. USB – USB-C charging cable

Safety instructions

WARNING

- Only use the product as described in this document.
- Do not let children play with the packaging material. Always keep the packaging material out of the reach of children.
- Do not immerse the product in water or other liquids.
- Do not expose the product to water, rain, moisture, or high humidity.
- Do not expose the product to direct sunlight, naked flames, or heat.
- The product is delivered with a partially charged battery. For optimal battery life, fully charge the battery before using the product for the first time.
- Only use the provided USB-C charging cable with this product.
- Do not open the product, there are no user serviceable parts inside.
- Do not drop the product and avoid bumping.
- Do not use the product if a part is damaged or defective. Replace a damaged or defective product immediately.
- Disconnect the product from the power source before cleaning.
- Do not use aggressive chemical cleaning agents when cleaning the product.
- Ensure you have fully read and understood the instructions in this document before you install or use the product. Keep the packaging and this document for future reference.

Charging the product

1. Plug the USB – USB-C charging cable **A8** into the USB-C charging port **A7**.
2. Plug the other end of the USB – USB-C charging cable A8 into a 5V/0.5A USB adapter (not provided).
3. Plug the USB adapter into a power outlet. A red LED light **A3** indicates that the device is charging. When the light turns off, the battery is fully charged.

Connecting the product

1. Plug the 3.5 mm audio jack A1 into an audio source with a 3.5 mm audio port.
2. Press and hold the play/pause button A4 for 3 seconds to switch on the product. The product automatically enters Bluetooth® pairing mode.
3. Activate Bluetooth® on your audio source and connect with the product (BTRC3024BK).

Answering phone calls

1. Press the answer/end calls button A4 to answer or end a phone call.
2. Press and hold the answer/end calls button A4 to reject a call.

Playing music

- Press the play/pause button A 4 to play or pause music.
- Press the next or previous button A 5 / A 6 to change the song.
- Press and hold the volume up or down button A 5 / A 6 to adjust the volume.
- Press the bass button A 2 to turn the bass boost on or off.

Voice assistant

1. Press the play/pause button A4 twice to activate Siri/Google Assistant.
2. Press the play/pause button A4 once to end Siri/Google Assistant.

Clearing the pairing memory

- Press and hold the bass button A 2 for 2 seconds to clear the Bluetooth® pairing memory. If the pairing memory is cleared successfully, the LED light A3 flashes blue and red alternately.

Charging



Disposal

The product is designated for separate collection at an appropriate collection point. Do not dispose of the product with household waste. For more information, contact the retailer or the local authority responsible for the waste management.



Declaration of Conformity

We, Nedis B.V. declare as manufacturer that the product BTRC3024BK from our brand Nedis®, produced in China, has been tested according to all relevant CE standards and regulations and that all tests have been passed successfully. This includes, but is not limited to the RED 2014/53/EU regulation.

CONTACT

- ned.is/btrc3024bk
- Nedis BV
- De Tweeling 28, 5215 MC 's-Hertogenbosch The Netherlands
service@nedis.com






Documents / Resources



[nedis BTRC3024BK Bluetooth Receiver](#) [pdf] User Guide
BTRC3024BK Bluetooth Receiver, BTRC3024BK, Bluetooth Receiver, Receiver

References

-  [One moment, please...](#)
-  [Nedis | Your wholesaler of consumer electronics](#)
-  [Offer to sell domain: nedis.pl](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.