

 


nedis FNTR12CWT40 Tower Fan with oscillation function User Guide

[Home](#) » [nedis](#) » nedis FNTR12CWT40 Tower Fan with oscillation function User Guide 

nedis

**Tower Fan
with oscillation function
FNTR12CWT40**

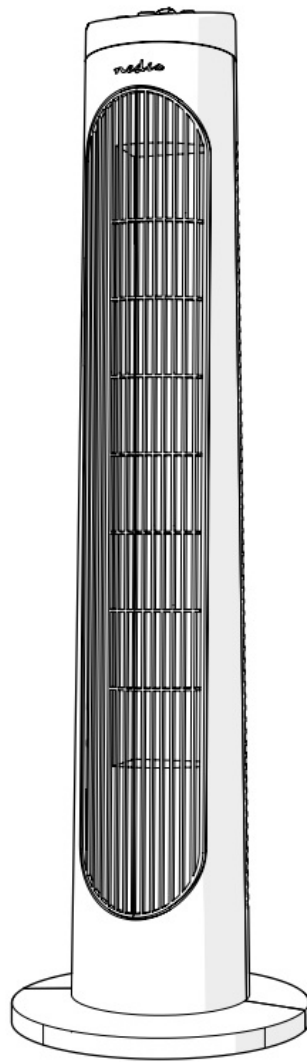


ned.is/fntr12cwt40


Contents

- [1 Information requirements for comfort fans](#)
- [2 Quick start guide](#)
- [3 Specifications](#)
- [4 Main parts \(image A\)](#)
- [5 Safety instructions](#)
- [6 Using the product](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)

Information requirements for comfort fans

Description	Symbol	Value	Unit
Maximum fan flow rate	F	5.21	m³/min
Fan power Input	P	4150	W
Service value	SV	0.13	(m³/min)/W
Standby power consumption	P_s	–	W
Off power consumption	P_o	0	W
Fan sound power level	L_{ft}	61.75	dB(A)
Maximum air velocity	C	2.38	m/s
Seasonal electricity consumption	Q	13.28	Khiva
Measurement standard for service value	EN 60704-2-7:1998, EN 60704-1: 2010H-A1 1: 2012 EN 50564: 2011 EN ISO 5801:2008		

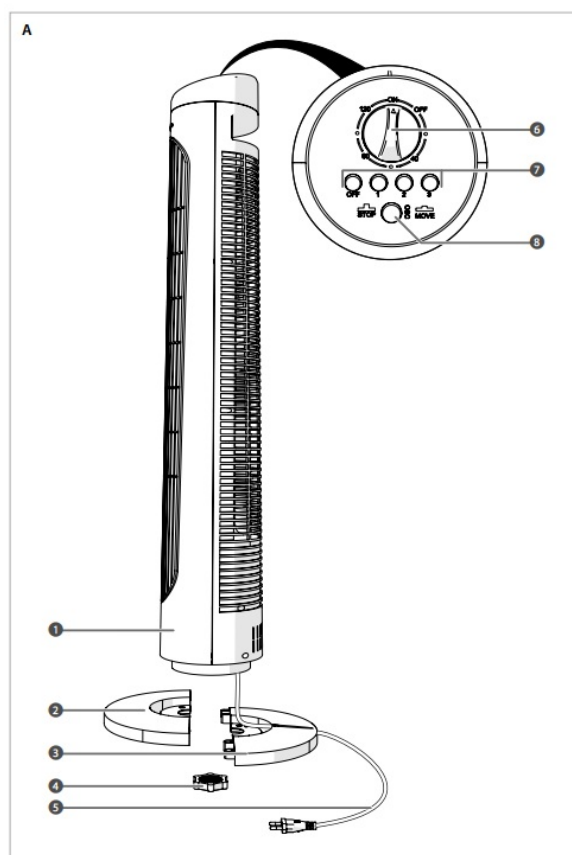 

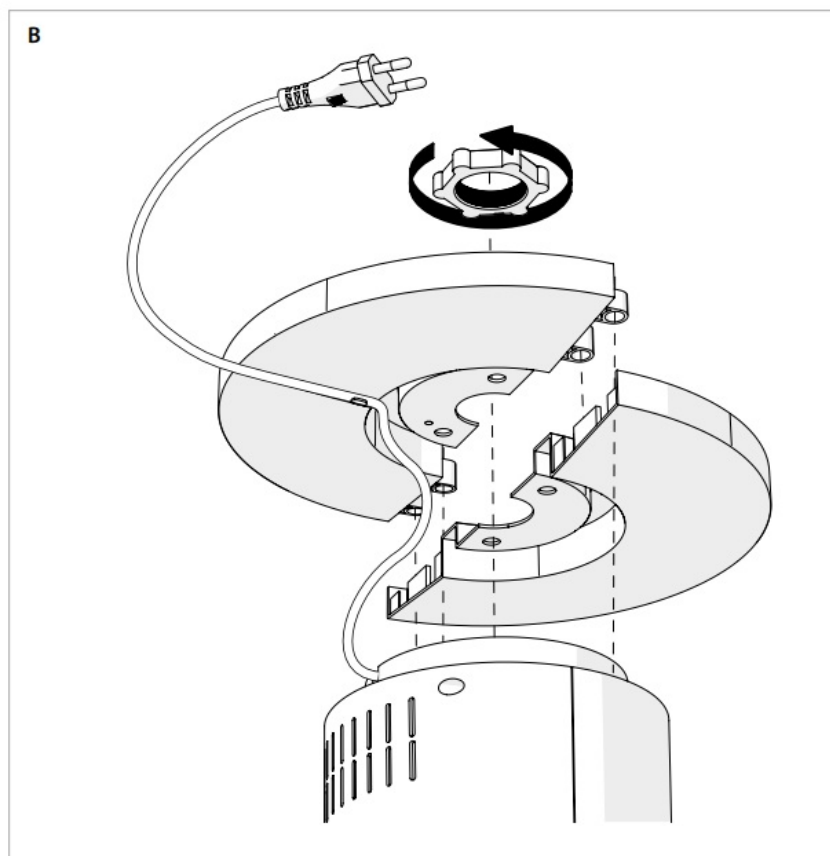 

Quick start guide

Tower Fan



For more information see the extended manual online:

ned.is/fntr12cwt40

Intended use

The FNTR12CWT40 is a fan with 3 different speeds.

This product is exclusively intended as a fan for indoor use only.

The product is not intended for professional use.

This product can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the product in a safe way and understand the hazards involved. Children shall not play with the product. Cleaning and user maintenance shall not be done

by children without supervision. This product is intended for use in household environments for typical housekeeping functions that may also be used by non-expert users for typical housekeeping **functions, such as:** shops, offices other similar working environments, farmhouses, by clients in hotels, motels, and other residential types environments and/or in bed and breakfast type environments.

Any modification of the product may have consequences for safety, warranty, and proper functioning.

Specifications

Product	Tower Fan
Article number	FNTR12CWT40
Dimensions (l x w x h)	24 x 24 x 76 cm
Weight	2500g
Input voltage	220-240V~, 50Hz
Power input	50 W

Main parts (image A)

1. Fan unit
2. Power cable
3. Front base part
4. Timer dial
5. Rear base part
6. a speed buttons
7. Base fastening nut
8. Oscillation button

Safety instructions



– WARNING

- Ensure you have fully read and understood the instructions in this document before you install or use the product. Keep the packaging and this document for future reference.
- Only use the product as described in this document.
- Do not use the product if a part is damaged or defective. Replace a damaged or defective product immediately.
- Do not expose the product to direct sunlight, naked flames or heat.
- Do not use the product where splashing of water might occur, e.g. bathroom, swimming pool or close to a washbowl.
- Do not expose the product to water or moisture.
- Do not drop the product and avoid bumping.
- Do not open the product.
- Do not use a damaged product.
- Do not insert a hand or other objects in the fan grill.
- Keep the product out of reach from children.
- Children of less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch on/off the product provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning the use of the product in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the product or perform user maintenance.


- This product can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the product in a Safeway and understand the hazards involved. Children shall not play with the product. Cleaning and user maintenance shall not be done by children without supervision.
- Do not cover the product.
- Do not splash water onto the product.
- Do not let water enter the product.
- Do not place the product on moving vehicles or somewhere easy to be tipped over.
- Do not move the product during operation.
- Do not let the power cable hang over the edge of a table or counter, or touch hot surfaces.
- Keep the product far away from loose products (e.g. curtains, plastic bags, paper) that can cover the air inlet easily.
- Unplug the power cable when the product is not in use for a long time.
- When using an extension cord, use one which is as short as possible and fully extended.
- Do not use the product using an on/off timer or other equipment which can automatically switch the device on.
- Do not locate the product immediately below a power outlet.
- Unplug the product from the power source and other equipment if problems occur.
- Do not unplug the product by pulling on the cable. Always grasp the plug and pull.
- Do not use the product in rooms where flammable liquids or gases are used or stored.
- This product may only be serviced by a qualified technician for maintenance to reduce the risk of electric shock.

Installing the product (image B)

1. Turn the fan unit A1 upside down.
2. Remove the base fastening nut A4 from A1.
3. Assemble A3 to A2.
4. Place the base parts A2A3 to A1.
5. Guide the four pins of A1 through the holes of A2A3.
6. Replace A4 to fasten A2A3.
7. Guide the power cable A5 through the cable recess of A3.
8. Turn the product back upright.
9. Place the product on a flat surface close to a power outlet.

Using the product


1. **Connect the power cable A5 to a power outlet.**

timer dial A6	Rotate the timer dial to set the timer
Speed button A7	Press one of the buttons to select the fan speed.  – Press only one button at a time. “0” = Off / “1” = Low / “2” = Mid/ “3” = High
Oscillation button A8	Press to activate the oscillation. Press again to stop oscillation.

Nedis BV

De Tweeling 28, 5215 MC 's-Hertogenbosch
The Netherlands

Documents / Resources

	<p>nedis FNTR12CWT40 Tower Fan with oscillation function [pdf] User Guide Tower Fan with oscillation function, FNTR12CWT40</p>
---	--

References

- [Smart solutions for your daily needs | Nedis](#)