



nedis HTCO50FWT Convection heater With LCD display and remote control User Manual

[Home](#) » [nedis](#) » nedis HTCO50FWT Convection heater With LCD display and remote control User Manual 

Contents

- [1 nedis HTCO50FWT Convection heater With LCD display and remote control](#)
- [2 Specifications](#)
- [3 Main parts](#)
- [4 Safety instructions](#)
- [5 Installing the feet](#)
- [6 Insert or change battery](#)
- [7 Switching on the product](#)
- [8 Display](#)
- [9 Switching between power settings](#)
 - [9.1 Anti-frost mode](#)
- [10 Setting the timer](#)
- [11 Documents / Resources](#)
 - [11.1 References](#)
- [12 Related Posts](#)

nedis

nedis HTCO50FWT Convection heater With LCD display and remote control

**Intended use**

The Nedis HTCO50FWT is a heater that allows the user to control the surrounding temperature.

 
This product is only suitable for well insulated spaces or occasional use.

The product is intended for indoor use only. Any modification of the product may have consequences for safety, warranty and proper functioning.

Specifications

Product	Convection heater
Article number	HTCO50FWT
Dimensions (l x w x h)	590 x 410 x 210 mm
Weight	3.1 kg
Input power	220 – 240 VAC ; 50 – 60 Hz
Power	1800 – 2000 W
Battery type	CR2032
Heat output	
Nominal heat output	2.0 kW
Minimum heat output	0.75 kW
Maximum continuous heat output	2.0 kW
Auxiliary electricity consumption	
At nominal heat output	2.0 kW
At minimum heat output	0.75 kW
In standby mode	0.001 kW
Type of heat output	Electronic room temperature control with: day timer working time limitation black bulb sensor

Main parts

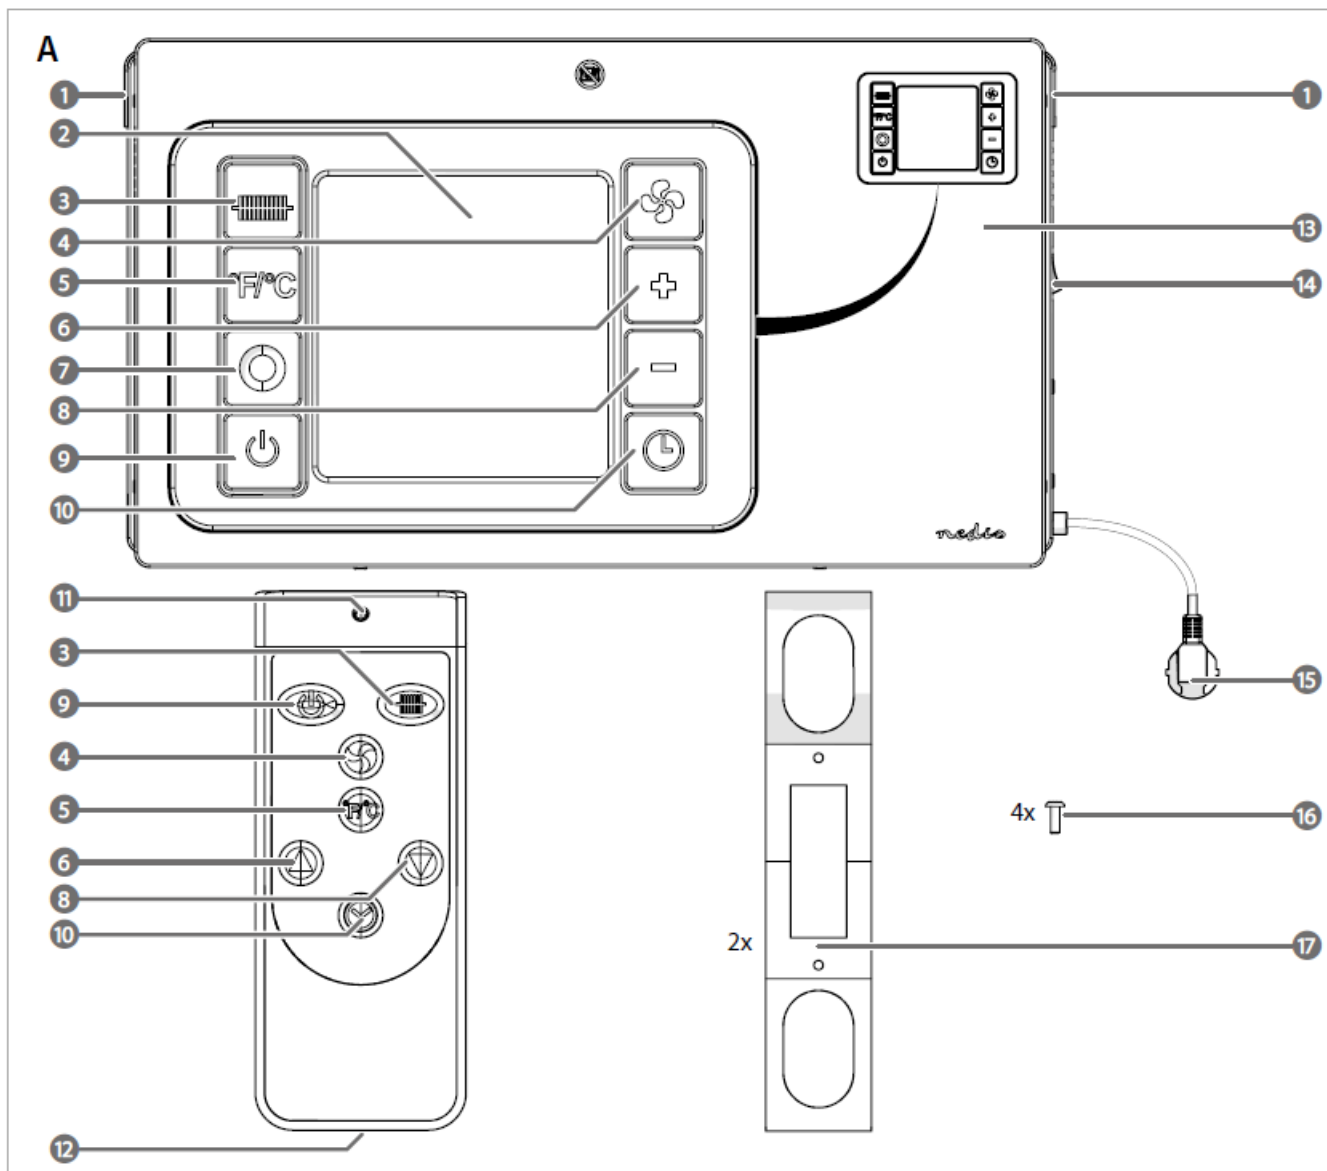


1. Handle
2. Display
3. Mode button
4. Fan button
5. Measurement unit button
6. Temperature up button
7. Receiver
8. Temperature down button
9. On/off button
10. Timer button
11. Transmitter
12. Battery compartment
13. Convection heater
14. On/off switch
15. Power cable
16. Screw
17. Foot

Safety instructions

- To avoid overheating, do not cover the product.
- Ensure you have fully read and understood the instructions in this document before you install or use the product. Keep this document for future reference.
- Only use the product as described in this document.
- Do not use the product if a part is damaged or defective. Replace a damaged or defective product immediately.
- Do not drop the product and avoid bumping.
- This product may only be serviced by a qualified technician for maintenance to reduce the risk of electric shock.
- Do not use the product where splashing of water might occur, e.g. bathroom, swimming pool or close to a washbowl.
- Do not expose the product to water or moisture.
- Do not locate the product immediately below a power outlet.
- Unplug the product from the power source and other equipment if problems occur.
- Do not unplug the product by pulling on the cable. Always grasp the plug and pull.
- Do not dismantle, open or shred secondary cells or batteries.
- Do not expose cells or batteries to heat or fire. Avoid storage in direct sunlight.
- Do not short-circuit a cell or a battery.
- Do not store cells or batteries haphazardly in a box or drawer where they may short-circuit each other or be short-circuited by other metal objects.
- Do not subject cells or batteries to mechanical shock.
- In the event of a cell leaking, do not allow the liquid to come in contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.
- Always purchase the battery recommended by the product manufacturer for the product.
- Do not remove a cell or battery from its original packaging until required for use.
- Do not use any cell or battery which is not designed for use with the equipment.
- Use only the cell or battery in the application for which it was intended.
- Do not mix cells of different manufacture, capacity, size or type within a product.
- Wipe the cell or battery terminals with a clean dry cloth if they become dirty.
- Battery usage by children should be supervised.
- Observe the plus (+) and minus (–) marks on the cell, battery and equipment and ensure correct use.
- When possible, remove the battery from the product when not in use.
- Properly dispose of the empty battery.
- Seek medical advice immediately if a cell or a battery has been swallowed.
- Always keep button cell batteries, both full and empty, out of reach of children to avoid the chance of swallowing. Dispose of used batteries immediately and safely. Button cell batteries can cause serious internal chemical burns in as little as two hours when swallowed. Keep in mind that the first symptoms may look like child diseases like coughing or drooling. Seek immediate medical attention when you suspect that batteries have been swallowed.
- Always use the voltage (A.C. Only) marked on the rating label.
- Before cleaning and maintenance, switch off the product and disconnect the product from the power source.

- Allow the product to cool down.
- If the power cable is damaged, it must be replaced by a special cable or assembly available from the manufacturer or its service agent.
- Unplug the product when not in use and before cleaning.
- Only handle the product with dry hands. Handling with wet hands might cause an electric shock.
- Close supervision is necessary when the product is used by or near children, animals or infirm persons.
- Do not use the product near explosive or flammable materials.
- Always unwind the power cable before using the product.
- Do not let the power cable touch hot surfaces.
- Only use the product in the upright position.
- Keep the air inlet grill clean.
- Do not use the product without the feet attached.
- Cleaning and user maintenance shall not be done by children under the age of 8 and without supervision.
- Children of less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch on/off the product provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved.

 
Installing the feet

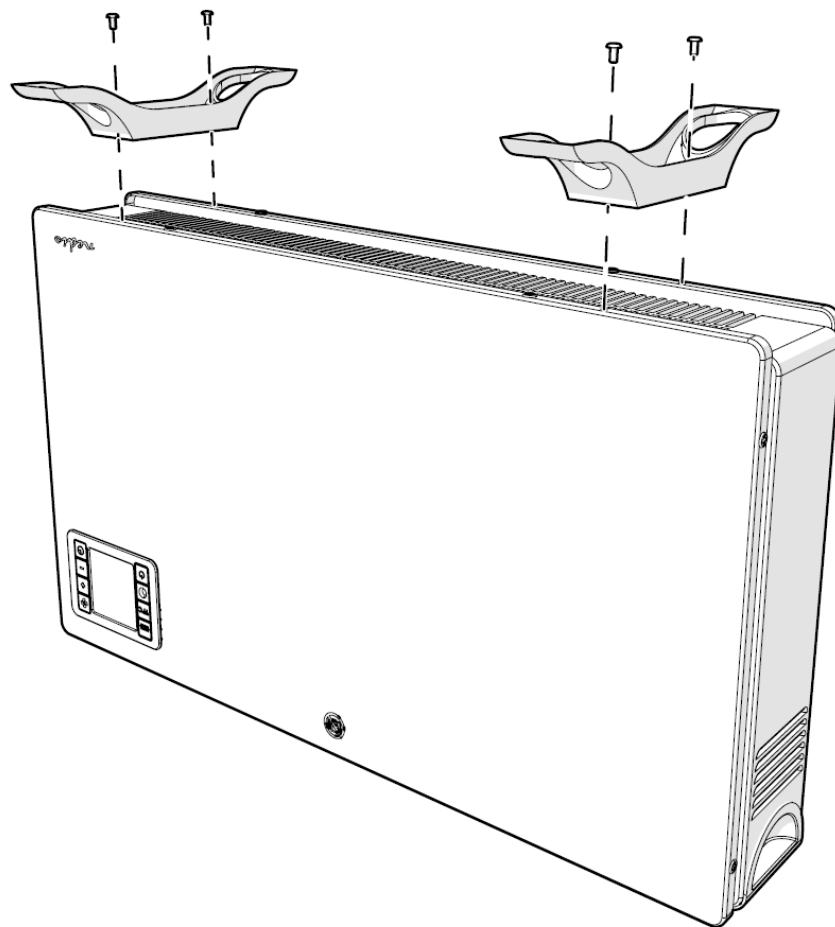

1. Place the product upside down.
2. Place the feet Ai on the product.
3. Align the holes in the feet with the holes in the bottom of the product.
4. Attach the feet to the product with the screws Au using a screwdriver.

5. Place the product upright.

 Insert or change battery

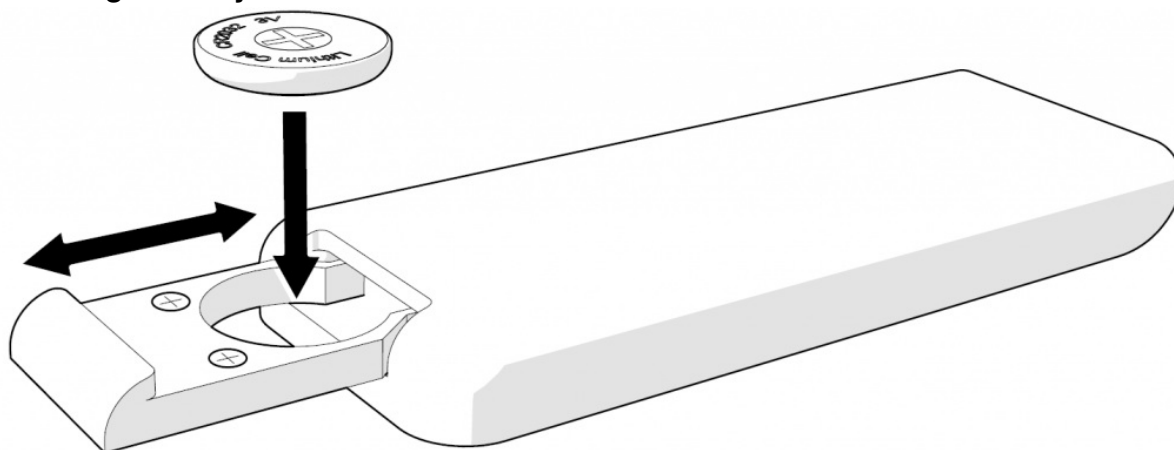


1. Open the battery compartment A12.
2. Place the battery
3. Close A12.

Switching on the product

Do not use the product without the feet attached.
See “Installation” for instructions on how to attach the feet.

1. Plug the power cable Ay into the power outlet.
2. Press the on/off switch At to switch on the product. The product is now in standby mode.
 - You hear a click when you switch on the product.
 - When the product is switched on (after a long period of time), the product may emit some smell and fumes.
3. Press the on/off button A9 to switch between standby and on.
 - You can control the product with the remote control and the buttons on the side of the display.
 - The display A2 switches on.

 Display

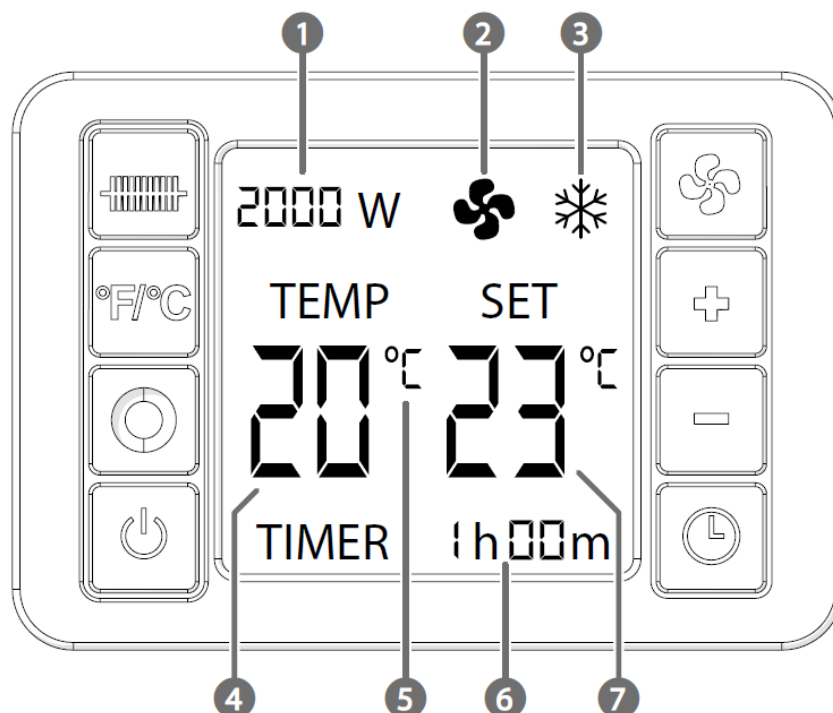

1. Power setting
2. Fan mode
3. Anti-frost mode
4. Current room temperature
5. Measurement unit
6. Countdown timer
7. Set room temperature

The display shows the current room temperature when the product is in standby mode.

Switching between power settings

1. Press mode button A3 to switch between power settings.
2. Choose between:
 - 750 W
 - 1250 W
 - 2000 W
 - Anti-frost mode

Anti-frost mode

- When the product is set to anti-frost mode, the product switches on when the room temperature reaches below 5°C to avoid freezing temperatures.
- If the room temperature reaches 9°C, the product switches back to standby.

Setting the timer

1. Press the timer button A10 to set a countdown timer.
2. Press A10 to increase the timer with 1 hour.
 - The maximum countdown time is 24 hours.
3. Switch off the timer by pressing A10 once more when the time is set to maximum.
 - The timer is cancelled when the product is switched off.
 - The time starts counting down 5 seconds after you set the timer.
 - The product switches back to standby mode when the selected time has expired.
 - D6 shows the remaining time.

Setting the measurement unit

Press the measurement unit button A5 to switch between units.

- Choose between °C or °F.
- D5 shows the current measurement unit.

Switching on/off the fan

1. Press the fan button A4 to switch on the fan.

 
The fan mode indicator D2 on the display shows to indicate the fan mode is activated.
2. Press A4 to switch off the fan.

Switching off the product

1. Press A9 to switch the product to standby mode.
2. Press A14 to switch off the product.
3. Unplug A15 from the power outlet.

nedis

Documents / Resources

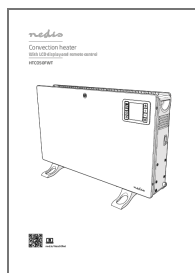

[nedis HTCO50FWT Convection heater With LCD display and remote control](#) [pdf] User Manual
Convection heater With LCD display and remote control, HTCO50FWT

References

-  [Smart solutions for your daily needs | Nedis](#)

Manuals+.