

nedis HTFA12CGY Convection heater User Manual

Home » nedis » nedis HTFA12CGY Convection heater User Manual






Contents

- 1 Description
- 2 Safety
 - 2.1 General safety
- 3 Electrical safety
- 4 Use
 - 4.1 Initial use
 - 4.2 Switching on and off
- 5 Cleaning and maintenance
- **6 Additional Warnings**
- 7 Documents / Resources
- **8 Related Posts**


Description

The convection heater is a device that heats a space by creating a current of warm air that circulates throughout the area.

1. On/off switch (750 W)

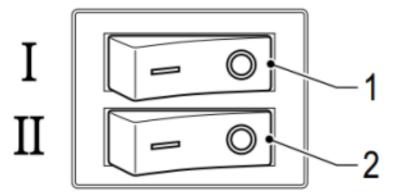

- 2. On/off switch (1500 W)
- 3. On/off indicator

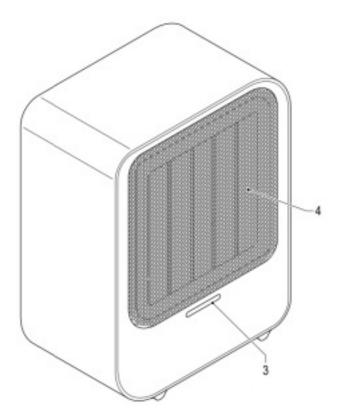

4. Airflow outlet

Safety

General safety

- Read the manual carefully before use. Keep the manual for future reference.
- The manufacturer is not liable for consequential damages or for damages to property or persons caused by non-observance of the safety instructions and improper use of the device.
- The device can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the device in a safe way and understand the hazards involved. Children shall not play with the device. Cleaning and user maintenance shall not be made by children without supervision.
- For additional protection, we advise you to install a residual current device (RCD) in the electrical circuit that supplies the bathroom his electricity. This RCD must have a rated residual operating current no higher than 30mA. Ask your installer for advice.
- Only use the device for its intended purposes. Do not use the device for other purposes than described in the manual.
- Do not use the device if any part is damaged or defective. If the device is damaged or defective, replace the
 device immediately.
- The device is suitable for indoor use only. Do not use the device outdoors.
- The device is suitable for domestic use only. Do not use the device for commercial purposes.
- Do not use the device near bathtubs, showers, basins or other vessels containing water.
- If you use the device in a bathroom, remove the mains plug from the wall socket after use. The presence of water can cause a risk of personal injury or damage to the device even when the device is switched off.
- Do not use a timer or a separate remote-control system that switches on the device automatically.
- Do not expose the device to water or moisture.

- · Do not cover the device.
- Do not block the ventilation openings.
- Do not insert foreign objects into the ventilation openings.
- · Place the device on a stable, flat surface.

Electrical safety



- To reduce risk of electric shock, this product should only be opened by an authorized technician when service is required.
- Disconnect the product from the mains and other equipment if a problem should occur.
- Do not use the device if the mains cable or mains plug is damaged or defective. If the mains cable or mains plug is damaged or defective, it must be replaced by the manufacturer or an authorised repair agent.
- Before use, always check that the mains voltage is the same as the voltage on the rating plate of the device.
- Do not move the device by pulling the mains cable. Make sure that the mains cable cannot become entangled.
- Do not immerse the device, the mains cable or the mains plug in water or other liquids.
- Do not leave the device unattended while the mains plug is connected to the mains supply.

Use

Initial use

Note: If you switch on the device for the first time, the device may emit a little smoke and a characteristic smell for a short period. This is normal operation.

Switching on and off

- 750 W: To switch on the device, set the on/off switch (1) to the on position. The on/off indicator (3) comes on.
- 1500 W: To switch on the device, set the on/off switch (1+2) to the on position. The on/ off indicator (3) comes on.
- To switch off the device, set the corresponding on/off switches to the off position. The on/off indicator (3) goes
 of

Cleaning and maintenance

Warning!

- Before cleaning or maintenance, always switch off the device, remove the mains plug from the wall socket and wait until the device has cooled down.
- · Do not use cleaning solvents or abrasives.
- Do not clean the inside of the device.
- Do not attempt to repair the device. If the device does not operate correctly, replace it with a new device.

- Do not immerse the device in water or other liquids.
- Clean the outside of the device using a soft, damp cloth.
- Clean the airflow outlet using a vacuum cleaner.

Additional Warnings



This symbol on your device means: do not cover!

Close supervision is necessary if the product is used near children or incapacitated persons. Children of less than 3 years should be kept away unless continuously supervised. Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance. This appliance is not suitable to be operated by children or persons who have physical, sensory and/or mental limitations, or by persons who have no knowledge of, or experience with, this appliance. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Be careful! Some parts of this product can become very hot and cause burns.

Particular attention has to be given where children and vulnerable people are present. Do not let bare skin come into contact with hot surfaces.



Documents / Resources



nedis HTFA12CGY Convection heater [pdf] User Manual HTFA12CGY, Convection heater

Manuals+,