

nedis HTPL20FWT Panel Convection Heater Subheader User Guide

[Home](#) » [nedis](#) » nedis HTPL20FWT Panel Convection Heater Subheader User Guide 

nedis

**Panel Convection Heater
Subheader**

HTPL20FWT / HTPL20FBK

 
Quick start guide

Panel convection

heater

HTPL20FWT / HTPL20FBK

For more information see the extended manual online:

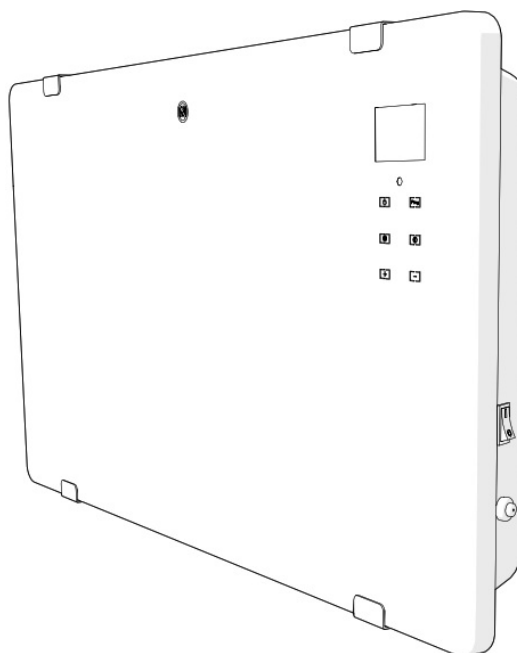

Contents

- 1 Nedis BV
- 2 Safety instructions
- 3 Specifications
- 4 Additional warning
- 5 Documents / Resources
 - 5.1 References
- 6 Related Posts

Nedis BV

De Tweeling 28, 5215 MC 's-Hertogenbosch – The Netherlands

Intended use

 
The product is intended for indoor use only.

 
This product is only suitable for well-insulated spaces or occasional use.

It can be used in wet and damp environments.

Any modification of the product may have consequences for safety, warranty, and proper functioning.


Parts list [Image A]

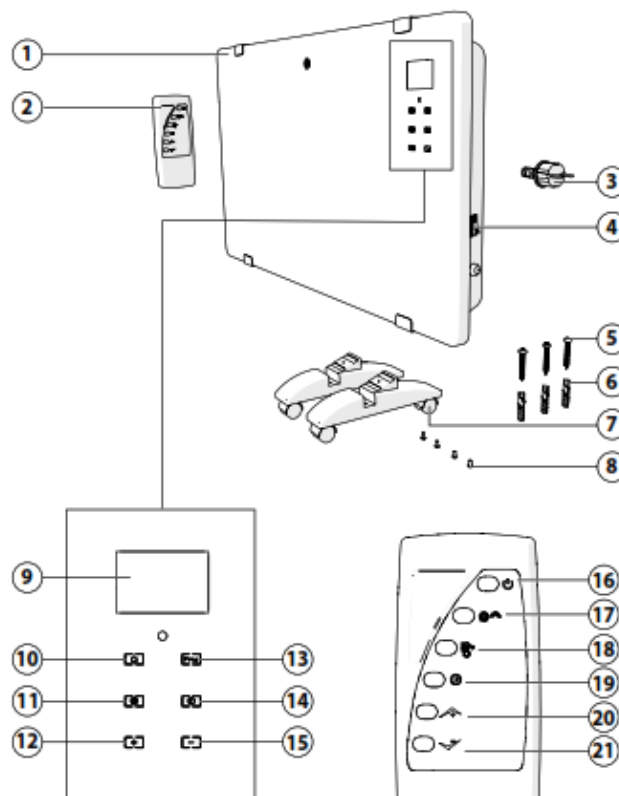

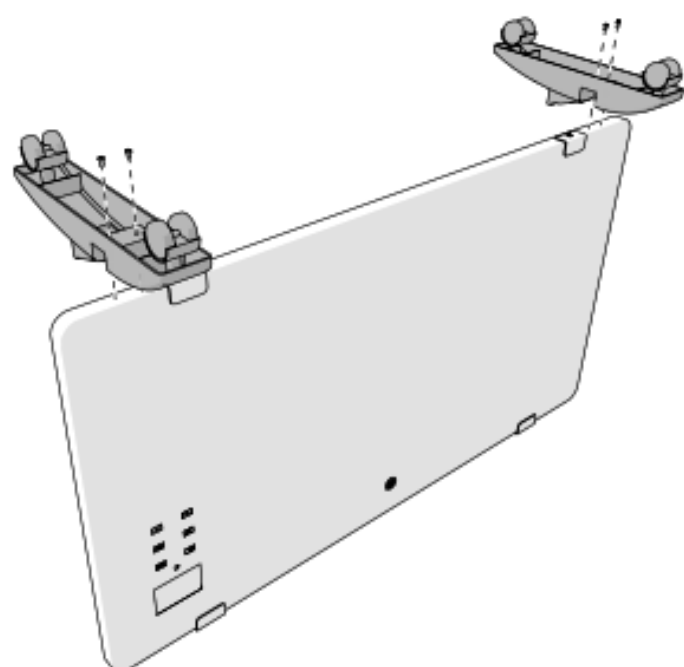

550 mm

 275 mm

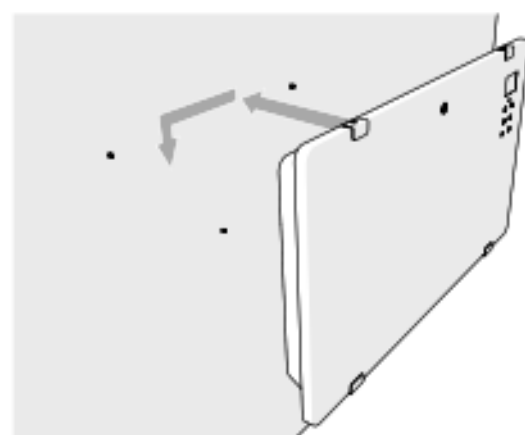

1. Panel convection heater 2. Remote control 3. Plug 4. Power switch 5. Screw for wall mount 6. Anchor 7. Foot with wheels 8. Screw for wheel mount 10. Display 11. On/off button 12. Mode button 13.+ button 14. Program button 15. Time button 16.- button 17. On/off button 18. Mode button	18. Window open button 19. Time button 20.+ button 21.- button 22. Day of the week 23. Timer 24. Heating interval display 25. Child lock 26. Temperature 27. Time 18. Heating on/off indication 29. Programming mode 30. Comfortable mode 31. ECO mode 32. Anti-frost mode 33. Window open mode 34. Heating display
--	---

Safety instructions



WARNING

- Only use the product as described in this manual.
- Do not use the product if a part is damaged or defective. Replace a damaged or defective device immediately.
- This product may only be serviced by a qualified technician for maintenance to reduce the risk of electric shock.
- Disconnect the product from the electrical outlet and other equipment if problems occur.
- Do not drop the product and avoid bumping.
- Do not use the product in rooms where flammable liquids or gases are used or stored.
- Avoid direct sunlight.
- Do not place near other heat sources.
- Connect to a grounded socket only.
- Do not place the heater directly under a wall socket.
- Do not locate the product immediately below a power outlet.
- Do not immerse the product in water.
- Do not subject the product to water jets.
- Do not cover the product when in use.
- Do not insert any objects into the product.

- Do not use solvents to clean the product.
- Do not extend the power cord.
- Do not use the product on a mobile socket.
- Do not pull the power cord to shut down the heater, always use the on/off switch.
- In case of failure, shut down the heater, unplug the power cord and have it serviced by a qualified technician.

Movable with wheels [Image B]

1. Turn the heater upside down.
2. Take a foot A 7 and 2 screws A 8.
3. Use a screwdriver to mount the foot to the heater.
4. Repeat for the other foot.
5. Turn the heater upright and plug the power cord in a grounded wall socket.

Wall-mounted heater [Image C]

WARNING

- Mount the product at least 150 mm from the floor and at least 500 mm from the ceiling.
- Do not mount the product directly under a wall socket.
- Check whether the wall can hold the weight of the product.
- Use anchors suitable for your type of wall only.

1. Drill 3 holes, as indicated.



The vertical measurement of 275 mm can deviate per product. Always check measurements before drilling.

2. Insert the anchors A 6.
3. Insert the screws A 5, let them protrude 6mm from the wall.
4. Hang the heater on the wall.
5. Plug the power cord in a wall socket.

Use



The product will switch off automatically when overheating.

Setting date and time

1. Turn on the power switch A 4.
2. Press A **10** to turn on the heater.
3. Press A **11** to turn on the display.
4. Press A **14** to open the date and time setting.
5. Press A **t14** for 3 seconds to change the time.
6. Press A **12** or A **y** to change the hour.
7. Press A **14** for 3 seconds.
8. Press A **12** or A **y** to change the minutes.
9. Press A **11** to confirm the time and exit or wait for 5 seconds.

Setting the temperature manually

Press A e or A y to change the temperature.

Using the child lock

When activated, the child lock prevents operations on the control panel.

To activate the child lock, press A 12 and A 15 simultaneously for 3 seconds. The child lock symbol on the display A 25 lights up.

To deactivate the child lock, press A 12 and A 15 again simultaneously for 3 seconds. The child lock symbol on the display disappears.

Using the remote



The remote control can only be used when the heater is not running in programmed mode.

1. Open the lid on the backside of the remote and install batteries.

A 16	Switch the heater on and off
A 14	Set Eco Mode, Comfortable Mode, or Anti-Frost Mode
A 18	Set Window Open Mode
A 19	Set time (same as A 14 on the control panel)
A 20	+ (same as A 12 on the control panel)
A 21	– (same as A 32 on the control panel)

Specifications

Product	Panel convection heater
Article number	HTPL20FWT / HTPL20FBK
Dimensions (l x w x h)	830 x 260 x 520 mm (with wheels) 830 x 90 x 465 mm (wall mounted)
Weight	7.9 kg
Input voltage	220-240V~50/60Hz
Rated input power	1800 – 2000 W
Setting	1000 W / 2000 W
Overheating protection temperature	105 °C
IP rating	IP24

Additional warning



This symbol on your device means: do not cover!


Close supervision is necessary if the product is used near children or incapacitated persons. Children of less than 3 years should be kept away unless continuously supervised. Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning the use of the appliance in a safe way


and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance. This appliance is not suitable to be operated by children or persons who have physical, sensory, and/or mental limitations, or by persons who have no knowledge of, or experience with, this appliance. This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Be careful! Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present. Do not let bare skin come into contact with hot surfaces.

HTPL20FWT_AdditionalWarnings_0421_Def.indd 2
12-4-2021 11:36:24

	
http://ned.is/HWIL20FWT	http://ned.is/HWIL20FWT

ned.is/httpI20fwt | ned.is/httpI20fbk



04/21

17-7-2019 16:49:03

Documents / Resources

	nedis HTPL20FWT Panel Convection Heater Subheader [pdf] User Guide HTPL20FWT, HTPL20FBK, Panel Convection Heater Subheader, Convection Heater
---	--

References

- [Smart solutions for your daily needs | Nedis](#)
- [Smart solutions for your daily needs | Nedis](#)