



nedis KACM150EBK Coffee Maker User Guide

[Home](#) » [nedis](#) » nedis KACM150EBK Coffee Maker User Guide 




Contents

- 1 [Coffee Maker](#)
 - 1.1 [KACM150EBK / KACM150EWT](#)
 - 1.2 [Quick start guide](#)
- 2 [Coffee Maker](#)
 - 2.1 [Intended use](#)
 - 2.2 [Specifications](#)
 - 2.3 [Main parts \(image A\)](#)
 - 2.4 [Safety instructions](#)
 - 2.5 [Before first use](#)
 - 2.6 [Brewing coffee \(image B\)](#)
 - 2.7 [Cleaning & Maintenance](#)
 - 2.8 [Descaling the product](#)
- 3 [Documents / Resources](#)
 - 3.1 [References](#)
- 4 [Related Posts](#)

Coffee Maker

for 10 cups

KACM150EBK / KACM150EWT

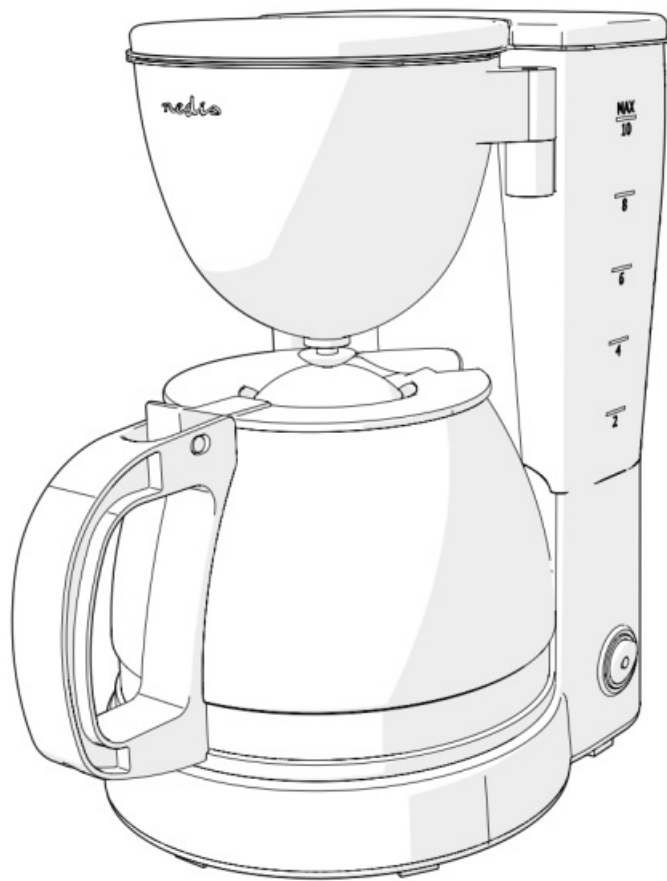


ned.is/kacm150ewt



ned.is/kacm150ebk

Nedis BV

De Tweeling 28, 5215 MC 's-Hertogenbosch – The Netherlands

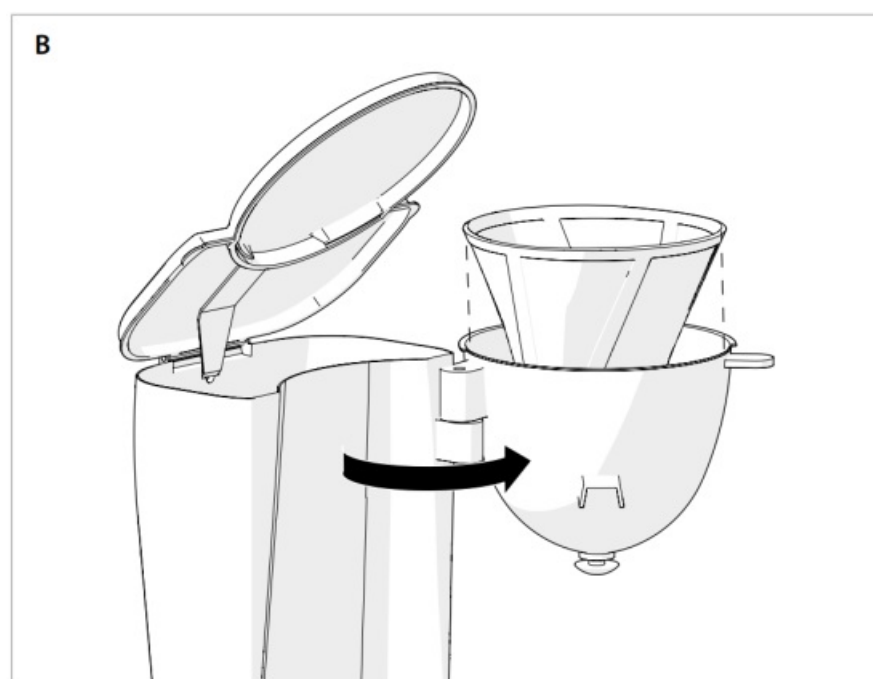

Quick start guide

Coffee Maker

KACM150EBK KACM150EWT



For more information see the extended manual online: ned.is/kacm150ebk ned.is/kacm150ewt

Intended use

The Nedis KACM150EBK / KACM150EWT is a coffee maker with a water reservoir for up to 10 cups of coffee.

The product is intended for indoor use only.

This product is not intended for professional use.

This product can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved. Children shall not play with the product. Cleaning and user maintenance shall not be done by children without supervision.

The product is intended for use in household environments for typical housekeeping functions that may also be used by non-expert users for typical housekeeping functions, such as: shops, offices other similar working environments, farm houses, by clients in hotels, motels and other residential type environments and/or in bed and breakfast type environments.

Any modification of the product may have consequences for safety, warranty and proper functioning.

Specifications

Product	Coffee Maker
Article number	KACM150EBK / KACM150EWT
Dimensions (l x w x h)	21 x 16 x 29 cm
Power input	220 – 240 VAC ; 50-60 Hz
Rated power	750 W
Water tank capacity	10 cups
Cable length	70 cm

Main parts (image A)

- ① Water reservoir lid
- ② Brewing chamber lid
- ③ Brewing chamber
- ④ Jug lid
- ⑤ Coffee jug
- ⑥ Handle
- ⑦ Heating plate
- ⑧ 'MAX' indicator
- ⑨ Water reservoir
- ⑩ Water level indicator
- ⑪ Power button
- ⑫ Power cable

Safety instructions



WARNING

- Ensure you have fully read and understood the instructions in this document before you install or use the product. Keep the packaging and this document for future reference.
- Only use the product as described in this document.

- Do not use the product if a part is damaged or defective. Replace a damaged or defective product immediately.
- Do not drop the product and avoid bumping.
- Unplug the product from the power source and other equipment if problems occur.
- Do not use the product to heat anything other than water.
- If the surface is cracked, immediately disconnect the product from the power supply and do not use the product anymore.
- Do not let the power cable hang over the edge of a table or counter.
- Do not place the product in a cabinet when in use.
- Place the product on a stable and flat surface.
- Ensure no water enters the power outlet.
- Connect to a grounded outlet only.
- Do not unplug the product by pulling on the cable. Always grasp the plug and pull.
- Do not let the power cable touch hot surfaces.
- Do not expose the product to direct sunlight, naked flames or heat.
- Never immerse the product in water or place it in a dishwasher.
- Do not remove the top lid while the brewing cycle is in progress.
- Do not open the water reservoir during use.
- Never place an empty coffee jug on a hot heating plate, this may shatter the coffee jug.
- Unplug the product when not in use and before cleaning.
- Unplug the product from the power source before service and when replacing parts.
- Children of less than 8 years should be kept away unless continuously supervised.
- Usage by children should be supervised at all times.
- This product is not a toy. Never allow children or pets to play with this product.
- Cleaning and user maintenance shall not be done by children without supervision.
- Do not move the product during operation.
- Do not touch any hot surfaces.
- The temperature of accessible surfaces may be high when the product is operating.
- Do not fill the water reservoir above the "MAX" indicator.
- This product may only be serviced by a qualified technician for maintenance to reduce the risk of electric shock.

Before first use

Clean the brewing chamber **A** ③, coffee jug **A** ⑤ and the water reservoir **A** ⑨ with soap and rinse with water.



When you first use this product, perform two full brewing cycles without coffee to clean the inside of the product.

Brewing coffee (image B)



Do not fill the water reservoir above the "MAX" indicator.



Do not touch any hot surfaces.

A paper filter is required to start brewing coffee.

1. Open the water reservoir lid **A**①.
2. Fill the water reservoir **A**⑨ with 150 ml clean water for every cup of coffee.
3. Open the brewing chamber **A**③. See image **B**.
4. Place a paper filter (not included) into **A**③.
 - i** Usually one level spoon of grounded coffee is needed for one cup of coffee. Adjust the amount according to your personal taste.
5. Distribute the ground coffee evenly.
6. Close **A**③ and **A**①.
 - A clicking sound indicates **A**③ is closed correctly.
7. Place the coffee jug **A**⑤ on the heating plate **A**⑦.
8. Plug the power cable **A**⑫ into a power outlet.
 - i** Wait for 30 seconds after plugging in the power cable before switching on the product.
9. Press the power button **A**⑪ to start the brewing cycle.
 - A**⑪ lights up.
 - !** Do not open the lids **A**①② while the brewing cycle is in progress.
10. Wait one minute after the brewing cycle has finished to allow all the coffee to drip into **A**⑤.
 - !** Do not touch the heating plate **A**⑦ for 40 minutes.
11. Take **A**⑤ from **A**⑦.
12. Fill your cup with the brewed coffee.
 - !** Be careful, hot steam may escape.
 - i** Place **A**⑤ on **A**⑦ to keep the coffee warm for 40 minutes.
 - After 40 minutes the product automatically switches off.
13. Enjoy your coffee.
 - Press **A**⑪ to switch off the product.
14. Discard the used ground coffee.

Cleaning & Maintenance



Let the product cool down before cleaning it.



Do not immerse the product in water.



Do not expose the electrical connections to water or moisture.

Only the brewing chamber and the glass jug can be washed in a dishwasher. The rest of the product is not dishwasher safe and should be cleaned by hand in soapy water.

Clean the product regularly with a soft, clean, dry cloth. Avoid abrasives that can damage the surface.

Do not use aggressive chemical cleaning agents such as ammonia, acid or acetone when cleaning the product.

Cleaning and user maintenance shall not be done by children under the age of 8 and without supervision.

Do not attempt to repair the product. If the product does not operate correctly, replace it with a new product.

Descaling the product

1. Open **A**①③.
2. Fill **A**⑨ to the 'MAX' indicator **A**⑧ with one part white vinegar and three parts of cold water.
3. Place a paper filter (not included) into **A**③.

