



Nedis Single serve coffee machine with timer Instruction Manual

[Home](#) » [nedis](#) » Nedis Single serve coffee machine with timer Instruction Manual

Nedis Single serve coffee machine with timer Instruction Manual



Contents [[hide](#)

- 1 [Single serve coffee machine KACM310FBK](#)
- 2 [Intended use](#)
- 3 [Main parts \(image A\)](#)
- 4 [Specifications](#)
- 5 [Safety instructions](#)
- 6 [Before first use](#)
- 7 [Brewing coffee](#)
- 8 [Setting the clock](#)
- 9 [Setting the timer](#)
- 10 [Documents / Resources](#)
 - 10.1 [References](#)
- 11 [Related Posts](#)

Single serve coffee machine KACM310FBK



For more information see the extended manual online: ned.is/kacm310fbk

Intended use


The Nedis KACM310FBK is a coffee machine with a 0.42 L travel mug.

The product is intended for indoor use only.

The product is not intended for professional use.

Any modification of the product may have consequences for safety, warranty and proper functioning.

Main parts (image A)

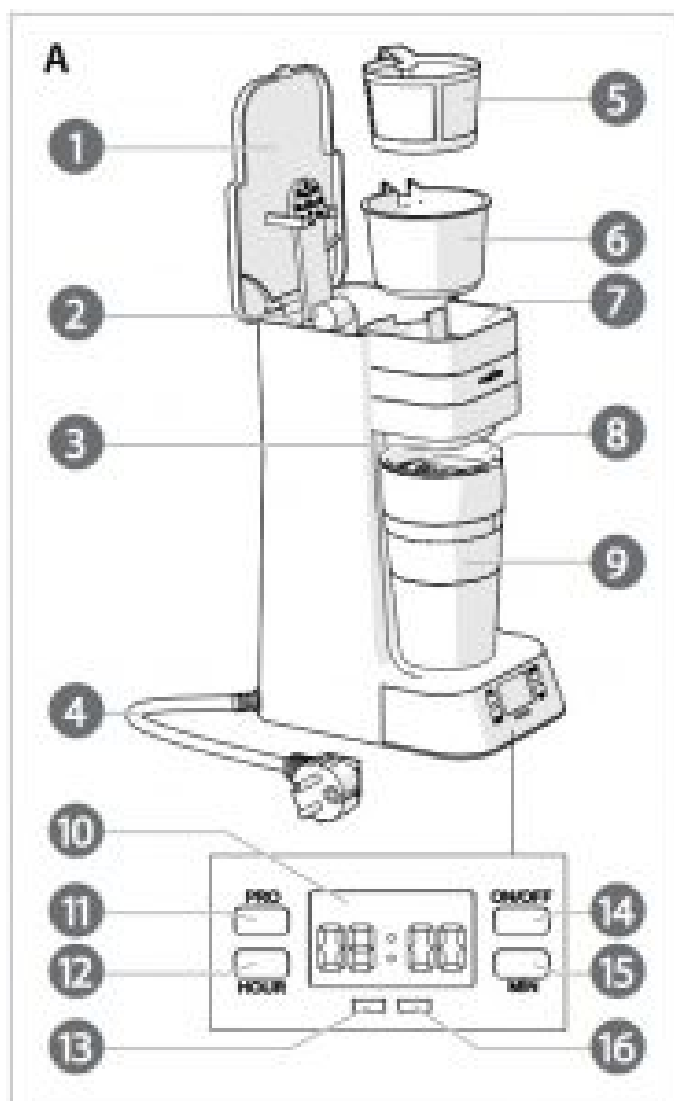

1. Top lid
2. Water tank
3. Coffee spout
4. Power cable
5. Filter
6. Funnel
7. Brewing chamber
8. Mug lid
9. Mug
10. LCD display
11. Program button
12. Hour button
13. Timed brewing indicator LED
14. Power button
15. Minute button
16. Brewing indicator LED

Specifications

Product	Single serve coffee machine
Article number	KACM310FBK
Dimensions (l x w x h)	175 x 125 x 280 mm
Weight	900 g
Power input	220 – 240 VAC 50 – 60 Hz ; 3 A
Rated power	650 – 750 W
Rated power	420 ml

Safety instructions



WARNING

- Only use the product as described in this manual.
- Do not use the product if a part is damaged or defective. Replace a damaged or defective product immediately.
- Do not drop the product and avoid bumping
- This product may only be serviced by a qualified technician for maintenance to reduce the risk of electric shock.
- Disconnect the product from the electrical outlet and other equipment if problems occur.
- Close supervision is necessary when the product is used by or near children, animals or infirm persons. Do not allow children to play with it or touch it.
- Keep the product away from heat sources. Do not place the product on hot surfaces or near open flames
- Do not remove the top lid while the brewing cycle is in progress.
- Do not cover the product.
- Do not use solvents to clean the product.
- Use distilled or clean tap water to fill the tank.
- Unplug the product when not in use and before cleaning.
- Do not place any objects on the product.
- Do not move the product during operation.
- Never immerse the product in water or place it in a dishwasher.

Before first use

- Clean the mug **A** ⑨, mug lid **A** ⑧, the filter **A** ⑤ and the funnel **A** ⑥ with soap and rinse with water.



When you first use this product, perform two full brewing cycles without coffee to clean the inside of the product.




















Brewing coffee






This coffee maker comes with a reusable filter.







A paper filter is not required.

1. Open the top lid A .
 2. Put 3 tablespoons of finely ground coffee or 4 tablespoons of regular ground coffee into A .
 3. Distribute the ground coffee evenly
 4. Place A  into A .
 5. Place A   into the brewing chamber A .
 6. Fill the water tank A  with clean water.
 7. Close A .
 8. Place A  under the coffee spout A .
 9. Plug the power cable A  into the power outlet.
 10. Press the power button A  to start the brewing cycle.
-  The brewing indicator LED A  switches on to indicate the brewing cycle had started.
-  Do not remove the top lid A  while the brewing cycle is in progress.
11. Wait a few minutes after the brewing cycle has finished to allow all the coffee to drip into the mug.
 12. Allow the product to cool down.
 13. Take A  from A .
 14. Discard the used ground coffee.
 15. Enjoy your coffee.

Setting the clock

- Press the hour button A  and minute button A  repeatedly to set the current time.
-  Press and hold the button to scroll through the numbers quickly.

Setting the timer


1. Press the program button A .
2. Press A  and A  repeatedly to set the start time for the brewing cycle.
3. Press A  again to confirm the start time.



The timed brewing indicator LED A ¹³ switches on when the timed brewing cycle begins.

4. Press and hold A ¹¹ for 3 seconds to cancel the timer.

Documents / Resources

 <p>nedis Single serve coffee machine with timer KACM310FBK</p>	<p>nedis Single serve coffee machine with timer [pdf] Instruction Manual Single serve coffee machine with timer, KACM310FBK</p>
--	---

References

- [Coffee Maker](#) | [Maximum capacity: 0.4 l](#) | [1](#) | [Keep warm feature](#) | [Switch on timer](#) | [Black / Silver](#) | [Nedis](#)