




nedis Smart Extension Socket User Guide

[Home](#) » [nedis](#) » nedis Smart Extension Socket User Guide 

nedis Smart Extension Socket User Guide



WIFIP311FWT

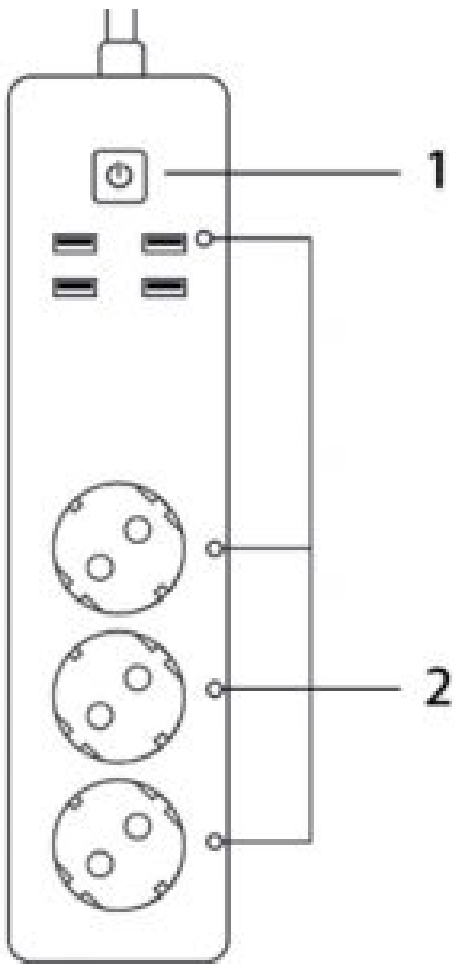

1. Power Button
2. Switch Ports

Contents

- [1 Smart Extension Socket](#)
- [2 Safety](#)
- [3 Cleaning and maintenance](#)
- [4 Support](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)

Smart Extension Socket

Description

1. On/off button
Reset button
2. Status indicator

Use

1. Download and install the app "Nedis SmartLife" from Apple App Store or Google Play Store on your mobile

device.

2. Launch the app “Nedis SmartLife”.
3. Create a new account or log in to your existing account.
4. Tap “+” to add the device.
5. Select “Smart Plug” from the list of products.
6. Plug in the smart extension socket.
7. If the Reset button does not flash: Press and hold the reset button for 6 seconds.
If the Reset button flashes: Confirm in the app.
8. Confirm the Wi-Fi network and password.
9. Enter the device name.

Note: The device name will also be used by Amazon Alexa and Google Home.

Safety



- To reduce risk of electric shock, this product should only be opened by an authorized technician when service is required.
- Disconnect the product from the mains and other equipment if a problem should occur.
- Read the manual carefully before use. Keep the manual for future reference.
- Only use the device for its intended purposes. Do not use the device for other purposes than described in the manual.
- Do not use the device if any part is damaged or defective. If the device is damaged or defective, replace the device immediately.
- The device is suitable for indoor use only. Do not use the device outdoors.
- Do not expose the product to water or moisture.
- Do not touch the device with wet hands.

Cleaning and maintenance

Warning!

- Do not use cleaning solvents or abrasives.
- Do not clean the inside of the device.
- Do not attempt to repair the device. If the device does not operate correctly, replace it with a new device.
- Clean the outside of the device using a soft, damp cloth.

Support


If you need further help or have comments or suggestions please visit www.nedis.com/support

T: +31 (0)73-5993965

E: service@nedis.com

W: www.nedis.com/contact

Documents / Resources



Quick Scan Adapter (2x)

Medusa Switcher (2x)

Accessories (2)

Case & accessories (2)

Case & accessories (2)

Quick setup (2)

Porting guide (2x)

Shipping guide (2x)

WIFI311FWT

Medusa Switcher (2x)

Accessories (2)

Case & accessories (2)

Case & accessories (2)

Quick setup (2)

Porting guide (2x)

Shipping guide (2x)

[nedis Smart Extension Socket](#) [pdf] User Guide

Smart Extension Socket, WIFI311FWT

Smart Extension Socket

Manuals+,