



nedis Soundbase with built-in subwoofer User Manual

[Home](#) » [nedis](#) » nedis Soundbase with built-in subwoofer User Manual

nedis Soundbase with built-in subwoofer



Contents [[hide](#)]

- [1 Specifications](#)
- [2 Description](#)
- [3 Pairing the speaker](#)
- [4 Safety](#)
 - [4.1 General safety](#)
 - [4.2 Electrical safety](#)
 - [4.3 Battery safety](#)
- [5 Cleaning and maintenance](#)
 - [5.1 Warning!](#)
 - [5.2 Support](#)
 - [5.3 Contact](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)


Specifications

- RMS: **70 W (2x 10 W + 50 W Bass)**
- Peak power: **210 W (2x 30 W + 150 W Bass)**
- Speaker channels: **2.1**
- Bluetooth version: **2.1 + EDR**

- Frequency range: **2400 – 2480 MHz**
- Max. transmission power: **4 dBm**
- Subwoofer size: **5.25"**
- Connections: **Optical, coax, RCA (L, R), 3.5mm aux, USB, 2x HDMI input, 1x HDMI output (with ARC)**
- Maximum supported TV weight: **50 kg**
- Display: **LED**
- Power Supply: **AC 100-240V ~ 50/60Hz**

Description

Soundbase (fig. A)

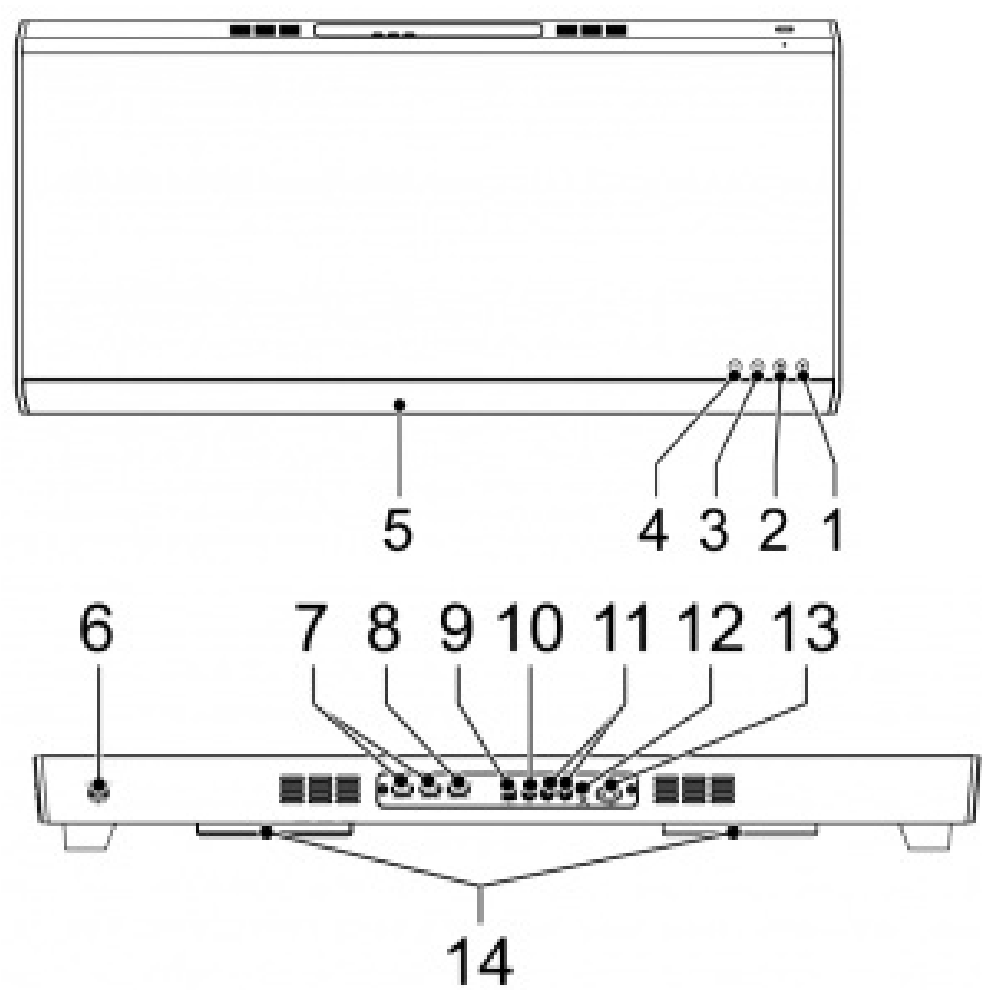


1. On/standby button	<ul style="list-style-type: none"> • Press the button to switch on the device. Press and hold the button to set the device to standby mode. <p>Note: If the sound bar is idle and no input signals are being received for about 1 hour , the device will automatically switch to standby mode.</p>
----------------------	--

2. Sound effect button	<ul style="list-style-type: none"> Press the button to select the sound effect: music sound or movie surround sound .
	<ul style="list-style-type: none"> Simultaneously press the on/standby button and the sound effect button to select the mode: HDMI1 / HDMI2 / ARC / Bluetooth / Optical / Coaxial / AUX / USB. The display shows the selected mode.
3. Volume + button	<ul style="list-style-type: none"> Press the button to increase the volume.
4. Volume – button	<ul style="list-style-type: none"> Press the button to decrease the volume.
5. Display	<ul style="list-style-type: none"> The display shows the selected mode. <p>Note: The display will go off automatically if the device is idle and no input signals are being received for 5 minutes. Press one of the buttons to light up the display.</p>
6. USB port	<ul style="list-style-type: none"> Connect a USB stick to the USB port.
7. HDMI input (1/2) (5V/ 1.0A)	<ul style="list-style-type: none"> Connect an HDMI cable to the HDMI input and to the TV.
8. HDMI output (with ARC)	<ul style="list-style-type: none"> Connect an HDMI cable to the HDMI output and to the TV. <p>Note: “ARC” stands for “Audio Return Channel”. ARC transfers a digital audio signal to the HDMI output. The ARC function can be enabled only when the device is connected to a TV that supports ARC and the HDMI cable also supports ARC.</p>
9. Optical input (digital)	<ul style="list-style-type: none"> Connect an optical cable to the optical input and to the TV or other audio device.
10. Coaxial input (digital)	<ul style="list-style-type: none"> Connect a coaxial cable to the coaxial input and to the TV or other audio device.

11. RCA output	<ul style="list-style-type: none"> To use an external amplifier, connect the RCA cable to the RCA output of the device and to the external amplifier. Make sure that each plug of the RCA cable is connected according to the corresponding colour (red/white).
12. AUX input (3.5 mm) (analog)	<ul style="list-style-type: none"> Connect an AUX cable to the AUX input and to the TV or other audio device.
13. AC input	<ul style="list-style-type: none"> Connect the power adapter to the AC input and to the wall socket.
14. Subwoofer	

Remote control (fig. B)

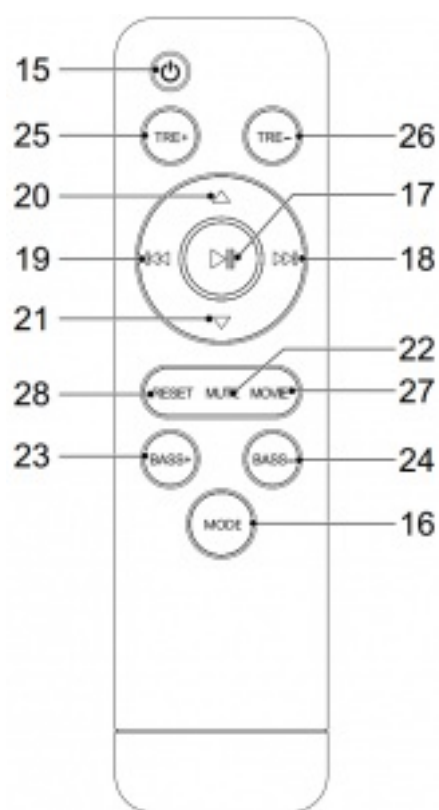

15. On/standby button	<ul style="list-style-type: none"> Press the button to switch on the device. Press the button again to set the device to standby mode.
16. Mode button	<ul style="list-style-type: none"> Press the button to select the mode: HDMI1 / HDMI2 / HDMI (with ARC) / Bluetooth / Optical / Coaxial / AUX (3.5 mm & RCA) / USB. The display shows the selected mode.

17. Play/pause button	<ul style="list-style-type: none"> Bluetooth: Press the button to play or pause the track. <p>Note: If the speaker is already connected and you want to connect to a different device, press and hold the button for 3 seconds to stop the current Bluetooth connection and start pairing the new device.</p>
18. Next button	<ul style="list-style-type: none"> Bluetooth: Press the button to play the next track.
19. Previous button	<ul style="list-style-type: none"> Bluetooth: Press the button to play the previous track.
20. Volume + button	<ul style="list-style-type: none"> Press the button to increase the volume.
21. Volume – button	<ul style="list-style-type: none"> Press the button to decrease the volume.
22. Mute button	<ul style="list-style-type: none"> Press the button to mute or unmute the sound.
23. Bass + button	<ul style="list-style-type: none"> Press the button to increase the bass.
24. Bass – button	<ul style="list-style-type: none"> Press the button to decrease the bass.
25. Treble + button	<ul style="list-style-type: none"> Press the button to increase the treble.
26. Treble – button	<ul style="list-style-type: none"> Press the button to decrease the treble.
27. Sound effect button	<ul style="list-style-type: none"> Press the button to select the sound effect: music sound or movie surround sound.
28. Reset button	<ul style="list-style-type: none"> Press the button to reset the device to the default settings.
29. Battery compartment	<ul style="list-style-type: none"> Open the battery compartment. Insert the batteries (2x AAA, 1.5V) into the battery compartment. Make sure that the battery polarity (+/-) matches the polarity markings inside the battery compartment. Close the battery compartment.

Pairing the speaker

- Switch on the device.
- Set the source to Bluetooth.
- Activate Bluetooth on your Bluetooth device.
- Search for new devices on the Bluetooth device.
- Select the device: "SPSB430BK".
- The Bluetooth device will confirm when the pairing is completed.

Safety

General safety

- Read the manual carefully before use. Keep the manual for future reference.
- The manufacturer is not liable for consequential damages or for damages to property or persons caused by nonobservance of the safety instructions and improper use of the device.
- The device can be used by children from 8 years and above and by persons with a physical, sensory, mental or motor disability, or lack of experience and knowledge if they are supervised or instructed on how to use the device in a safe way and understand the hazards involved. Children shall not play with the device. Cleaning and user maintenance shall not be made by children without supervision.
- Only use the device for its intended purposes. Do not use the device for other purposes than described in the manual.
- **Do not** use the device if any part is damaged or defective. If the device is damaged or defective, replace the device immediately.
- The device is suitable for indoor use only. Do not use the device outdoors.
- The device is suitable for domestic use only. Do not use the device for commercial purposes.
- **Do not** use the device in locations with high humidity, such as bathrooms and swimming pools.
- **Do not** use the device near bathtubs, showers, basins or other vessels containing water

Electrical safety



- To reduce risk of electric shock, this product should only be opened by an authorized technician when service is required.
- Disconnect the product from the mains and other equipment if a problem should occur.
- **Do not** use the device if the mains cable or mains plug is damaged or defective. If the mains cable or mains plug is damaged or defective, it must be replaced by the manufacturer or an authorised repair agent.
- Before use, always check that the mains voltage is the same as the voltage on the rating plate of the device.
- **Do not** move the device by pulling the mains cable. Make sure that the mains cable cannot become entangled.
- **Do not** immerse the device, the mains cable or the mains plug in water or other liquids.
- **Do not** leave the device unattended while the mains plug is connected to the mains supply.

- **Do not** use an extension cable.

Battery safety

- Use only the batteries mentioned in the manual.
- **Do not** use old and new batteries together.
- **Do not** use batteries of different types or brands.
- **Do not** install batteries in reverse polarity.
- **Do not** short-circuit or disassemble the batteries.
- **Do not** expose the batteries to water.
- **Do not** expose the batteries to fire or excessive heat.
- Batteries are prone to leakage when fully discharged. To avoid damage to the product, remove the batteries when leaving the product unattended for longer periods of time.
- If liquid from the batteries comes into contact with skin or clothing, immediately rinse with fresh water.

Cleaning and maintenance

Warning!

- Before cleaning or maintenance, switch off the device, remove the mains plug from the wall socket and wait until the device has cooled down completely.
- **Do not** use cleaning solvents or abrasives.
- **Do not** clean the inside of the device.
- **Do not** attempt to repair the device. If the device does not operate correctly, replace it.
- Clean the device using a soft, damp cloth. Thoroughly dry the device with a clean, dry cloth.

Support

If you need further help or have comments or suggestions please visit www.nedis.com/support

Contact

NEDIS B.V., De Tweeling 28, 5215 MC 's-Hertogenbosch, The Netherlands



Documents / Resources



[nedis Soundbase with built-in subwoofer](#) [pdf] User Manual
Soundbase with built-in subwoofer, SPSB430xx