

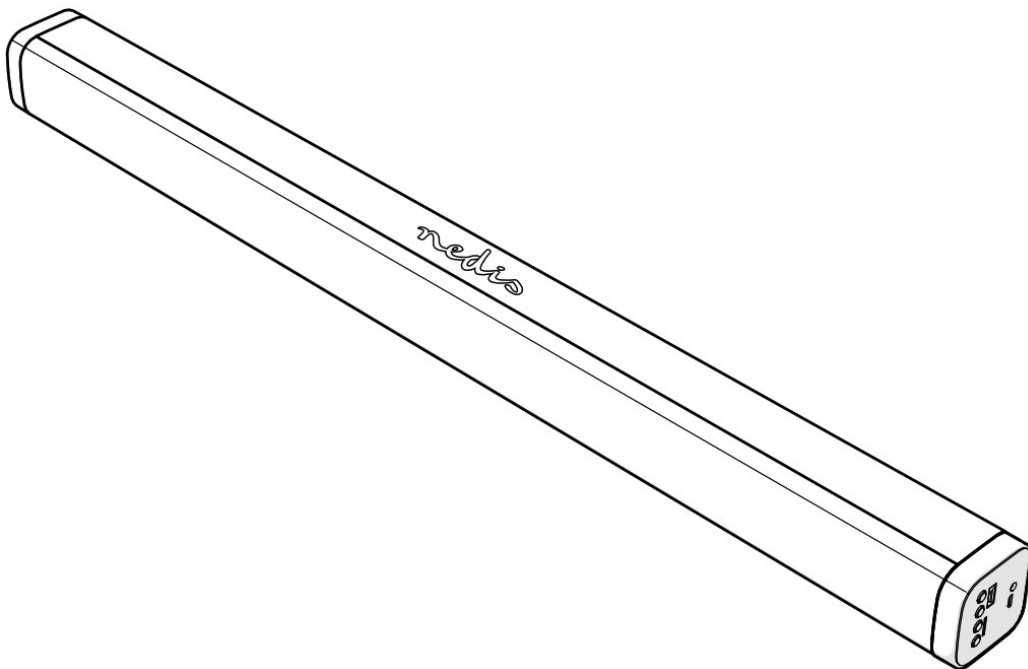 


nedis SPSB200BK Soundbar with 40 W Peak Power Sound User Manual

[Home](#) » [nedis](#) » nedis SPSB200BK Soundbar with 40 W Peak Power Sound User Manual 

nedis

Soundbar
With 40 W peak power sound
SPSB200BK





<http://ned.is/SPSB200BK>

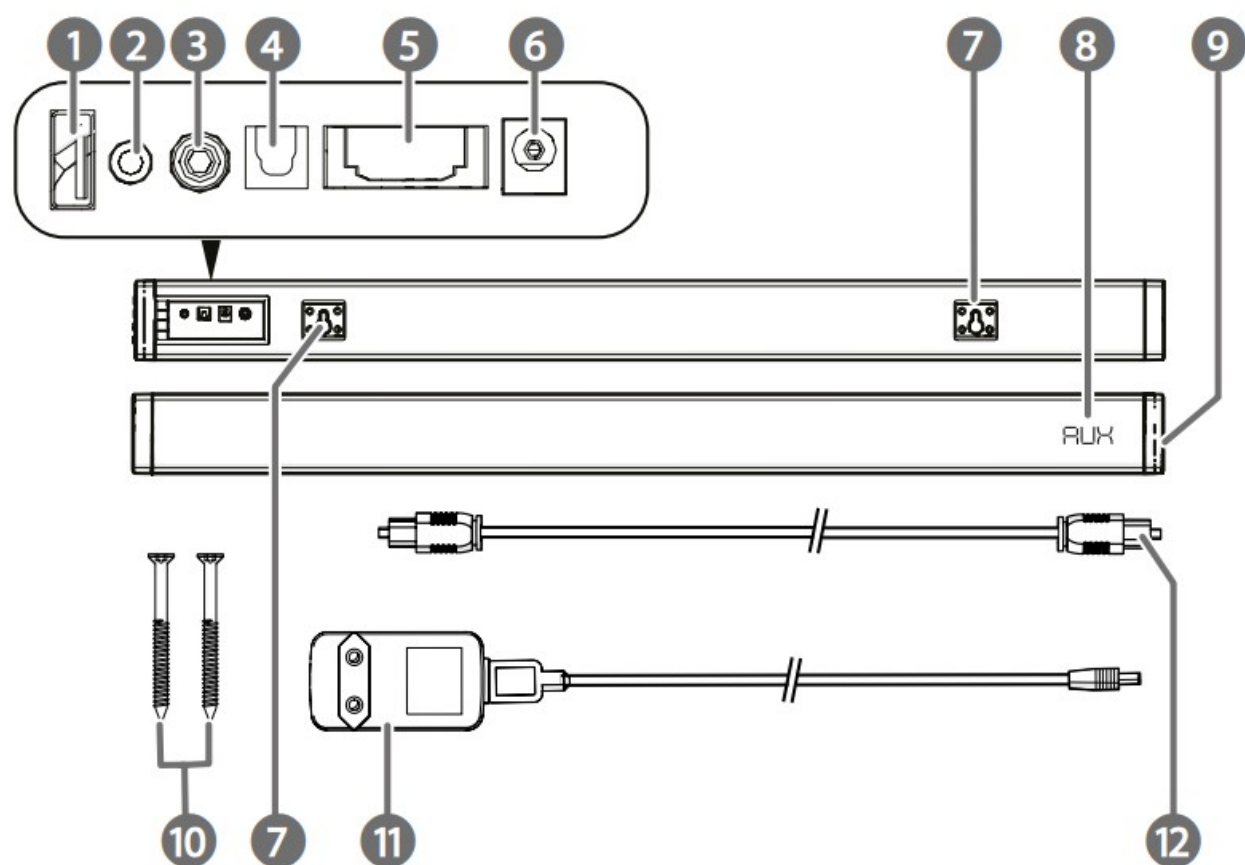 
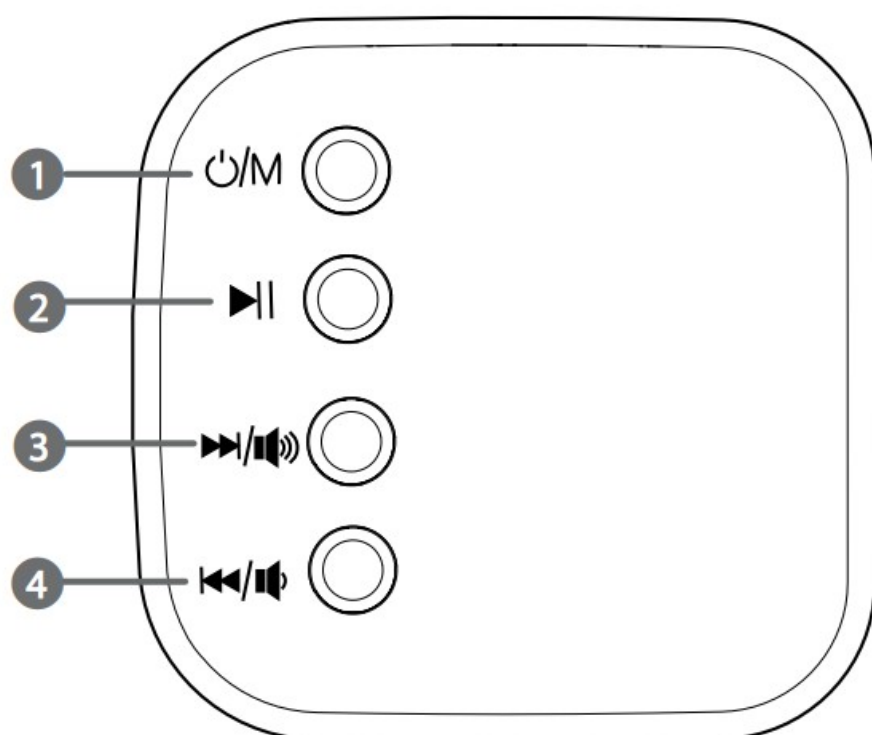 


ned.is/spsb200bk
Quick start guide

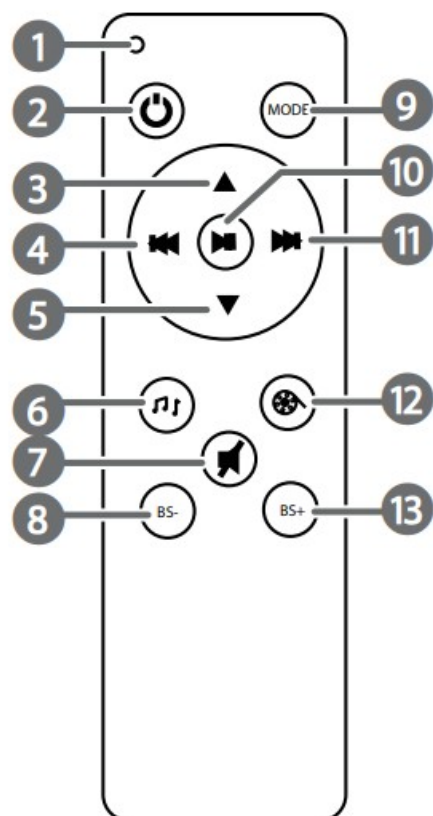 
Contents

- [1 SPSB200BK Soundbar with 40 W Peak Power Sound](#)
- [2 Specifications](#)
- [3 Intended use](#)
- [4 Safety instructions](#)
- [5 Declaration of Conformity](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)

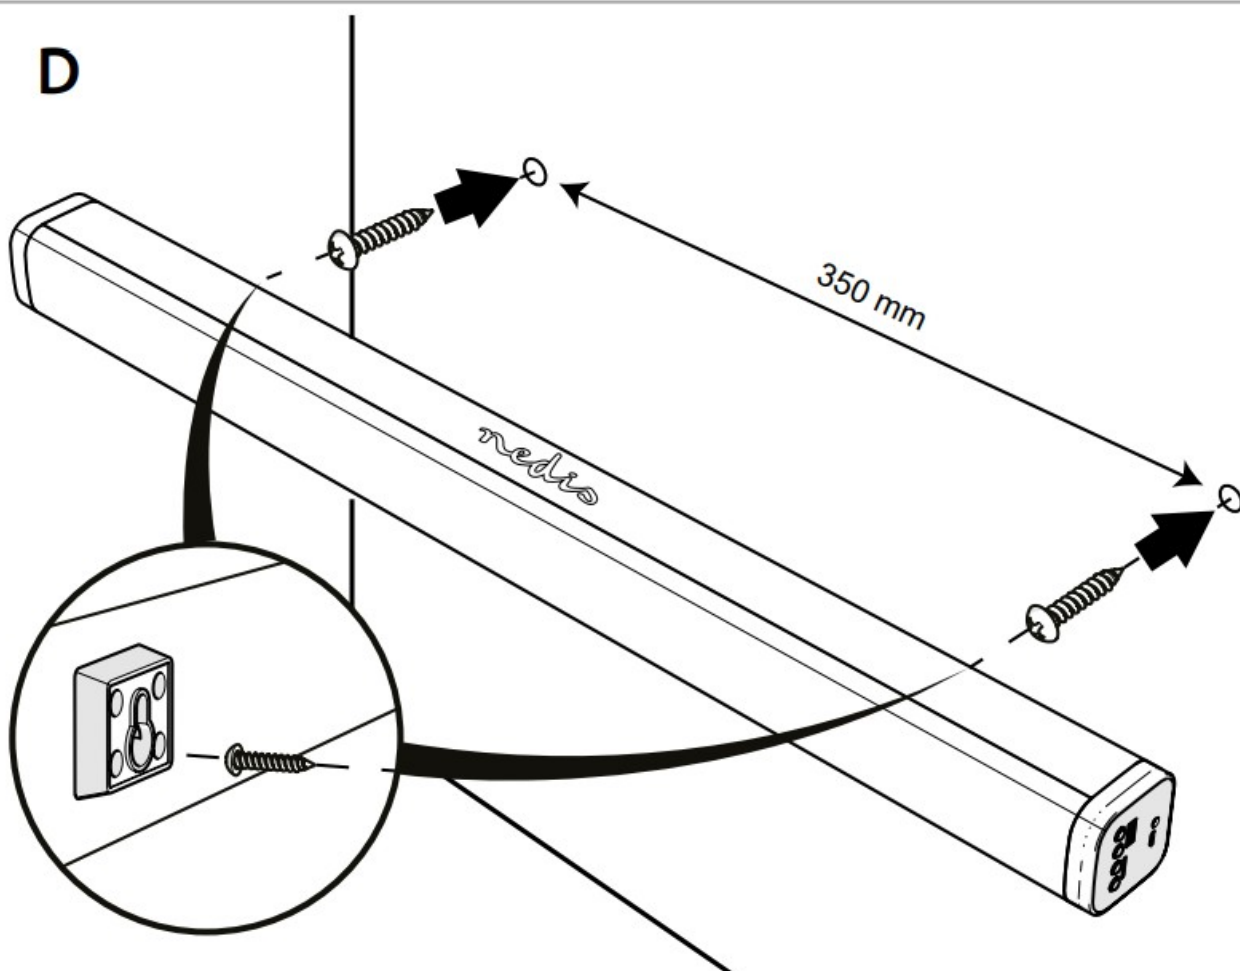 
SPSB200BK Soundbar with 40 W Peak Power Sound

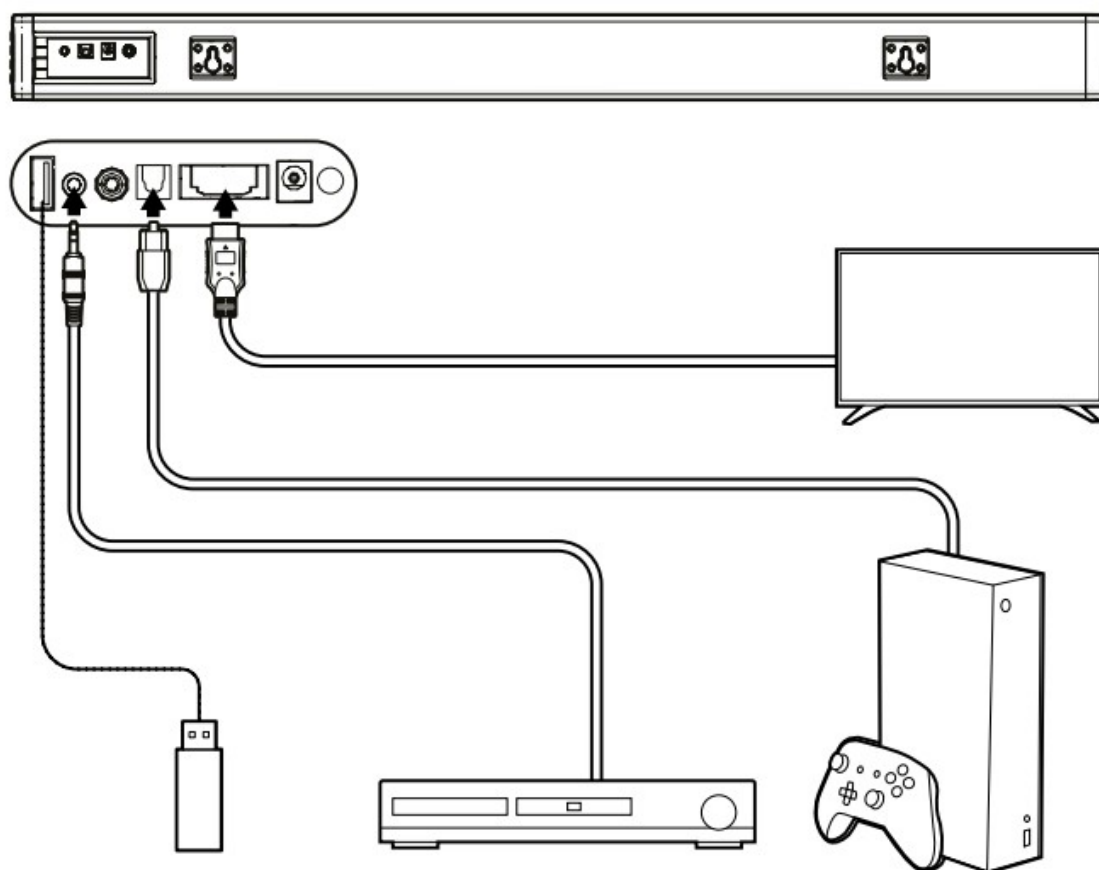 
A**B**

C



D



E

Specifications

Product	Soundbar
Article number	SPSB200BK
Peak power	40 W (2x 20W)
RMS	40 W (2x 20W)
Speaker channels	2
Bluetooth® version	5
Bluetooth® frequency range	2402 – 2480 MHz
Maximum transmission power	2 dBm
Driver diameter	52 mm
Connections	Optical Toslink Coax 3.5 mm AUX HDMI output (ARC) USB
Power input	18.0 V DC / 1.5 A
Power input adapter	100 – 240 v AC 50-60 Hz / 0.8 A

Soundbar

SPSB200BK



For more information see the extended manual online: ned.is/spsb200bk

Intended use

This product is a soundbar that can be mounted on the wall or placed under your tv to play audio from your media device via Bluetooth®, audio cable or a USB device.

The product is intended for indoor use only.

The product is not intended for professional use.

Any modification of the product may have consequences for safety, warranty and proper functioning.

Always store this information with the product for use in the future.

Main parts (image A)

1 USB port	7 Mounting holes
2 AUX input	8 LED display
3 Coax input	9 Control panel
4 Optical audio input	q Mounting screws
5 HDMI input	w Power adapter
6 Power input	e Optical audio cable (Toslink)

Control panel (image B)

1 Power/Mode button	3 Next button/Volume up
2 Play/pause button	4 Previous button/Volume down

Remote control (image C)

1 Power button	7 Bass down button
2 Volume up button	8 Mode button
3 Previous button	9 Play/pause button
4 Volume down button	q Next button
5 Music mode button	w Movie mode button
6 Mute button	e Bass up button

Safety instructions




– WARNING

- Ensure you have fully read and understood the instructions in this document before you install or use the product. Keep the packaging and this document for future reference.
- Only use the product as described in this document.
- Do not use the product if a part is damaged or defective. Replace a damaged or defective product immediately.
- Do not drop the product and avoid bumping.
- This product may only be serviced by a qualified technician for maintenance to reduce the risk of electric shock.
- Do not expose the product to water or moisture.

- Do not block ventilation openings and make sure that there is enough space around the product.
- Keep the product away from heat sources. Do not place the product on hot surfaces or near open flames.
- Before use, always check that the mains voltage is the same as the voltage on the rating plate of the product.
- Unplug the product if you do not plan on using the product for an extended period of time.

Installation to the wall (image D)

1. Drill 2 holes, as indicated in image D.  Insert plugs into the holes.
2. Insert the screws A10 into the plugs.
3. Mount the product onto the screws A10 using the mounting holes A7

Connecting the product (image E)

Connect the cables to the product as shown in image E.

Placing batteries in the remote control

1. Open the battery compartment on the back of the remote.
2. Insert the two required AAA batteries (not included) into the battery compartment.
3. Close the battery compartment.

Press and hold the Power/Mode button B1 to switch on the product.

Listening modes

To change listening mode:

- Press the music mode button C5 to optimize the audio settings for listening to music.
- Press the movie mode button C11 to optimize the audio settings for watching movies.

Input modes

To change input mode:

- Press the Power/Mode button B1 or the mode button C8.

Display	Input mode
OPT	Optical input mode
COA	Coaxial input mode
HD	HDMI input mode
AUX	Aux input mode
BT	Bluetooth input mode
USB	USB input mode

Playing music from a digital input source

1. Plug the Toslink cable A12 in the optical audio input A4.

2. Plug the other end of the Toslink cable into your source device.
3. Press the Power/Source button B1 or the mode button C8 until LED display A8 shows "OPT".

Playing music from a Bluetooth® audio source

1. Press the Power/Mode button B1 or the mode button C8 until LED display A8 shows "bt". Pairing is now active.
2. Activate Bluetooth® on your audio source and connect with the product (SPSB200BK).

Playing music from an AUX audio source

1. Plug the 3.5 mm audio cable (not included) into the AUX input A2.
2. Plug the other end of the 3.5 mm audio cable (not included) into your source device.
3. Press the Power/Source button B1 or the mode button C9 until LED display A8 shows "AUX".

Playing music from an USB flash drive

1. Plug the USB storage device (not included) in the USB input A1.
2. Press the Power/Source button B1 or the mode button C8 until LED display A8 shows "USB".

Controlling the video/music

1. Press next button C10 (or next button/Volume up B3) or the previous button C4 (or Previous button/volume up B4) to skip between tracks.
2. Press the increase volume level button C3 (or next button/Volume up B3) or decrease volume level button C4 (or Previous button/volume down B4) to control the volume.
3. Press the pause/play button B2 or the pause / play button C9 to play or pause a track.
4. Press the increase bass volume button C12 or the decrease bass volume button C8 to control the bass volume.
5. Press the mute button C6 to mute or unmute the sound. You can also control music and volume from your audio source.

Declaration of Conformity

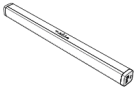

We, Nedis B.V. declare as manufacturer that the product SPSB200BK from our brand Nedis®, produced in China, has been tested according to all relevant CE standards and regulations and that all tests have been passed successfully. This includes, but is not limited to the RED 2014/53/EU regulation. The complete Declaration of Conformity (and the safety datasheet if applicable) can be found and downloaded via: nedis.com/spsb200bk#support



Nedis BV

De Tweeling 28, 5215 MC 's-Hertogenbosch – The Netherlands

Documents / Resources

 <p>nedis Soundbar With 40 W peak power sound SPSB200BK</p> 	<p>nedis SPSB200BK Soundbar with 40 W Peak Power Sound [pdf] User Manual SPSB200BK Soundbar with 40 W Peak Power Sound, SPSB200BK, Soundbar with 40 W Peak Power Sound, 40 W Peak Power Sound, Power Sound</p>
--	--

References

- [Soundbar | 2.0 | DSP Programs | 40 W | 1x 3.5 mm / 1x Coax Audio / 1x Optical / 1x USB | 1x HDMI \(with ARC\) | Bluetooth® | Mountable | Black](#)
- [Soundbar | 2.0 | DSP Programs | 40 W | 1x 3.5 mm / 1x Coax Audio / 1x Optical / 1x USB | 1x HDMI \(with ARC\) | Bluetooth® | Mountable | Black](#)
- [Soundbar | 2.0 | Programy DSP | 40 W | 1x 3,5 mm / 1x koaxiální zvuk / 1x optický / 1x USB | 1x HDMI \(s ARC\) | Bluetooth® | Namontovatelné | Černá](#)
- [Soundbar | 2.0 | DSP-Programme | 40 W | 1x 3.5 mm / 1x Coax Audio / 1x Optisch / 1x USB | 1x HDMI \(mit ARC\) | Bluetooth® | Montierbar | Schwarz](#)
- [Soundbar | 2.0 | DSP Programmer | 40 W | 1 x Optisk / 1x 3.5 mm / 1x Coax Audio / 1x USB | 1x HDMI \(with ARC\) | Bluetooth® | Kan monteres | Sort](#)
- [Barra de Sonido | 2.0 | Programas DSP | 40 W | 1x 3.5 mm / 1x audio coaxial / 1x óptico / 1x USB | 1x HDMI \(con ARC\) | Bluetooth® | Montable | Negro](#)
- [Soundbar | 2.0 | DSP | 40 W | 1x 3.5 mm / 1x Coax Audio / 1x Optinen / 1x USB | 1x HDMI \(tukee ARC\) | Bluetooth® | Kiinnitettävä | Musta](#)
- [Barre de son | 2.0 | Programmes DSP | 40 W | 1x 3.5 mm / 1x Coax Audio / 1x Optique / 1x USB | 1x HDMI \(with ARC\) | Bluetooth® | Montable | Noir](#)
- [Soundbar | 2.0 | DSP Programmi | 40 W | 1x 3,5 mm / 1x cavo audio coassiale / 1x Ottico / 1x USB | 1x HDMI \(con ARC\) | Bluetooth® | montabile | Nero](#)
- [Soundbar | 2.0 | DSP-Programma's | 40 W | 1x 3,5 mm / 1x Coax Audio / 1x Optisch / 1x USB | 1x HDMI™ \(met ARC\) | Bluetooth® | Monteerbaar | Zwart](#)
- [Soundbar | 2.0 | DSP Program | 40 W | 1 stk. optisk / 1x 3.5 mm / 1x Coax Audio / 1x USB | 1x HDMI \(med ARC\) | Bluetooth® | Kan monteres | Sort](#)
- [Soundbar | 2.0 | DSP Programs | 40 W | 1x 3.5 mm / 1x Coax Audio / 1x Optical / 1x USB | 1x HDMI \(with ARC\) | Bluetooth® | Mountable | Black](#)
- [Soundbar | 2.0 | DSP-program | 40 W | 1x 3.5 mm / 1x Coax Audio / 1x Optisk / 1x USB | 1x HDMI \(with ARC\) | Bluetooth® | Monterbar | Svart](#)
- [Soundbar | 2.0 | DSP Programs | 40 W | 1x 3.5 mm / 1x Coax Audio / 1x Optical / 1x USB | 1x HDMI \(with ARC\) | Bluetooth® | Mountable | Black](#)
- [User Manual](#)

Manuals+. Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.