



[Home](#) » [NEEWER](#) » **NEEWER GC30C Inflatable Light Instruction Manual** 

Contents [[hide](#)]

- [1 NEEWER GC30C Inflatable Light](#)
- [2 Product Usage Instructions](#)
- [3 Package Contents](#)
- [4 Product Illustration](#)
- [5 Instructions for Use](#)
- [6 Battery Alerts](#)
- [7 Specifications](#)
- [8 Frequently Asked Questions](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)

NEEWER[®]

NEEWER GC30C Inflatable Light



Product Specifications

- Inflatable light with magnetic mount and 1/4 thread for light stand connection
- Features bi-colour mode and 17 special scenes
- Power options include Type-C charging-only mode or charge/discharge mode
- Includes hue (H), saturation (S), and intensity (I) adjustment in HSI mode

Product Usage Instructions

Inflation and Powering On

1. Inflate the product using an air pump or by exhaling into the valve.
2. Ensure the product is fully charged and discharged before recharging.
3. Press and hold the power button for 3 seconds to power on/off.

Brightness and Colour Temperature Adjustment

- **Up/Brightness + Button:** Increase brightness by 1% increment or press and hold for continuous increase.
- **Down/Brightness – Button:** Decrease brightness by 1% increment or press and hold

for continuous decrease.

- **Right/Colour Temperature + Button:** Increase colour temperature by 1% or press and hold for continuous increase.
- **Left/Colour Temperature – Button:** Decrease colour temperature by 1% or press and hold for continuous decrease.

Special Scenes and Modes Selection

1. Double-press the power button for scene selection.
2. Use the left, right, and power buttons to choose between bi-colour scenes, special scenes, and HSI scenes.
3. Triple-press to enter HSI mode for hue, saturation, and intensity adjustments.

Miscellaneous Usage Notes

- Avoid disassembly, unauthorised modifications, or use of non-original chargers.
- Do not place near flammable materials or expose to corrosive fluids.
- Avoid high-temperature, high-humidity environments and sharp objects.
- Store the product in a cool place after use to prevent damage.

Package Contents



Inflatable LED Tube Light ×1




Magnetic Stand ×1



USB C Charging
Cable ×1




Air Pump
×1

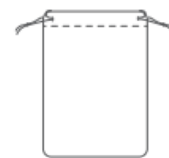

Storage Bag
×1

 Product Illustration

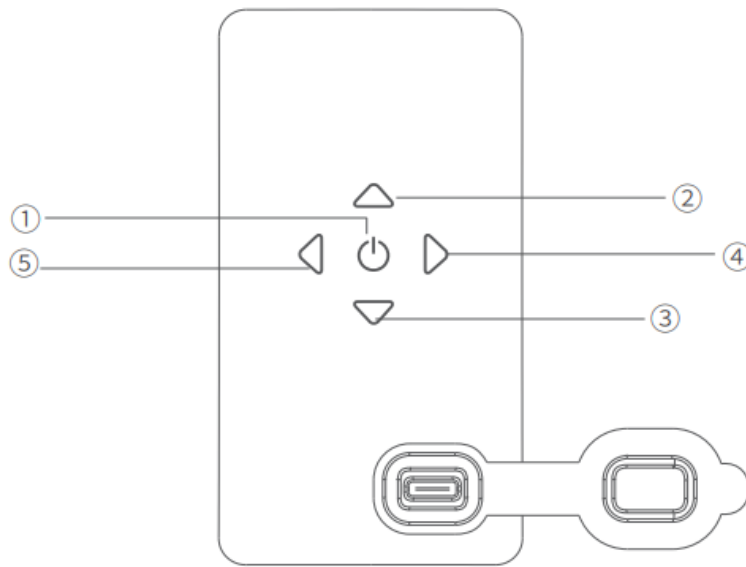

1. **Power button:**

1. Short press to activate. Press and hold for 3 seconds to power on; repeat to power off.
2. When powered on, double-press for scene selection. Use the left, right, and power buttons to select bi-colour scenes, 17 special scenes, and HSI scenes.
3. In bi-colour mode, short press to cycle through brightness levels: 0% – 25% – 50% – 75% – 100% – 0%.
4. In scene selection mode, short-press the up or down button to enter charge/discharge selection. Then, press the left or right button to choose between Type-C charging-only mode or charge/discharge mode.
5. Triple-press to enter HSI mode. Use the up and down buttons to select hue (H), saturation (S), and intensity (I), then use the left and right buttons to adjust values.
 - In this mode, double-press the power button to return to scene selection.

2. **Up/Brightness + Button:**

- In bi-colour mode, press once to increase brightness by 1% increment, press and hold to increase continuously.

3. **Down/Brightness – Button:**

- Press once to decrease brightness by 1% increment, press and hold to decrease continuously.

4. **Right/Color Temperature + Button:**

 
- In bi-colour mode, press once to increase colour temperature by 1%. Press and hold to increase continuously.

5. **Left/Colour Temperature – Button**


- In bi-colour mode, press once to decrease colour temperature by 1%. Press and hold to decrease continuously.

Instructions for Use

1. Inflate before powering on. Inflate by exhaling into the valve or by using a manual or electric air pump (sold separately);
2. When used for the first time, the product should be completely charged and discharged before recharging.

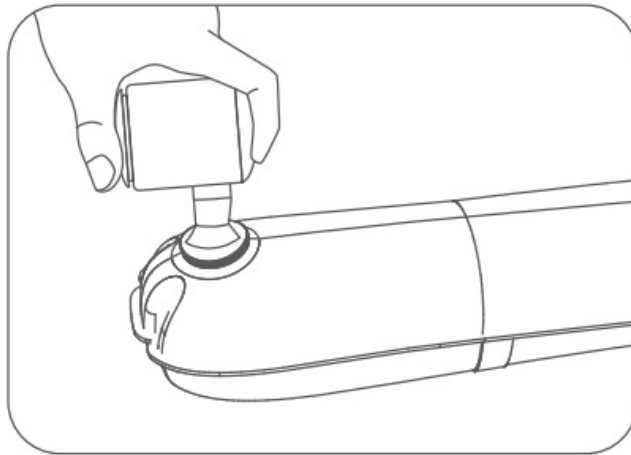

 3. The inflatable light features a magnetic mount and a 1/4" thread for light stand connection;
4. Can be suspended.

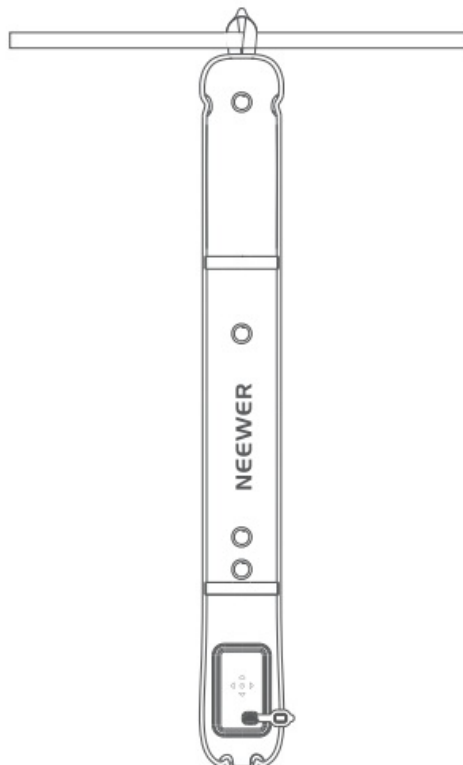

Instructions for Use

Special Scenes

F01	 Lightning	F02	 Paparazzi	F03	 Defective Bulb
F04	 Explosion	F05	 Welding	F06	 CCT Flash
F07	 Color Flash	F08	 CCT Pulse	F09	 Color Pulse
F10	 Police Car	F11	 Candlelight	F12	 Color Loop
F13	 CCT Loop	F14	 Brightness Loop	F15	 Screen
F16	 Fireworks	F17	 Party		

Battery Alerts

1. Do not disassemble, modify, or repair the built-in battery. Any unauthorised modification may result in battery leakage, overheating, fire, or explosion.
2. Do not use a non-original or uncertified charger to charge the product to prevent overcharging, short circuits, or other hazards.
3. If abnormal charging speed or unusual blinking of the indicator are observed, please stop using the product immediately and contact our after-sales service for assistance.
4. Do not place the product near flammable or explosive materials.

Notes

1. Before turning on the light, please inflate it to prevent the TPU exterior from coming into contact with and being damaged by the heat from the LEDs.
2. The tube light contains an inflatable airbag. Do not let it touch sharp objects or expose it to corrosive fluids or gases. Avoid using it in high-temperature, high-humidity environments, and do not squeeze or drop it from high places to prevent damage.
3. Do not store the product while it is still hot to prevent the material from melting and sticking together.

Specifications

- **Model** GC30C
- **Product Size** (Uninflated) Approx. 0.9m x 0.12m
- **Power** 30W 30W
- **Type C Input** DC 5V/3A, 9V/3A, 12V/3A, 15V/3A, 20V/2.25A
- **Type C Output** 30W
- **Battery Capacity** 7.2V 5000mAh 36Wh
- **Colour Rendering Index** 95
- **Weight** 377g
- **Colour Temperature** 2700-6500K
- **Maximum Illuminance** 3000lux/0.5m
- **Number of Scenes** 17
- **Hue Angles** 0°-359°
- **Saturation** 0%-100%
- **Intensity** 0%-100%
- **Full Power Runtime** Approx. 70 minutes

Frequently Asked Questions

- **Q: What should I do if the indicator blinks unusually during charging?**
 - **A:** Stop using the product immediately and contact our after-sales service for assistance.
- **Q: Can I use any air pump to inflate the product?**
 - **A:** Yes, you can use a manual or electric air pump to inflate the product.

- **Q: How do I select different special scenes?**
 - **A:** Double-press the power button to enter scene selection mode, then use the buttons to navigate through special scenes.

Documents / Resources

	NEEWER GC30C Inflatable Light [pdf] Instruction Manual GC30C, GC30C Inflatable Light, Inflatable Light, Light
---	--

References

- [User Manual](#)

 GC30C, GC30C Inflatable Light, Inflatable Light, Light,

 NEEWER NEEWER

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.