



[Home](#) » [nenò](#) » **nenò Tocco Sterilize and Bottle Warmer User Manual** 

nenò[®]




Tocco

Contents [[hide](#)]


- 1 Tocco Sterilize and Bottle Warmer
- 2 CONSTRUCTION OF THE UNIT
- 3 PRECAUTIONS
- 4 CLEANING AND MAINTENANCE
- 5 DISPLAY AND OPERATING PANEL
- 6 OPERATION OF THE DEVICE
- 7 SPECIFICATION
- 8 WARRANTY CARD
- 9 Documents / Resources
 - 9.1 References

Tocco Sterilize and Bottle Warmer

A

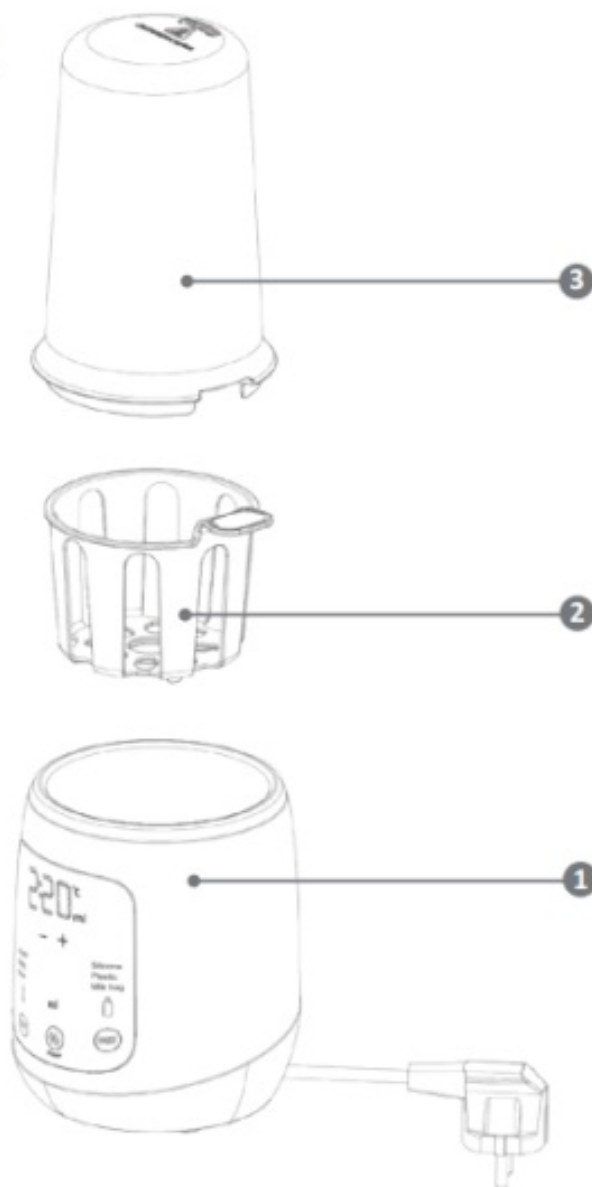

B

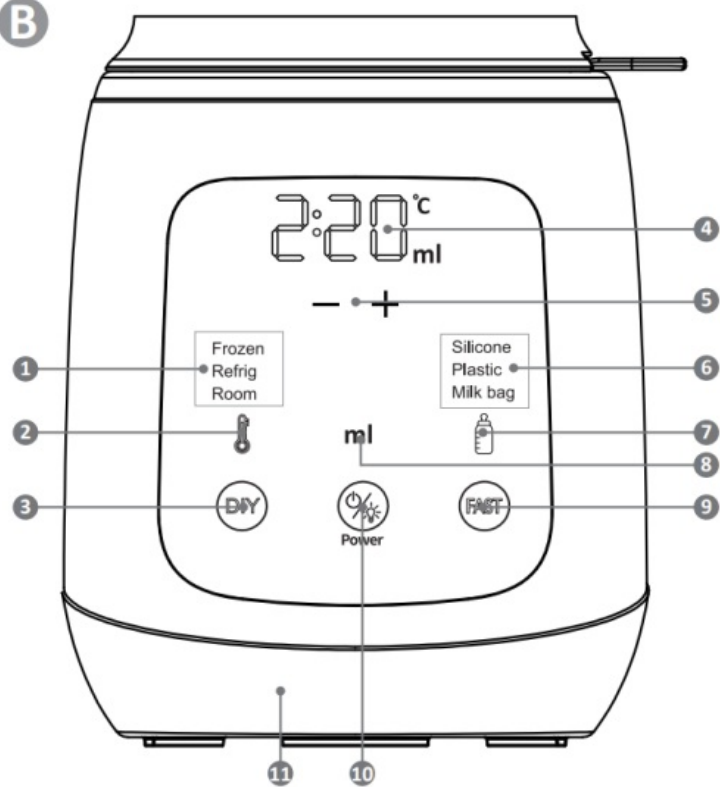

Dear Customer,

Thank you for purchasing the Neno Tocco steriliser and bottle warmer. Please read the instruction manual before use and keep it in case you need to use it again.

CONSTRUCTION OF THE UNIT**SEE FIG. A**

1. Body
2. Basket
3. Transparent lid

PRECAUTIONS

1. Carefully read the instructions before use.
2. To avoid flooding the steriliser, do not clean it under running water.
3. Keep the appliance away from children and babies. Remove the plug from the socket if the steriliser will not be used for a long time.
4. If the plug or cable is damaged, return it to Neno service.
5. Do not pour milk or food directly into the warming vessel.
6. Remember that the heating time of the food should not be too long, so that the food does not lose its nutritional value.
7. Before feeding your baby, check the temperature of the food on your wrist. Take into account that the heater also gives off heat when switched off, it is advisable to wait about 30 minutes before taking out the heated liquid/food to stabilise the temperature in the bottle/container.
8. The steriliser can be used by adults and children over 8 years of age under adult supervision. Adults with limited physical, mental and sensory abilities may use the device under the supervision of another adult.
9. Cleaning and maintenance should be carried out by adults or children over 8 years of age under adult supervision. Keep all parts of the appliance away from children under 8 years of age.
10. Do not use any descaling agents other than citric acid or white vinegar.
11. Tips: For improved user comfort, wipe the steriliser with a damp tissue before first use. Wash the bottle basket, pour distilled water into the heater and switch on the

sterilisation function. After sterilisation, pour off the water and leave the device to dry.

CLEANING AND MAINTENANCE

1. **NOTE:** The use of water other than distilled water causes scale and sediment accumulation and shortens the life of the appliance. The manufacturer recommends the use of distilled water.
2. Disconnect the plug from the socket and wait for the unit to cool down before cleaning.
3. Be careful not to damage the heating surface with sharp metal tools.
4. In case of limescale accumulation, mix 10g of citric acid with 200ml of cold water and boil using the sterilisation function, then wait 2-3 minutes after the sterilisation is complete.
5. Cleaning: remove the top cover from the body and wipe the surface of the unit with a damp, soft cloth.
6. It is recommended to clean the unit every 10 -15 days, or more often if the water used causes limescale accumulation.
7. Set the unit aside to dry after cleaning. Do not immerse the body in water for cleaning.
8. It is recommended to pour a mixture of citric acid and vinegar over the vessel every month and leave it for 10 minutes, then rinse it under running water.

DISPLAY AND OPERATING PANEL

SEE FIG. B

1. Temperature indicators
2. Select temperature
3. DIY mode – heat milk / food / keep warm / sterilise / defrost
4. Heated liquid time/capacity indicator
5. Reduce/increase temperature
6. Bottle/container material indicators
7. Select material
8. Select capacity
9. Quick heat-up mode
10. Power supply/night light

OPERATION OF THE DEVICE

1. When the plug is inserted into the socket, the device will automatically go to sleep.
2. Press the power button to switch the device on or off.
3. Press the “DIY” button to use to heat milk/ food/ keep warm/ sterilise/ defrost or the “FAST” button to use the rapid warming function.

a. Quick heat: use this mode for water or in exceptional situations milk, the target temperature of the programme is 37°C. Insert the basket into the steriliser, pour distilled water into the MAX line, then insert the water bottle and replace the lid. Press the “FAST” button. In this mode, set the volume of liquid to be heated, the temperature and the type of material as allowed by the corresponding buttons. Press the button select temperature/volume/material and then adjust the parameters by pressing the buttons again. The unit will beep and start heating. During heating, the screen will show the remaining heating time. When the rapid heating is complete, the unit will beep and enter the 37°C maintenance mode for 2 hours.

Remove the bottle immediately when finished. Check the temperature before serving to your baby. This mode is not recommended for heating breast milk due to the large temperature spike.

NOTE: The actual heating time of the rapid warmer may vary due to bottle material, bottle wall thickness, ambient temperature, initial food temperature, bottle temperature, water temperature, amount of food. Make sure the food is at a safe temperature to give to your baby before serving. If the food is not warm enough, place the bottle back in the warmer for 0.5-1 minutes.

b. Warming milk: use this mode to warm the milk. Insert the basket into the steriliser, pour distilled water to the MAX line, then insert the milk bottle and replace the lid. Press the DIY button and select the temperature with “+” and “-”, in this mode set the temperature to 37°C. The appliance will beep and start heating. During heating, the set temperature will flash on the display. After 50 minutes, you will hear the unit beep and it will enter the mode to maintain the displayed temperature for 23 hours and 10 minutes. If you are no longer using the appliance press the “Power” button to switch off the heating.

c. Heating food: use this mode to heat semi-liquid products. Insert the basket into the steriliser, pour distilled water into the MAX line, then insert the food bottle and replace the lid. Press the DIY button and select the temperature with “+” and “-”, in this mode

set the temperature between 35°C and 80°C. The appliance will beep and start heating. After 50 minutes, you will hear the unit beep and it will enter the mode to maintain the displayed temperature for 23 hours and 10 minutes. If you are no longer using the appliance press the “Power” button to switch off heating.

d. Sterilisation: Place the basket in the steriliser, pour in 40 ml of distilled water, then insert the bottle and/or accessories and replace the lid. Press the DIY button and select a temperature of 100°C. While heating, the display shows 100°C. Once heated to the set temperature, the device will sterilise for 8 minutes. The appliance will beep to indicate that it has finished.

e. Defrosting: place the basket in the steriliser, pour distilled water up to the MAX line, then insert the food container and replace the lid. Press the DIY button and select the temperature with “+” and “-”, in this mode the temperature should be set between 35-50°C. The appliance will beep and start heating. During heating, the set temperature will flash on the display. After 50 minutes, you will hear the unit beep and it will enter the display temperature hold mode for 23 hours and 10 minutes. If you are no longer using the appliance, press the “Power” button to switch off heating. You can also defrost using the “FAST” mode, by setting the initial temperature to “Frozen” and then following the steps described in subsection a) Quick heat.

f. Night light: Press and hold the power button to switch the light on or off. The lamp can be used independently.

g. Restart of default settings: hold down the “+” button in sleep mode of the unit until you hear a beep. The „+” button is not illuminated in sleep mode.

h. If you do not switch on any mode after switching on the device, it will automatically go to sleep after 1 minute.

SPECIFICATION

Power: AC 220-240V 400W 50-60 Hz

Recommended temperature and humidity

during operation: 15-30 °C/ 50-80%

Weight: 590g

Dimensions: 12.5×12.6×30 cm

Maximum bottle diameter: 7.7 cm

Heating temperature range: 35-100°C

WARRANTY CARD

Dear Customer, thank you for purchasing our Neno Tocco steriliser and bottle warmer. If you have any problems with the operation of the unit under normal conditions, please contact an authorised Neno brand service centre or distributor. Keep your warranty card in case of repair. Product comes with a 24-month warranty.

Warranty conditions can be found at: <https://neno.pl/gwarancja> Details, contact and service address can be found at: <https://neno.pl/kontakt>

Specifications and contents are subject to change without notice.

We apologise for any inconvenience.



The crossed out trash can symbol indicates that unusable electrical or electronic devices, its accessories (such as power supplies, cords) or components (for example batteries, if included) cannot be disposed of alongside with household waste. In order to dispose of the devices or its components (for example, batteries) deliver the device to the collection point, where it will be accepted free of charge. Disposal is subject to the recast version of the WEEE Directive (2012/19/EU) and the Directive on batteries and accumulators (2006/66/EC). Proper disposal of the device prevents degradation of the natural environment. Information about the collection points of the facilities is issued by the competent local authorities. Incorrect disposal of waste is subject to penalties provided for by the law in force in the given area.

нено®

Producent:

KGK TREND Sp. z o.o.

ul. Ujastek 5b, 31-752 Kraków, Polska.

Wyprodukowano w PRC

Manufacturer:


KGK TREND Sp. z o. o.

st. Ujastek 5b, 31-752 Cracow, Poland.

Made in PRC




Documents / Resources

	nenno Tocco Sterilize and Bottle Warmer [pdf] User Manual Tocco Sterilize and Bottle Warmer, Tocco, Sterilize and Bottle Warmer, Bot tle Warmer
---	---

References

- [User Manual](#)

📁 neno  Bottle Warmer, neno, Sterilize and Bottle Warmer, Tocco, Tocco Sterilize and Bottle Warmer

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.