



Neomounts THINCLIENT-01 CPU Holder Specifications and Datasheet

 
[Home](#) » [Neomounts](#) » Neomounts THINCLIENT-01 CPU Holder Specifications and Datasheet 

Contents

- [1 Neomounts THINCLIENT-01 CPU Holder](#)
- [2 Description](#)
- [3 SPECIFICATIONS](#)
- [4 CAUTION](#)
- [5 User Support](#)
- [6 FAQ's](#)
- [7 Related Posts](#)


Neomounts®

Neomounts THINCLIENT-01 CPU Holder

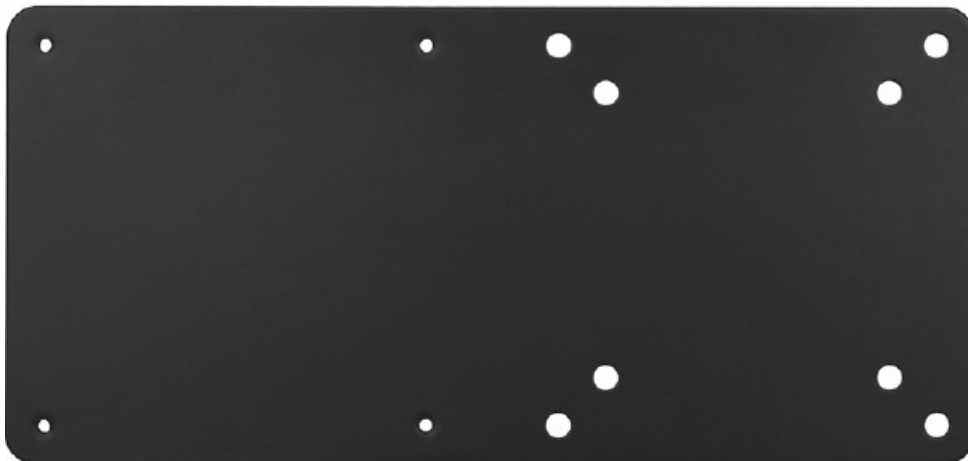

Description

 Neomounts by Newstar Thin Client Holder (attach between monitor and mount) -Black

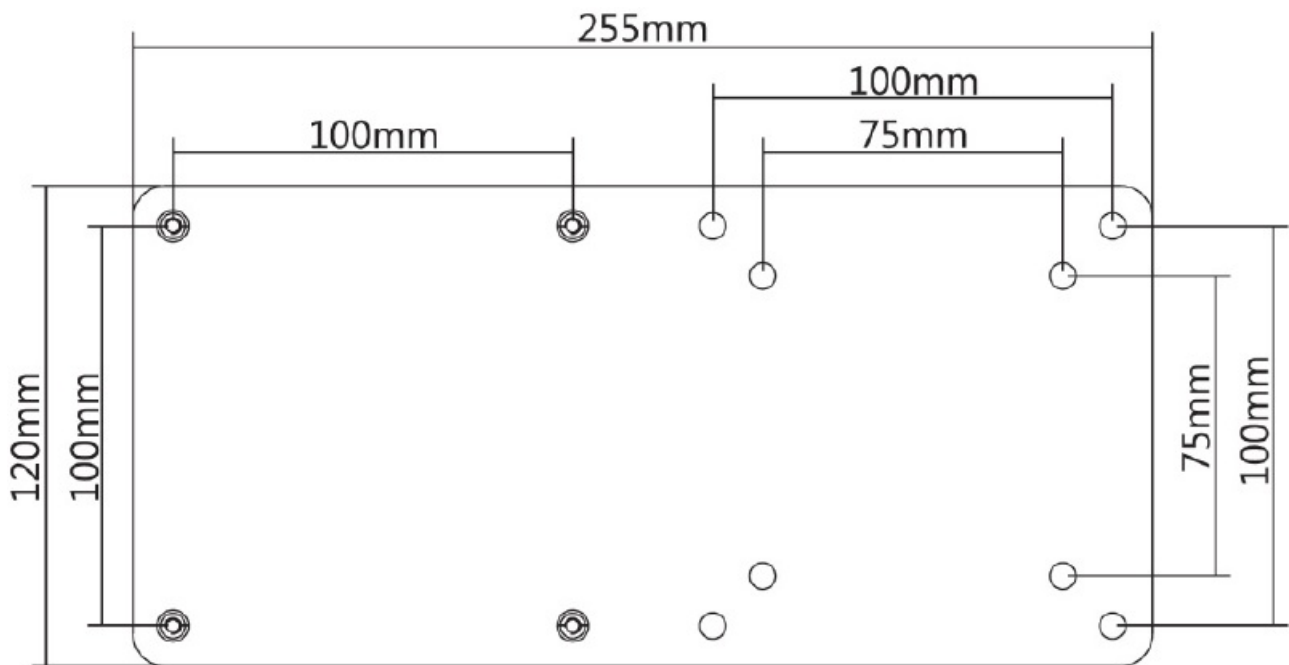

The Neomounts by Newstar THINCLIENT-01 allows you to mount a thin client PC to a monitor/TV mount with VESA75/100 holes. A thin client mount creates a need and tidy workplace because the PC is stored behind the screen and doesn't use any valuable desk space. Keep the workplace clean without computers on the desk.

This Neomounts by Newstar thin client mount allows vertical installation of thin client computer between the screen and monitor mount. This product includes VESA 75×75 mm and VESA 100×100 mm hole pattern to simplify installation with flat screens and flat screen mounts.

All installation material is included with the product.

SPECIFICATIONS

GENERAL

- **Min. weight** 0 kg (per screen)
- **Max. weight** 3 kg (per screen)
- **VESA minimum** 75×75 mm
- **VESA maximum** 100×100 mm

FUNCTIONALITY

- **Type** Fixed
- **Height adjustment** 12 cm
- **Width adjustment** 26 cm
- **Depth adjustment** 0,2 cm
- **Adjustment type** None

INFORMATION

- **Color** Black
- **Main material** Steel

- **Warranty** 5 year
- **EAN code** 8717371445782

Please note: The inch sizes stated are just an indication, combined with the weight and VESA sizes. The maximum weight and VESA size are absolute restrictions for the products and should not be exceeded.

CAUTION

1. To ensure safety, please read this manual carefully before installation and follow the instructions. Store this manual in a secure place for future reference.
2. The manufacturer shall not be legally responsible for any equipment damage or personal injury caused by incorrect installation or operation other than that covered in this manual.
3. The mount is designed for easy installation and removal. The manufacturer shall not be liable for damage to equipment or personal injuries arising out of human factors or acts of nature, such as earthquakes or typhoons.
4. It is recommended that the mount be installed by qualified personnel only.
5. At least two persons are needed to install or remove the product to avoid the hazard of falling objects.
6. **Please carefully inspect the area where the mount is to be installed:**
 - Avoid places that are subject to high temperatures, humidity, or contact with water.
 - Do not install the product near air conditioning vents or areas with excess dust and fumes.
 - Only install on vertical walls and avoid slanted surfaces.
 - Do not install in places subject to any shock or vibration.
 - Do not install in places subject to direct exposure to bright light, as it may cause eye fatigue when viewing the display panel.
7. Maintain sufficient space around the display to ensure adequate ventilation.
8. To ensure a safe installation, first check the structure of the wall, ceiling, or floor and select a secure mounting location.
9. The wall, ceiling, or floor should be strong enough to sustain a weight of at least four times the display and mount combined. The mounting location must be able to withstand earthquakes or other strong shocks.
10. Do not modify any accessories or use broken parts. Contact your dealer with any questions.
11. Tighten all screws (do not exert excessive force to avoid breaking the screw or damaging its thread).
12. Drill holes and bolts will be left in the wall, ceiling, or floor once the display and bracket are removed. Stains may occur after extended use.
13. Since the manufacturer has no way to control the wall, ceiling, or floor type and installation of the mount, the warranty of the product shall only cover the body of the mount. The warranty period of the product is 5 years.
14. Please consult the English language manual for any dispute on conditions.

User Support

- **Address:** Neomounts Computer Products Europa B.V. | Wateringweg 62 | 2031 EJ Haarlem | The Netherlands |
- **Contact no.** +3 1(0)23-5478888
- **Support:** info@neomounts.com
- **Email:** www.neomounts.com
- **Address:** Chamber of Commerce 37076185 (VAT NL805154383B0 1 | BIC RABONL2U | IBAN

FAQ's

Would a CPU holder be useful?

A CPU holder has many uses and advantages, but it can also protect your computer if you have one set up on your desk or workplace. A CPU that is placed on the floor is more likely to get dirt or hair. This is particularly valid when working with carpets.

Where ought the CPU to be kept?

Ideally, you should have it on the desk. The airflow is crucial. Computers need breathing room to avoid overheating and failure. Because there is nowhere for the air to escape, placing a computer under a desk will encourage the air (and dust) to be sucked in.

What's the THINCLIENT-01 holder made of?

Durable steel was used to make the holder.

What shade is the holder for the THINCLIENT-01?

The black finish of the holder matches any workspace.

What purpose does the CPU holder serve?

You may simply save room under your desk by hanging the PC from a CPU holder. When a computer is on the floor, more dust can enter it and it will get in the way when cleaning the area under the desk.

What is the THINCLIENT-01 holder's maximum weight capacity?

Up to 10 kg of weight can be supported by the THINCLIENT-01 holder.

Can the holder be installed on any desk or surface for working?

The holder may be fixed to the majority of workstations and desks with a thickness of up to 5 cm.

The THINCLIENT-01 holder may be adjusted.

Yes, the straps on the holder are adjustable so that they may be made to fit a variety of thin client sizes and shapes.

Does the holder have mounting hardware included?

Yes, the holder is straightforward to install and includes all the required mounting hardware.

What are the hardware requirements for a thin client?

True thin clients don't need very much RAM by their nature. Some thin client hardware includes as little as 512 MB, though others go up to 4 GB or even 8 GB. Regular PCs utilized as thin clients need enough RAM for their operating system to run easily. Minimal local storage is another hallmark of thin clients

What is the function of the CPU holder?

A CPU holder allows you to hang the PC under your desk, easily saving space under it. When a PC is standing on the ground, more dust can get into it, and will also stand in the way when the space under the desk has to be cleaned.

Do you need a CPU holder?

In addition to the practical applications and benefits of a CPU holder, having one installed on your desk or workstation can protect your computer. A CPU that sits on the floor is more susceptible to collecting dust or hair. This is especially true when you are working with carpet.

Download this PDF Link: [Neomounts THINCLIENT-01 CPU Holder Specifications and Datasheet](#)

[Manuals+](#)