

# NEOPERL 37.0109.98 Dual Thread Adapter Instructions


## Contents

- [1 INSTRUCTIONS:](#)
- [2 Documents / Resources](#)
- [3 Related Posts](#)

### INSTRUCTIONS:


1. Remove old aerator from faucet. Use wrench if necessary.
2. Remove any old washers that might be caught inside the spout.
3. Clean the threads on faucet for easier installation.
4. For faucets with outside threads, remove thicker washer. For faucets with inside threads, leave thicker washer in place. Install onto spout by hand.
5. Connect regular female aerator or hose (not provided).
6. Turn on faucet. If leak occurs, tighten more firmly.

#### For male faucets with outside threads:

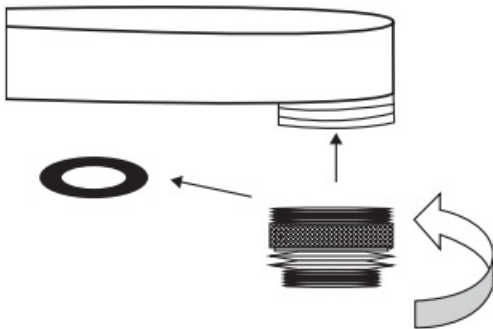

Remove thicker washer

#### For female faucets with inside threads:

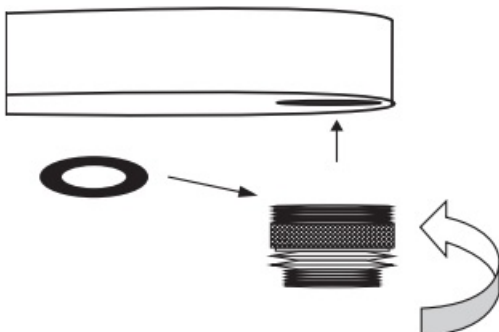

Leave thicker washer in place

**Warning:** Product may contain sharp edges, use caution when installing.

## Documents / Resources