



Nespresso C60 Pixie Espresso Maker Instruction Manual

[Home](#) » [Nespresso](#) » Nespresso C60 Pixie Espresso Maker Instruction Manual 

Contents

- [1 Nespresso C60 Pixie Espresso Maker](#)
- [2 SAFETY PRECAUTIONS](#)
- [3 FIRST USE](#)
- [4 COFFEE PREPARATION](#)
- [5 DESCaling](#)
- [6 TROUBLESHOOTING](#)
- [7 SPECIFICATIONS](#)
- [8 WARRANTY](#)
- [9 FREQUENTLY ASKED QUESTIONS](#)
- [10 References](#)
- [11 Related Posts](#)



Nespresso C60 Pixie Espresso Maker



Nespresso, an exclusive system creating the perfect Espresso, time after time. All Nespresso machines are equipped with a patented extraction system that guarantees up to 19 bar pressure. Each parameter has been calculated with great precision to ensure that all the aromas from each Grand Cru can be extracted, to give the coffee body and create an exceptionally thick and smooth crema. Please read the instructions and safety precautions before operating the appliance.

SAFETY PRECAUTIONS



CAUTION: the safety precautions are part of the appliance. Read them carefully before using your new appliance for the first time. Keep them in a place where you can find and refer to them later on.

CAUTION: when you see this sign, please refer to the safety precautions to avoid possible harm and damage.

INFORMATION: when you see this sign, please take note of the advice for the correct and safe usage of your appliance.

- The appliance is intended to prepare beverages according to these instructions.
- Do not use the appliance for other than its intended use.

- This appliance has been designed for indoor and non-extreme temperature conditions use only.
- Protect the appliance from direct sunlight effect, prolonged water splash and humidity.
- This appliance is intended to be used in households and similar applications only such as: staff kitchen areas in shops, offices and other working environments, farm houses; by clients in hotels, motels and other residential environments; bed and breakfast type environments.
- This appliance may be used by children of at least 8 years of age, as long as they are supervised and have been given instructions about using the appliance safely and are fully aware of the dangers involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and they are supervised by an adult.
- Keep the appliance and its cord out of reach of children under 8 years of age.
- This appliance may be used by persons with reduced physical, sensory or mental capabilities, or whose experience or knowledge is not sufficient, provided they are supervised or have received instruction to use the appliance safely and understand the dangers.
- Children shall not use the device as a toy.
- The manufacturer accepts no responsibility and the guarantee will not apply for any commercial use, inappropriate handling or use of the appliance, any damage resulting from use for other purposes, faulty operation, non-professionals' repair or failure to comply with the instructions.

Avoid risk of fatal electric shock and fire

- In case of an emergency: immediately remove the plug from the power socket.
- Only plug the appliance into suitable, easily accessible, earthed mains connections. Make sure that the voltage of the power source is the same as that specified on the rating plate. The use of an incorrect connection voids the guarantee.

The appliance must only be connected after installation

- Do not pull the cord over sharp edges, clamp it or allow it to hang down.
- Keep the cord away from heat and damp.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons, in order to avoid all risks.
- If the cord is damaged, do not operate the appliance.
- Return the appliance to the Nespresso Club or to a Nespresso authorized representative.
- If an extension cord is required, use only an earthed cord with a conductor cross-section of at least 1.5 mm² or matching input power.
- To avoid hazardous damage, never place the appliance on or beside hot surfaces such as radiators, stoves, ovens, gas burners, open flame, or similar.
- Always place it on a horizontal, stable and even surface. The surface must be resistant to heat and fluids, like water, coffee, descaler or similar.
- Disconnect the appliance from the mains when not in use for a long period. Disconnect by pulling out the plug and not by pulling the cord itself or the cord may become damaged.
- Before cleaning and servicing, remove the plug from the mains socket and let the appliance cool down.
- Never touch the cord with wet hands.
- Never immerse the appliance or part of it in water or other liquid.

- Never put the appliance or part of it in a dishwasher.
- Electricity and water together is dangerous and can lead to fatal electrical shocks.
- Do not open the appliance. Hazardous voltage inside!
- Do not put anything into any openings. Doing so may cause fire or electrical shock!

Avoid possible harm when operating the appliance

- Never leave the appliance unattended during operation.
- Do not use the appliance if it is damaged or not operating perfectly. Immediately remove the plug from the power socket. Contact the Nespresso Club or Nespresso authorized representative for examination, repair or adjustment.
- A damaged appliance can cause electrical shocks, burns and fire.
- Always completely close the lever and never lift it during operation. Scalding may occur.
- Do not put fingers under coffee outlet, risk of scalding.
- Do not put fingers into capsule compartment or the capsule shaft. Danger of injury!
- Water could flow around a capsule when not perforated by the blades and damage the appliance.
- Never use a damaged or deformed capsule. If a capsule is blocked in the capsule compartment, turn the machine off and unplug it before any operation. Call the Nespresso Club or Nespresso authorized representative.
- Always fill the water tank with cold, fresh drinking water.
- Empty water tank if the appliance will not be used for an extended time (holidays, etc.).
- Replace water in water tank when the appliance is not operated for a weekend or a similar period of time.
- Do not use the appliance without the drip tray and drip grid to avoid spilling any liquid on surrounding surfaces.
- Do not use any strong cleaning agent or solvent cleaner. Use a damp cloth and mild cleaning agent to clean the surface of the appliance.
- To clean machine, use only clean cleaning tools.
- When unpacking the machine, remove the plastic film and dispose.
- This appliance is designed for Nespresso coffee capsules available exclusively through the Nespresso Club or your Nespresso authorized representative. Nespresso quality is only guaranteed when Nespresso capsules are used in Nespresso appliances.
- All Nespresso appliances pass stringent controls. Reliability tests under practical conditions are performed randomly on selected units. This can show traces of any previous use.
- Nespresso reserves the right to change instructions without prior notice.

Descaling

- Nespresso descaling agent, when used correctly, helps ensure the proper functioning of your machine over its lifetime and that your coffee experience is as perfect as the first day. For the correct amount and procedure to follow, consult the user manual included in the Nespresso descaling kit.

SAVE THESE INSTRUCTIONS

Pass them on to any subsequent user. This instruction manual is also available as a PDF at [nespresso.com](https://www.nespresso.com)

Packaging content



- Coffee machine
- 16 capsule set
- «Welcome to Nespresso» folder
- Quick Start Guide
- Warranty card

OVERVIEW



1. Drip tray
2. Drip grid + cup support
3. Capsule container for 9 – 11 used capsules

4. Coffee outlet
5. Lever
6. Espresso button (small cup)
7. Lungo button (large cup)
8. ON/OFF button
9. Water tank lid
10. Water tank

FIRST USE



1. Remove the plastic film from the drip grid.
2. Remove the water tank and capsule container. Adjust the cable length and store the excess under the machine.
3. Insert the remaining cable in the cable guide under the machine and put the machine in the upright position.
4. Plug the machine into the mains.
5. The water tank can be carried by its cover.
6. Rinse the water tank before filling with potable water.
7. Switch the machine on. Blinking light of both coffee buttons and the capsule container: heating up for approximately 25 seconds. Steady light: ready.
8. Place a container under coffee outlet and press the Lungo button to rinse the machine. Repeat three times.

COFFEE PREPARATION



1. Rinse then fill the water tank with potable water. The water tank can be carried by its cover.
2. Switch the machine on. Blinking light: heating up for approximately 25 seconds. Steady light: ready.
3. Lift the lever completely and insert a Nespresso capsule.
4. Close the lever and place a cup under the coffee outlet. Never lift lever during operation and refer to the safety precautions to avoid possible harm when operating the appliance
5. During heat up, you can press the coffee button when it's still blinking. The coffee will then flow automatically when the machine is ready.
6. For a Latte Macchiato glass fold the cup support into the upright position. It will automatically fall down again when removing the glass to avoid any drips falling on to your kitchen surfaces.
7. Press the Espresso (40 ml) or the Lungo (110 ml) button. Preparation will stop automatically. To stop the coffee flow or top up your coffee, press again.
8. Take the cup. Lift and close the lever to eject the capsule into the used capsule container.

ENERGY SAVING CONCEPT AND WATER LEVEL DETECTION



- **To save energy, switch the machine off when not in use. Automatic power off:** the machine will stop automatically after 9 minutes of non use.
- **To increase automatic power off from 9 to 30 minutes:** switch the machine off, press the Espresso and Lungo buttons simultaneously then press the ON/OFF button.
- **Red backlight lights up:** water tank is empty. Refill the water tank with potable water. Empty and rinse the used capsule container and the drip tray.

PROGRAMMING THE WATER VOLUME



1. Fill the water tank and insert a Nespresso capsule.
2. Press and hold the Espresso or Lungo button.
3. Release the button once the desired volume is served.
4. Water volume level is now stored.

EMPTYING THE SYSTEM BEFORE A PERIOD OF NON-USE, FOR FROST PROTECTION OR BEFORE A REPAIR



1. Switch the machine off.
2. Remove the water tank. Close the Lever. Place a container under the coffee outlet.
3. Press and hold the Espresso button and switch the machine on. Wait until no more water comes out.
4. Machine switches off automatically.

RESET TO FaCTORy SETTINGs



1. Switch the machine off.
2. Press and hold the Lungo button and switch the machine on.

Espresso cup: 40 ml; **Lungo cup:** 110 ml.

Cleaning

Do not use any strong cleaning agent or solvent cleaner. Do not put in a dishwasher. Never immerse the appliance or part of it in water. Clean the coffee outlet regularly with a damp cloth.

- To assemble the cup support and the drip tray: take off the grid, place them side by side and clip the drip tray to the cup support.



DESCaling

Duration approximately 15 minutes. Read the safety precautions on the descaling package and refer to the table for the frequency of use (see page 12).



1. Remove the capsule and close the lever.
2. Empty the drip tray and the used capsule container.
3. Fill the water tank with 0.5 L of water and add the Nespresso descaling liquid.
4. Place a container (minimum volume: 0.6 L) under the coffee outlet.
5. Switch the machine on.
6. Press both coffee buttons simultaneously for three seconds. They will start blinking.
7. Press the Lungo button and wait until the water tank is empty.
8. Refill the water tank with the used descaling solution collected in the container and repeat step 8.
9. Empty and rinse the water tank. Fill it with potable water.
10. When ready, press the Lungo button to rinse machine.
11. To exit the descaling mode, press both buttons simultaneously for one second. The machine is now ready for use.



Caution

The descaling solution can be harmful. Avoid contact with eyes, skin and surfaces. We recommend the Nespresso descaling kit available from the Nespresso Club as it is specifically adapted to your machine. Do not use other products (such as vinegar) that would affect the taste of the coffee. The following table will indicate the descaling frequency required for the optimum performance of your machine, based on water hardness. For any additional questions you may have regarding descaling, please contact your Nespresso Club.

Water hardness:		Descal after:		<div style="display: flex; align-items: center; justify-content: center;"> </div>
fH	dH	CaCO ₃	Cups (40ml)	
36	20	360 mg/l	1000	
18	10	180 mg/l	2000	
0	0	0 mg/l	4000	

fH French grade
 dh German grade
 CaCO₃ calcium carbonate

Nespresso descaling kit:
 Ref. 3035/CBU-2

TROUBLESHOOTING

- **No light.**
 - → The machine has switched off automatically; press ON/OFF button.
 - → Check the mains: plug, voltage, fuse.
- **No coffee, no water.**
 - → Check the water tank, if empty, fill with potable water. Descale it if necessary.
 - → Lift the lever. Press one coffee button and wait until water comes out.
- **Coffee is not hot enough.** → Preheat cup. Descale the machine if necessary.
- **The lever cannot be closed completely.** → Empty the capsule container/Check that there is not a capsule blocked inside the machine.
- **Leakage or unusual coffee flow.** → Check that the water tank is in position.
- **Lights flash irregularly.**
 - → Call the Nespresso Club.
 - → Exit descaling procedure (see paragraph on descaling).
- **No coffee, water just comes out (despite inserted capsule).** → In case of difficulties, call the Nespresso Club.
- **Machine switches itself off.** → To save energy the machine will turn itself off after 9 minutes of non use. See paragraph on «Energy saving concept».
- **Front light is red.** → Water tank is empty or needs to be cleaned.

SPECIFICATIONS

~	220-240 V, 50-60 Hz, < 1260 W
P _{max}	19 bar
kg	~ 3 kg
	0.7 L
	11.1 cm 23.5 cm 32.6 cm

contact THE nespresso club

For any additional information, in case of problems or simply to seek advice, call the Nespresso Club. Contact details of the Nespresso Club can be found in the «Welcome to Nespresso» folder in your machine box or at nespresso.com

DISPOSAL AND ENVIRONMENTAL PROTECTION

This appliance complies with the EU Directive 2002/96/EC. Packaging materials and appliance contain recyclable materials. Your appliance contains valuable materials that can be recovered or can be recyclable. Separation of the remaining waste materials into different types facilitates the recycling of valuable raw materials. Leave the appliance at a collection point. You can obtain information on disposal from your local authorities.

ECOLABORATION: WWW.ECOLABORATION.COM

- We have committed to buy coffee of the very highest quality grown in a way that is respectful of the

environment and farming communities. Since 2003 we have been working together with the Rainforest Alliance developing our Nespresso AAA Sustainable Quality™ Coffee Program.

- We chose aluminium as the material for our capsules because it protects the coffee and aromas of the Nespresso Grand Cru. Aluminium is also infinitely recyclable, without losing any of its qualities.
- Nespresso is committed to designing and making appliances that are innovative, high-performing and user friendly. Now we are engineering environmental benefits into the design of our new and future machine ranges.

WARRANTY

Nespresso guarantees this product against defects in materials and workmanship for a period of 2 years. The warranty period begins on the date of purchase and Nespresso requires presentation of the original proof of purchase to ascertain the date. During the warranty period, Nespresso will either repair or replace, at its discretion, any defective product at no charge to the owner. Replacement products or repaired parts will be warranted only for the unexpired portion of the original warranty or six months, whichever is greater. This limited warranty does not apply to any defect resulting from negligence, accident, misuse, or any other reason beyond Nespresso's reasonable control, including but not limited to: normal wear and tear, negligence or failure to follow the product instructions, improper or inadequate maintenance, calcium deposits or descaling, connection to improper power supply, unauthorized product modification or repair, use for commercial purposes, fire, lightning, flood or other external causes. This warranty is valid only in the country of purchase or in such other countries where Nespresso sells and services the same model with identical technical specifications. Warranty service outside the country of purchase is limited to the terms and conditions of the corresponding warranty in the country of service. Should the cost of repairs or replacement not be covered by this warranty, Nespresso will advise the owner and the cost shall be charged to the owner. This limited warranty shall be the full extent of Nespresso's liability however caused. Except to the extent allowed by applicable law, the terms of this limited warranty do not exclude, restrict or modify the mandatory statutory rights applicable to the sale of this product and are in addition to those rights. The limited warranty applies only to this single-branded Nespresso products. Products marked with both the Nespresso Brand and another producer are governed exclusively by the warranty provided by that other producer. If you believe your product is defective, contact Nespresso for instructions on how to proceed with a repair. Any defect or dysfunction resulting from the use of non-genuine Nespresso capsules will be not covered by this warranty. Please visit our website at www.nespresso.com for contact details.

FREQUENTLY ASKED QUESTIONS

What type of coffee maker is the Nespresso C60 Pixie?

The C60 Pixie is an Espresso Machine.

What filter type does the Nespresso C60 Pixie use?

The C60 Pixie uses a reusable filter.

What is the style of the Nespresso C60 Pixie?

The style is described as Nespresso.

What technology does the Nespresso C60 Pixie use for easy insertion and ejection of capsules?

The Pixie uses Compact Brewing Unit Technology.

How long does it take for the Thermoblock heating element to preheat the Nespresso C60 Pixie?

The preheating time is fast, taking 30 seconds.

What is the capacity of the removable water tank in the Nespresso C60 Pixie?

The removable water tank has a capacity of 24 oz or 0.7 L.

How many used capsules can the Nespresso C60 Pixie hold?

It can hold 10 used capsules.

Is the coffee volume quantity programmable in the Nespresso C60 Pixie?

Yes, the coffee volume quantity is automatic and programmable.

What is the warranty period for the Nespresso C60 Pixie Espresso Maker?

The warranty is 1 year from the date of purchase and registration.

What are the dimensions of the Nespresso C60 Pixie Espresso Maker?

The dimensions are 12.83 inches in length, 4.33 inches in width, and 9-1/4 inches in height.

What are the programmable buttons on the Nespresso C60 Pixie used for?

The programmable buttons are for espresso and lungo.

What features does the folding drip tray of the Nespresso C60 Pixie have?

The folding drip tray accommodates tall recipe glasses.

What indicators are included in the Nespresso C60 Pixie, and what do they indicate?

Backlit LED water level detection indicators, backlight indicators, and auto power-off are included. They indicate water levels, machine readiness, and automatic shutdown.

What is the brew time for the Nespresso C60 Pixie?

The Pixie is brew-ready in 25-30 seconds.

DOWNLOAD THE PDF LINK: [Nespresso C60 Pixie Espresso Maker Instruction Manual](#)

REFERENCES

[Nespresso C60 Pixie Espresso Maker Instruction Manual-fccid.io](#)

[Nespresso C60 Pixie Espresso Maker Instruction Manual-Device.Report](#)

[Nespresso C60 Pixie Espresso Maker Instruction Manual-wiki](#)



References

- [User Manual](#)