



netAlly AirCheck G2 Wireless Tester User Guide

[Home](#) » [netAlly](#) » netAlly AirCheck G2 Wireless Tester User Guide 

Contents


- [1 NetAlly AirCheck G2 Wireless Tester](#)
- [2 Overview](#)
- [3 Power Up and Connect](#)
- [4 Sign Up/Sign In](#)
- [5 Claim to Link-Live](#)
- [6 Download and Install AirCheck G2 Manager](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)



NetAlly AirCheck G2 Wireless Tester



Overview

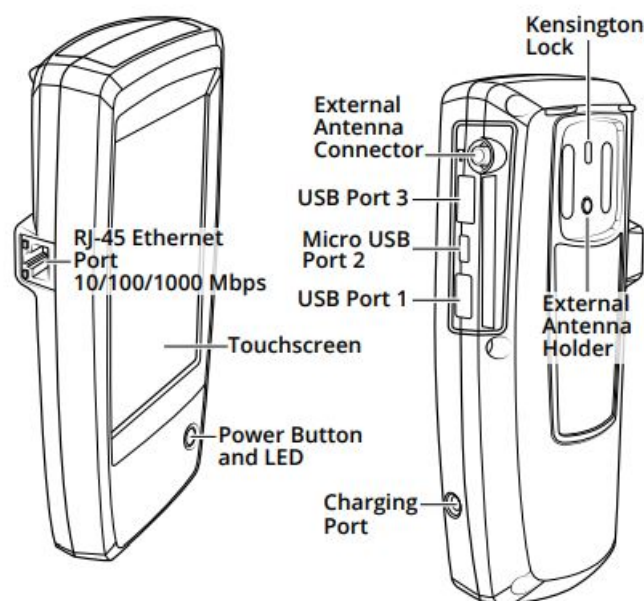

The AirCheck G2 is a comprehensive, hand-held tool for network professionals to test and troubleshoot the latest wireless networks. The AirCheck G2 operates on 802.11b/g/n networks in the 2.4-GHz band and 802.11a/n/ac networks in the 5-GHz band. It offers the following test types:

- The high-level discovery screens for Networks, Access Points, Clients, and Interferers show an overview of the devices that AirCheck G2 has detected on your network.
- From the discovery screens, you can touch any network or device's name to view its detailed connections and measurements.
- The Channels utilization screen allows you to examine in-depth the usage for all channels in your network.
- AutoTest provides a comprehensive summary of your Wi-Fi Air Quality and Network Quality at the current time and location.

- The wired Ethernet Test measures PoE voltage and link speed and indicates whether the Tester can connect to network and user-defined targets.
 - The Locate function helps you physically find access points, clients, and interferers.
- Network Roaming and AP Range tests define the boundaries of your network.

Link-Live Cloud Service

is a free, online system for upgrading your AirCheck G2 software, sharing test configurations and profiles, storing and analyzing test results, and generating reports.

AirCheck G2 Manager

is a Windows PC application that can be used for upgrading your AirCheck G2 software locally, creating test configurations and profiles, storing and analyzing test results, and generating reports.

Download the AirCheck G2 Manager software from [Link-Live.com/downloads](https://link-live.com/downloads).

Power Up and Connect

1. Charge the internal battery for 3 hours by connecting the included power supply to an AC outlet and the charging port.
2. Press the power button to start up the unit.
3. Connect your AirCheck G2 to an active Internet connection using the Ethernet port.

Sign Up/Sign In

1. To get started with Link-Live, create a user account at [Link-Live.com](https://link-live.com).
2. Follow the instructions in the activation email you receive from Link-Live.
3. Then, sign in.

Claim to Link-Live

1. The first time you sign in to Link-Live, a pop-up window appears prompting you to claim a device. If you already have units claimed, navigate to the Units page from the left side navigation menu, and click the Claim Unit button at the lower right corner.
2. Select your device (AirCheck G2), and follow the on-screen instructions to finish claiming.
3. For more information on using Link-Live, open Support from the left side menu.

Download and Install AirCheck G2 Manager

1. From your Link-Live account, go to Support, and select Downloads.
2. Download and install AirCheck G2 Manager.
3. Use AirCheck G2 Manager to transfer test results to your PC for management and analysis.
4. See the AirCheck G2 Manager Help for more instructions.

Register your product at support.netally.com/Login to receive information on updates.

Get the complete AirCheck G2

Documents / Resources



netAlly
AirCheck® G2
Wireless Tester
Quick Start Guide

[netAlly AirCheck G2 Wireless Tester](#) [pdf] User Guide
AirCheck G2 Wireless Tester