



Netzer DS-130 Absolute Rotary Encoder User Manual

[Home](#) » [Netzer](#) » Netzer DS-130 Absolute Rotary Encoder User Manual

Contents [[hide](#)]

- 1 [Netzer DS-130 Absolute Rotary Encoder](#)
- 2 [Preface](#)
 - 2.1 [Applicable documents](#)
- 3 [ESD protection](#)
- 4 [Product Overview](#)
 - 4.1 [Encoder stator / Rotor relative position](#)
- 5 [Unpacking](#)
- 6 [Electrical interconnection](#)
- 7 [Software installation](#)
 - 7.1 [Minimum requirements](#)
 - 7.2 [Installing the software](#)
- 8 [Mounting verification](#)
- 9 [Calibration](#)
- 10 [Operational Mode](#)
- 11 [Mechanical drawings](#)
- 12 [Documents / Resources](#)
 - 12.1 [References](#)
- 13 [Related Posts](#)



Netzer DS-130 Absolute Rotary Encoder



Preface

Version: 3.0 Oct. 2022

Applicable documents

- DS-130 Electric Encoder datasheet

ESD protection

As usual for electronic circuits, during product handling do not touch electronic circuits, wires, connectors or sensors without suitable ESD protection. The integrator / operator shall use ESD equipment to avoid the risk of circuit damage.

ATTENTION: OBSERVE PRECAUTIONS FOR HANDLING. ELECTROSTATIC SENSITIVE DEVICES.


Product Overview

Overview




The DS-130 absolute position Electric Encoder™ is a revolutionary position sensor originally developed for harsh environment critical applications. Currently it performs in a broad range of applications, including defense, homeland security, aerospace, and medical and industrial automation. The Electric Encoder™ non-contact technology relies on an interaction between the measured displacement and a space/time-modulated electric field.

The DS-130 Electric Encoder™ is semi-modular, i.e., its rotor and stator are separate, with the stator securely housing the rotor.

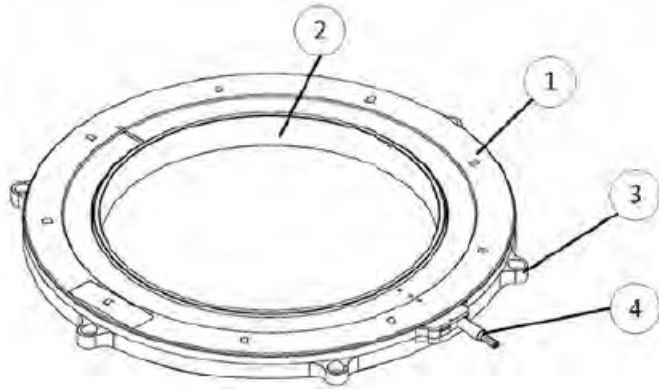


1. Encoder stator
2. Encoder rotor
3. Encoder mounting ears
4. Encoder cable

Installation flow chart

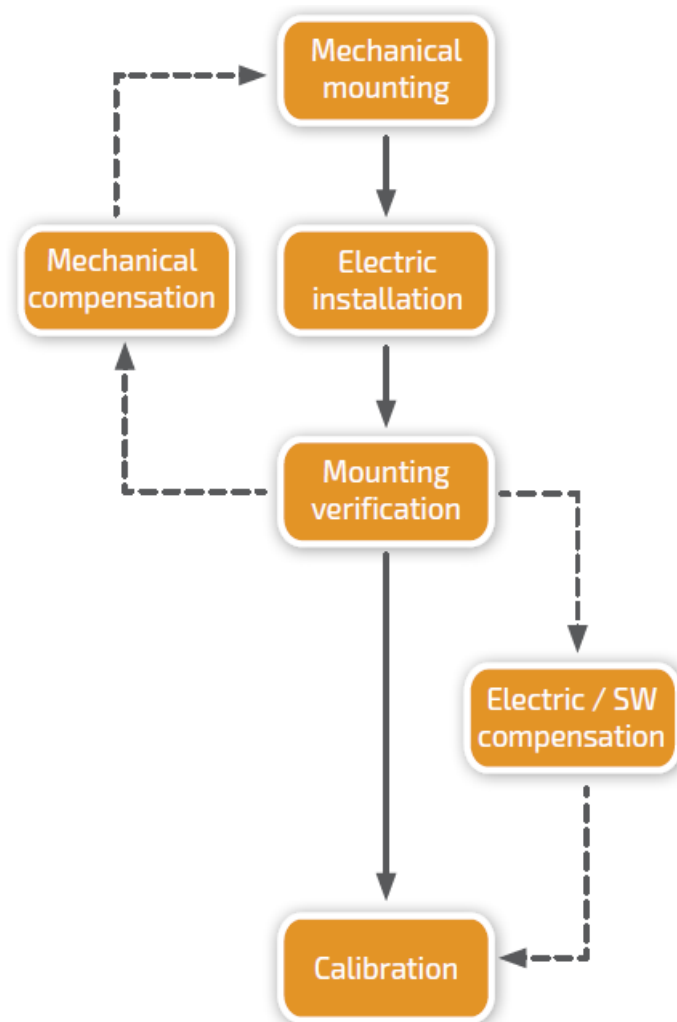


Encoder mounting

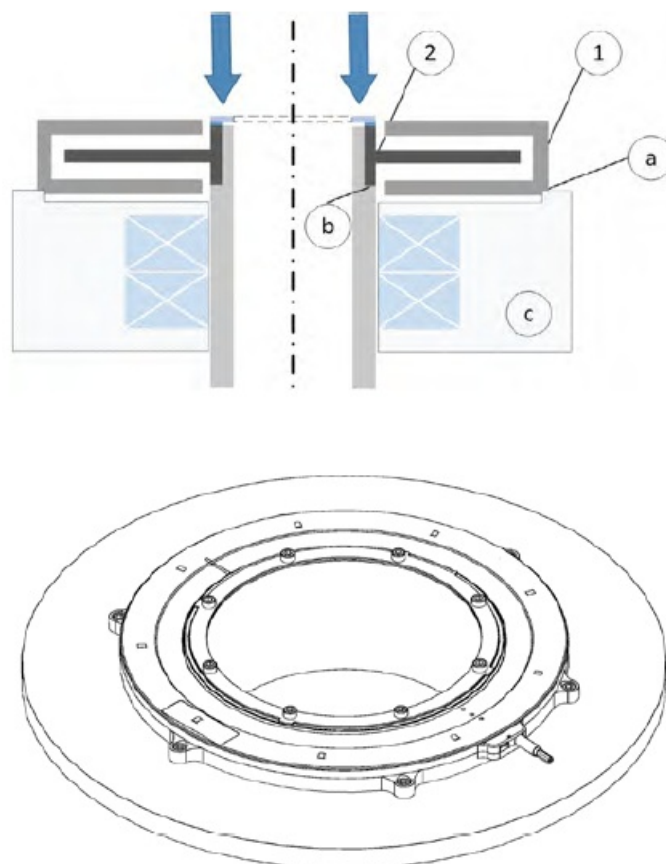

The encoder rotor (2) attaches to the host shaft by pressing it against a dedicated shoulder (b). A screw and washer or circular spring and washer at the end of the shoulder maintain pressure. The encoder stator (1) is centered by circumferential step (a) and attached to the host stator (c) using six M2 screws, recommended torque of 0.3Nm.


Note: DO NOT use screw-locking materials containing Cyanoacrylate which interacts aggressively with the sensor body made of Ultem.

Encoder stator / Rotor relative position

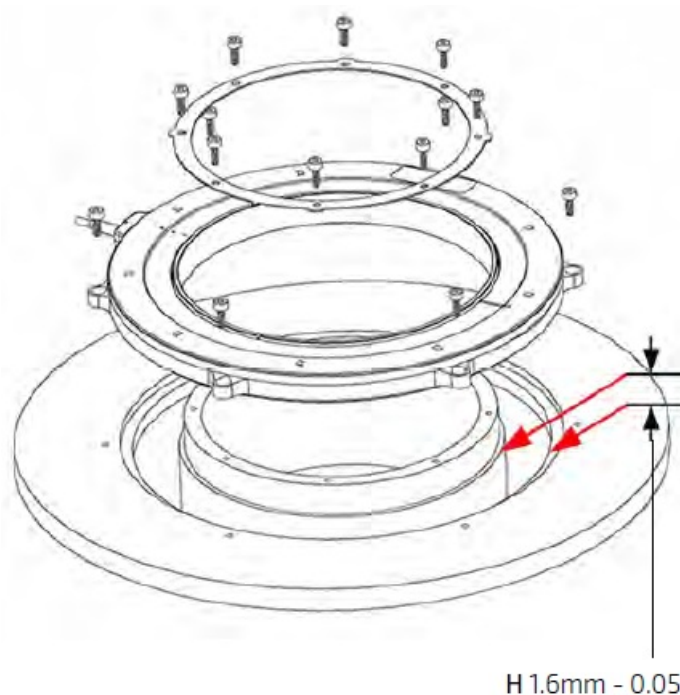

The rotor is floating, therefore, for proper relative axial mounting distance “H” between the shaft shoulder (b) and stator mounting recess (a) should be 1.5 mm nominal. For ease of mechanical mounting compensation by rotor shims, the recommended distance is 1.6 – 0.05 mm. The optimal recommended amplitude values are middle of the range according to those shown in the Encoder Explorer software and vary according to the encoder type.

The DS-130 amplitudes compensation

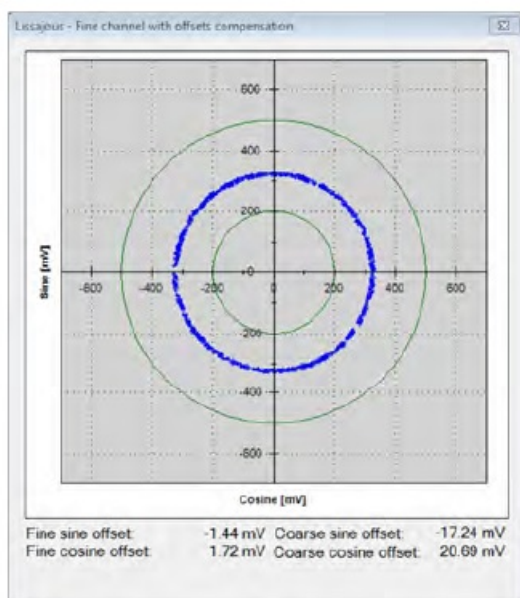

Mechanical compensate by using 50 um shims below the rotor (available as DS-130-R-00 kit). Verify proper rotor mounting with the Encoder Explorer tools “Signal analyzer” or “Mechanical installation verification.”

Note: for more information please read paragraph 6.

Unpacking

Standard order

The package of the standard DS-130 contains the encoder with 250mm shielded cable AWG30.

Optional accessories

1. DS-130-R-00 Kit , Rotor mounting shims : x10 stainless steel 50um thick rotor mounting shims.
2. MA-DS130-004 Kit, end of stepped shaft installation kit (3 screw M2x4, washer).
3. MA-DS130-003 Kit, middle smooth shaft installation kit (spring, C-ring).
4. EAPK008 Kit, encoder mounting screws (3 screws M2x6).
5. CNV-00003 RS-422 to USB converter (with USB internal 5V power supply path).
6. NanoMIC-KIT-01, RS-422 to USB converter with full digital interface for both NCP & high speed SSI/Biss and AqB (with USB internal 5V power supply path).
7. DKIT-DS-130-SH-S0, Mounted SSI (19 bit) encoder on rotary jig, RS-422 to USB converter and cables.
8. DKIT-DS-130-IH-S0, Mounted BiSS (19 bit) encoder on rotary jig, RS-422 to USB converter and cables.

Electrical interconnection


This chapter reviews the steps required to electrically connect the encoder with digital interface (SSI or BiSS-C).

Connecting the encoder

The encoder has two operational modes:

Absolute position over SSI or BiSS-C

This is the power-up default mode

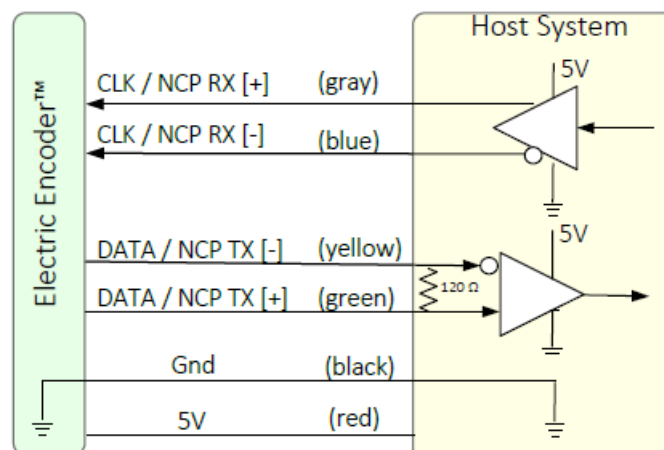

SSi / BiSS interface wires color code

Clock +	Grey	Clock
Clock –	Blue	
Data –	Yellow	Data
Data +	Green	
GND	Black	Ground
+5V	Red	Power supply

Setup mode over NCP (Netzer Communication Protocol)

This service mode provides access via USB to a PC running Netzer Encoder Explorer application (on MS Windows 7/10). Communication is via Netzer Communication Protocol (NCP) over RS-422 using the same set of wires. Use the following pin assignment to connect the encoder to a 9-pin D-type connector to the RS-422/USB converter CNV-0003 or the NanoMIC.

Electric encoder interface, D Type 9 pin Female

Description	Color	Function	Pin No
SSi Clock / NCP RX	Gray	Clock / RX +	2
	Blue	Clock / RX –	1
SSi Data / NCP TX	Yellow	Data / TX –	4
	Green	Data / TX +	3
Ground	Black	GND	5
Power supply	Red	+5V	8



Connect Netzer encoder to the converter, connect the converter to the computer and run the Electric Encoder Explorer Software Tool.

Electrical connection and grounding

The encoder does NOT come with specified cable and connector, however, do observe grounding consideration:

1. The cable shield does not connect to the power supply return line.
2. Ground the host shaft to avoid interference from the host system, which could result in encoder internal noise.

Note: 4.75 to 5.25 VDC power supply required.

Software installation

The Electric Encoder Explorer (EEE) software

- Verifies Mechanical Mounting Correctness
- Offsets Calibration
- Sets up general and signal analysis

This chapter reviews the steps associated with installing the EEE software application.

Minimum requirements

- **Operating system:** MS windows 7/ 10, (32 / 64 bit)
- **Memory:** 4MB minimum
- **Communication ports:** USB 2
- **Windows:** NET Framework, V4 minimum

Installing the software

- Run the Electric Encoder™ Explorer file found on Netzer website: Encoder Explorer Software Tools
- After the installation you will see the Electric Encoder Explorer software icon on the computer desktop.
- Click on the Electric Encoder Explorer software icon to start.

Mounting verification

Starting the Encoder Explorer

Make sure to complete the following tasks successfully

- Mechanical Mounting
- Electrical Connection
- Connecting Encoder for Calibration
- Encoder Explore Software Installation

Run the Electric Encoder Explorer tool (EEE)



Ensure proper communication with the encoder: (Setup mode by default).


- The status bar indicates successful communication.
- Encoder data displays in the encoder data area. (CAT No., Serial No.)
- The position dial display responds to shaft rotation.

Perform mounting verification & rotation direction selection before calibration to ensure optimal performance. It is also recommended to observe the installation at the [Tools – Signal Analyzer] window.


Mechanical installation verification



The Mechanical Installation Verification provides a procedure that will ensure proper mechanical mounting by collecting raw data of the fine and coarse channels during rotation. (d) Select [Mechanical Mounting Verification] on the main screen.

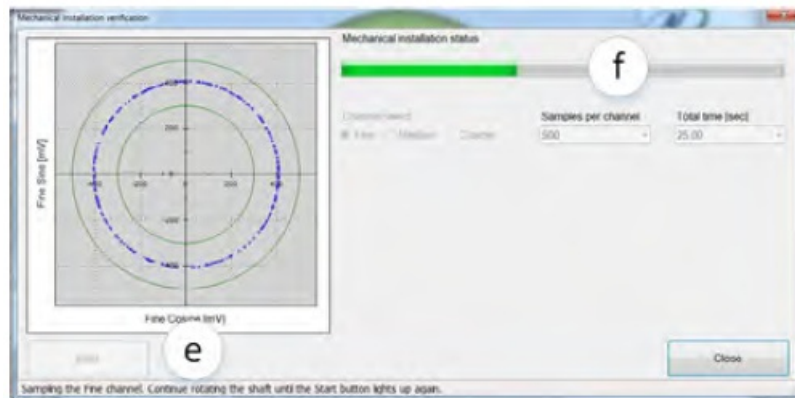

- Select [Start] to initiate the data collection.
- Rotate the shaft in order to collect the fine and coarse channels data.

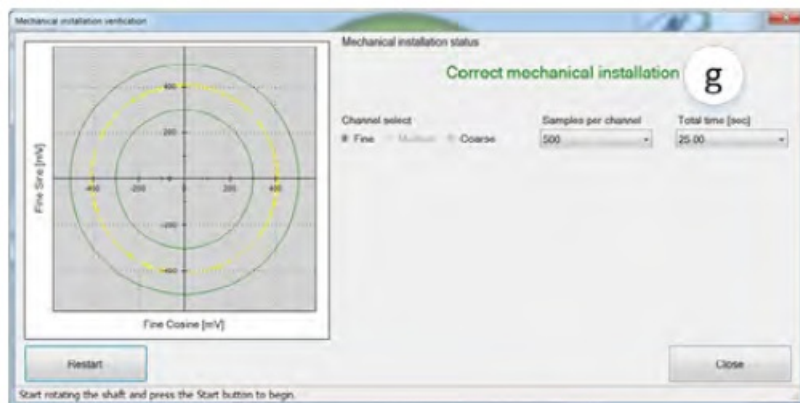

- At the end of a successful verification, the SW will show “Correct Mechanical Installation.”



- If the SW indicates “Incorrect Mechanical Installation,” correct the mechanical position of the rotor, as presented in paragraph 3.3 – “Rotor Relative Position.”

Calibration

New feature


- Auto-Calibration option enabled. Refer to document: Auto-calibrationfeature-user-manual-V01

Offset calibration



For optimal performance of the Electric Encoders, the inevitable DC offset of the sine and cosine signals must be compensated over the operational sector. After successfully completing the Mounting Verification procedure



- Select [Calibration] on the main screen.

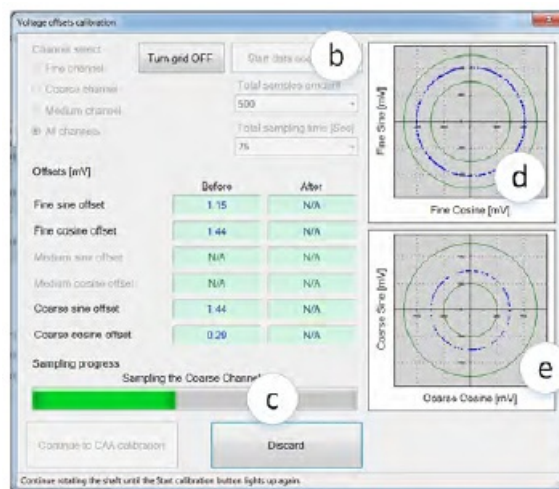

- Start the data acquisition while rotating the shaft. The progress bar (c) indicates the collection progress. Rotate the axis consistently during data collection-covering the working sector of the application end to end-by default the procedure collects 500 points over 75 seconds. Rotation speed is not a parameter during data collection. Data collection indication shows for the fine/coarse channels, a clear “thin” circle appears in the center (d) (e) with some offset.

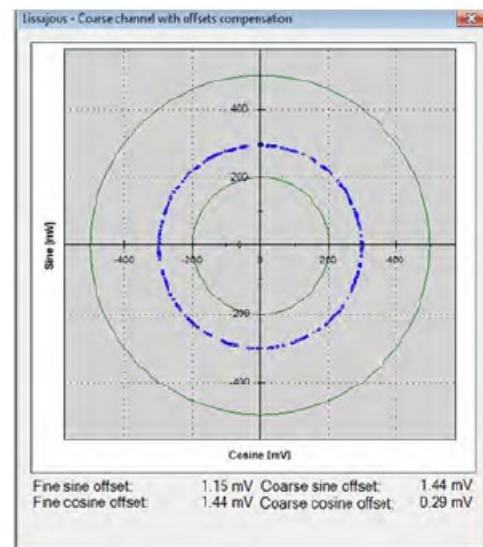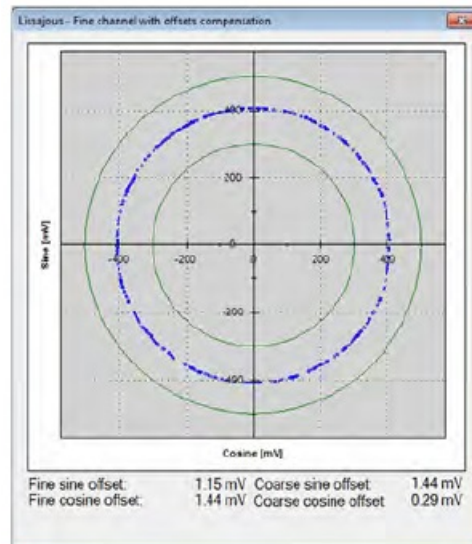

- Offset compensated fine / Coarse channel.

CAA calibration

The following calibration aligns the coarse/ fine channel by collecting data from each point of both channels. Select [Continue to CAA Calibration] In the CAA angle calibration window, select the relevant option button from the measurement range options (a)

EA offsets calibration

Measurement range

- ☒ Full mechanical rotation
- ☐ Limited section [degrees] 45
- ☐ Free sampling mode

Total number of points: 12
Recommended: 12

Shaft movement status
No shaft movement was detected during sampling.

Start calibration (b)

Calibration process control

Continue (c) Stop sampling

Current incremental position: 0.00 degrees
Next sample position: 0.00 degrees

Results [electrical degrees]


	Before calibration	After calibration
CAA	-8.70	N/A
MAA		N/A

Save and continue (e) Discard (d)

Press Start to begin.


- Full mechanical rotation – shaft movement is over 10deg – recommended.
- Limited section – define operation of the shaft in a limited angle defined by degrees in case of <10deg
- Free sampling modes – define the number of calibration points in the total number of points in the text box. The system displays the recommended number of points by default. Collect a minimum of nine points over the working sector.
- Click the [Start Calibration] button (b)
- The status (c) indicates the next required operation; the shaft movement status; the current position, and the next target position to which the encoder should be rotated.
- Rotate the shaft/encoder to the next position and click the [Continue] button (c) – the shaft should be in STAND STILL during the data collection. Follow the indication/ interactions during the cyclic process for positioning the shaft → stand still → reading calculation.
- Repeat the above step for all defined points. Finish (d).
- Click the [Save and Continue] button (e). The last step saves the offset CAA parameters, completing the calibration process.

Setting the encoder zero point


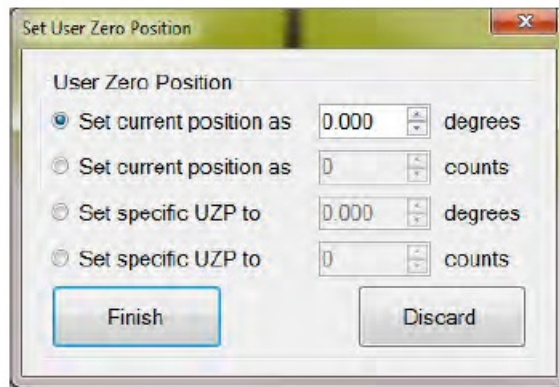


The zero position can be defined anywhere in the working sector. Rotate the shaft to the desired zero mechanical position. Go into the “Calibration” button at the top menu bar, press “Set UZP”. Select “Set Current Position” as zero by using the relevant option, and click [Finish].

Jitter test

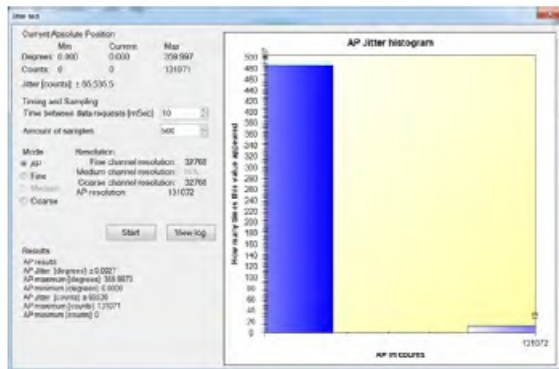

Perform a jitter test to evaluate the quality of the installation; the jitter test presents the reading statistics of absolute position readings (counts) over time. Common jitter should be up +/- 3 counts; higher jitter may indicate system noise.

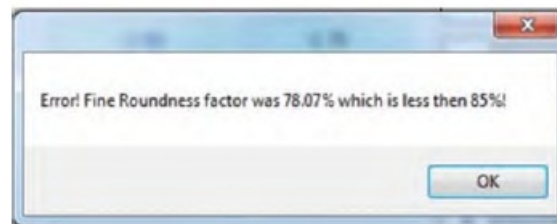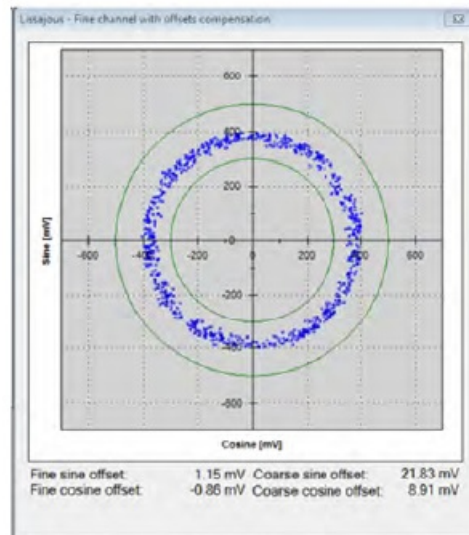

In case the reading data (blue dots) are not evenly distributed on a thin circle, you may experience “noise” in your installation (check shaft/stator grounding).

Operational Mode

SSI / BiSS

Operational mode indication of the SSI / BiSS Encoder interface available by using the NanoMIC.

For more information read about NanoMIC on Netzer website

The operational mode presents the “real” SSI / BiSS interface with 1MHz clock rate.

Protocol SSI




Protocol BiSS



Mechanical drawings

DS-130 ICD

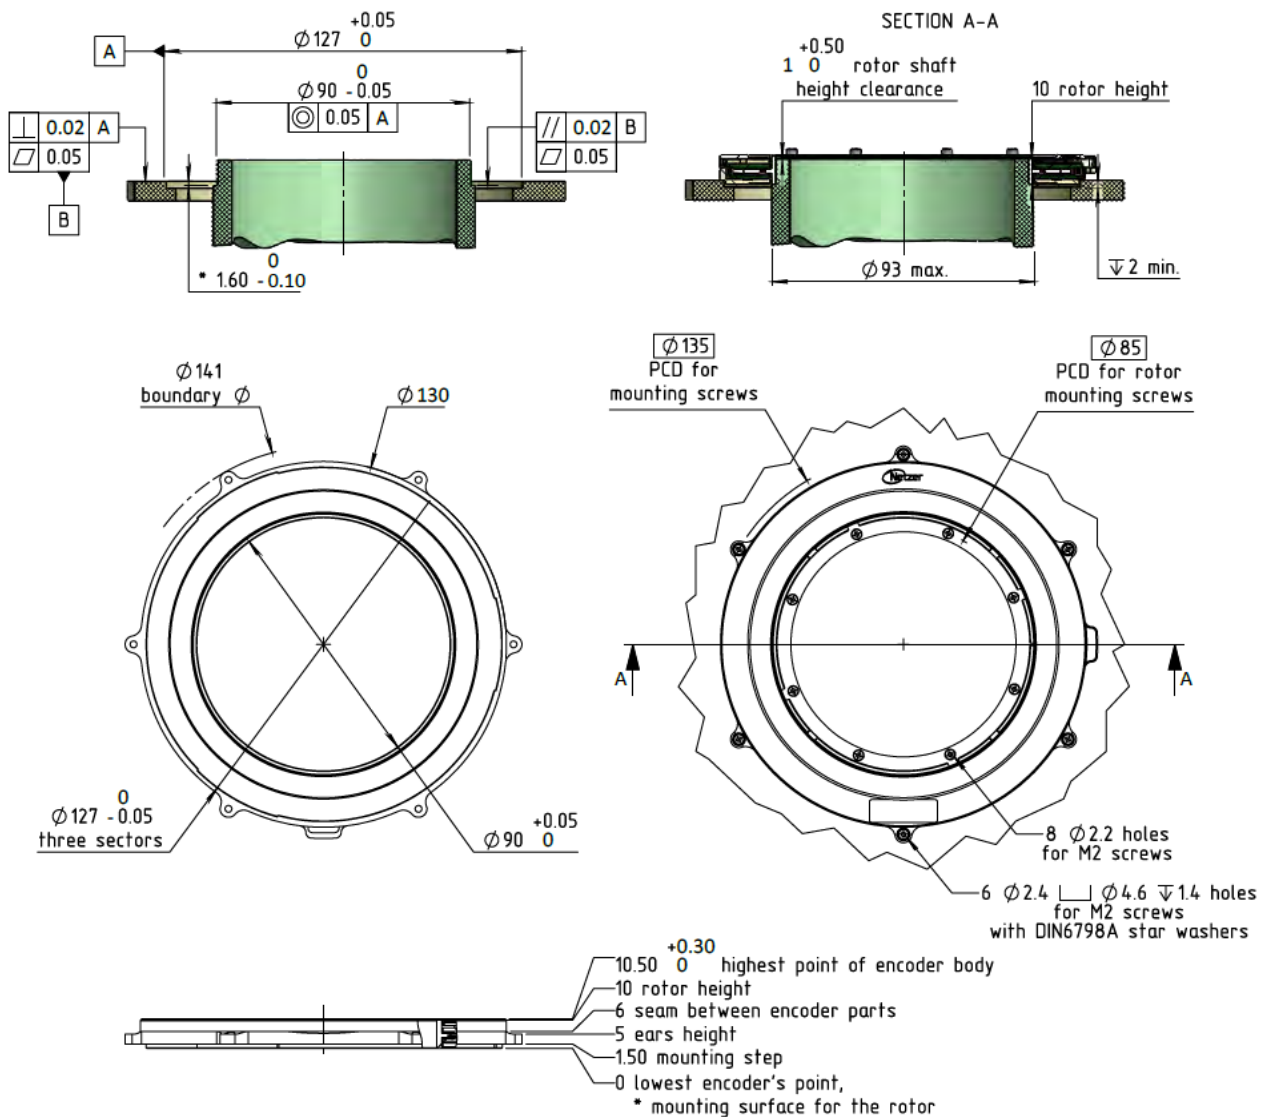

WARNING: Do not use Loctite or other glues containing Cyanoacrylate. We recommend to use 3M glue – Scotch-Weld™ Epoxy Adhesive EC-2216 B/A.

No	PART NUMBER	DESCRIPTION	INCLUDED	QTY
1	DS-130-QR-Strain relief	DS-130-QR-Strain Relief Encoder	✓	1
2	MA-DS-130-004	DS-130 End shaft spring	End-shaft installation kit, optional	1
3		Hex socket screw, DIN 912, M2		8

End-shaft with shoulder mounting – example

Recommended height between the stator and rotor mounting surfaces is 1.6 mm, despite the nominal dimension in the encoder is 1.5 mm. The difference is because of possible inaccuracies in a mounting assembly, as the positive error could be filled by shims, while the negative error is impossible to solve rather than by machining.

Unless otherwise specified






Dimensions are in: mm Surface finish: N6

Linear tolerances

0.5-4.9: ± 0.05 mm 5-30: ± 0.1 mm

31-120: ± 0.15 mm 121-400: ± 0.2 mm

DS-130 Strain Relief

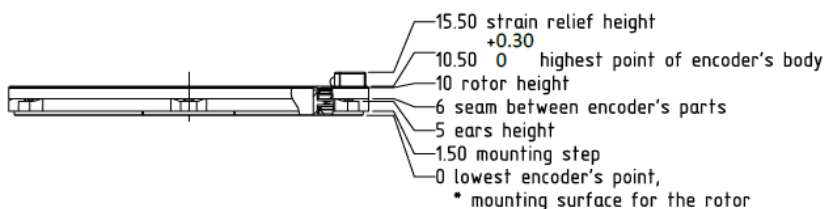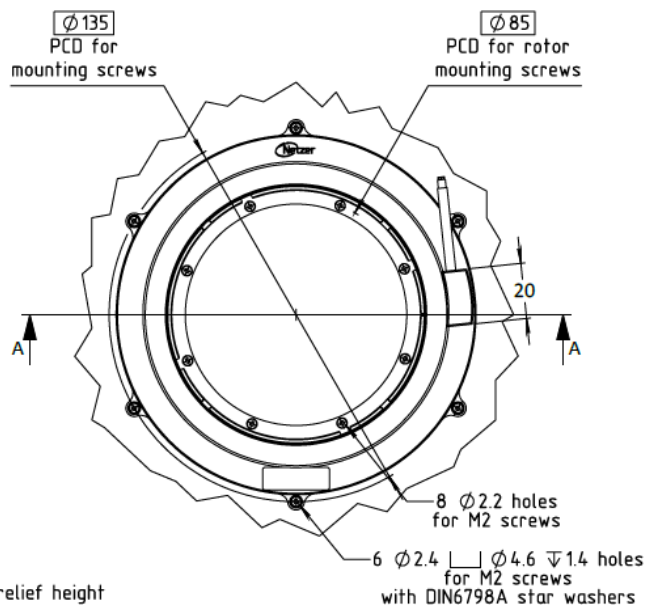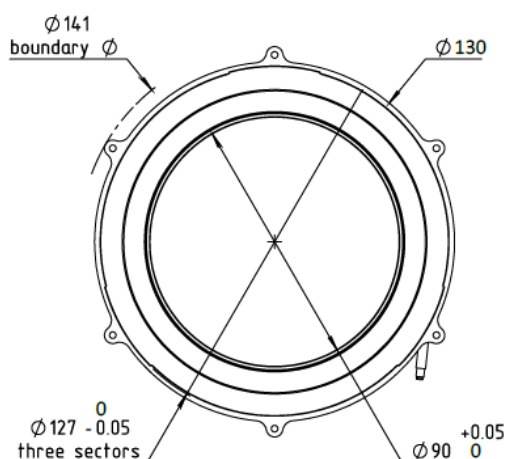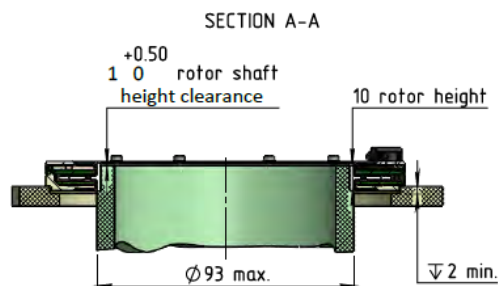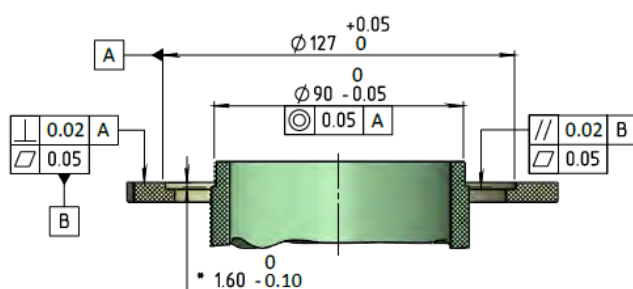

WARNING: Do not use Loctite or other glues containing Cyanoacrylate. We recommend using 3M glue – Scotch-Weld™ Epoxy Adhesive EC-2216 B/A.

No	PART NUMBER	DESCRIPTION	INCLUDED	QTY
1	DS-130-QR-Strain relief	DS-130-QR-Strain Relief Encoder	✓	1
2	MA-DS-130-004	DS-130 End shaft spring	End-shaft installation kit, optional	1
3		Hex socket screw, DIN 912, M2		8

End-shaft with shoulder mounting – example


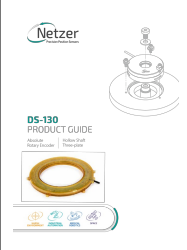
Recommended height between stator and rotor mounting surfaces is 1.6 mm, despite the nominal dimension in the encoder being 1.5 mm. The difference is because of possible inaccuracies in a mounting assembly, as the positive error could be filled by shims, while the negative error is impossible to solve rather than by machining.

Unless otherwise specified

Dimensions are in: mm	Surface finish: N6
Linear tolerances	
0.5-4.9: ±0.05 mm	5-30: ±0.1 mm
31-120: ±0.15 mm	121-400: ±0.2 mm

Copyright © 2022 Netzer Precision Position Sensors A.C.S. Ltd. All rights reserved.

Documents / Resources

	Netzer DS-130 Absolute Rotary Encoder [pdf] User Manual DS-130 Absolute Rotary Encoder, DS-130, Absolute Rotary Encoder, Rotary Encoder, Encoder
	Netzer DS-130 Absolute Rotary Encoder [pdf] User Guide DS-130, Hollow Shaft Three Plate, DS-130 Absolute Rotary Encoder, Absolute Rotary Encoder, Rotary Encoder

References

- [Rotary Encoders | Position Sensors | Electric Encoder | Netzer](#)