



NeuroNexus IST-Motor Setup Instructions

[Home](#) » [NeuroNexus](#) » NeuroNexus IST-Motor Setup Instructions 

Contents


- 1 [NeuroNexus IST-Motor Setup](#)
- 2 [INSTRUCTIONS:](#)
- 3 [Documents / Resources](#)
- 4 [Related Posts](#)

NeuroNexus


NeuroNexus IST-Motor Setup




INSTRUCTIONS:

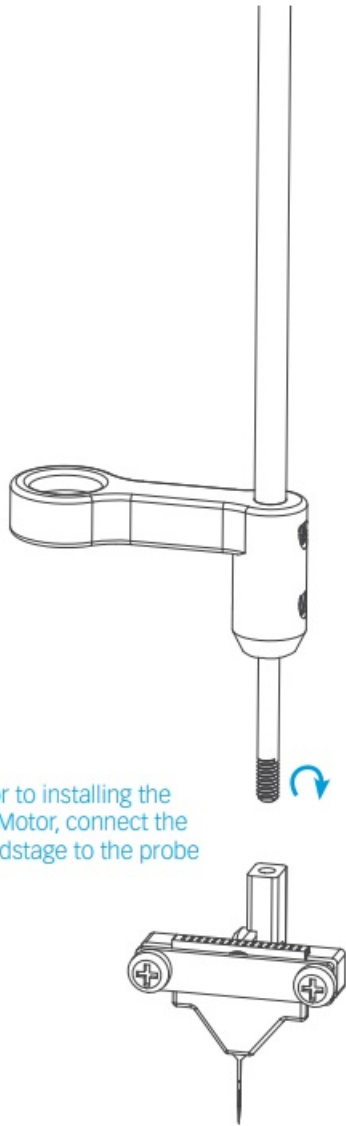1


Prior to installing the
IST-Motor, connect the
headstage to the probe

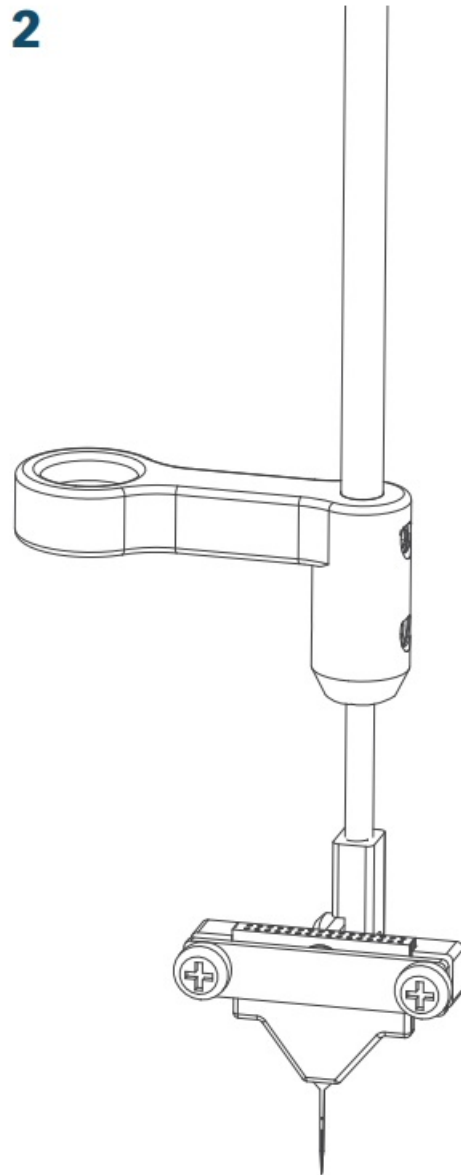2


3

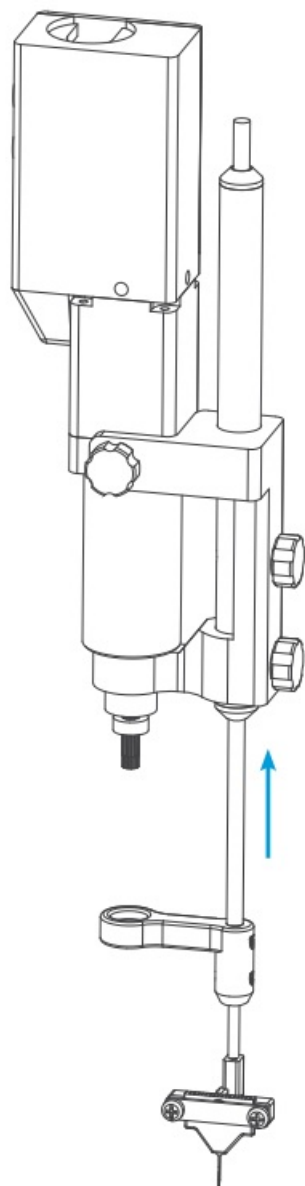


4

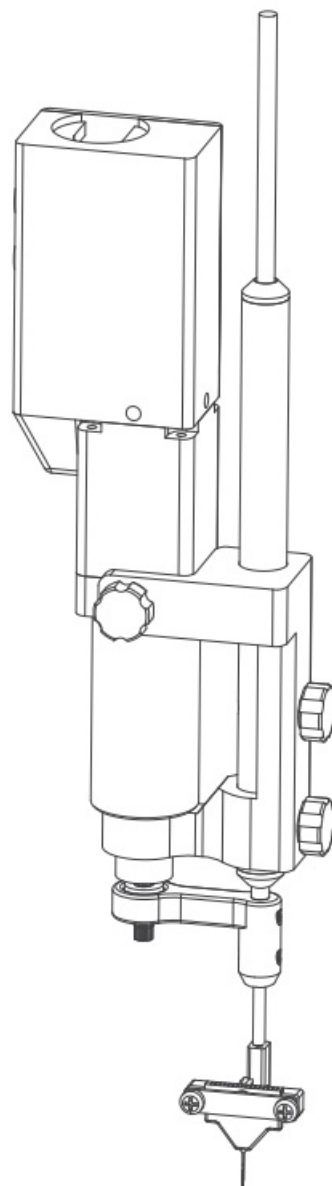


5

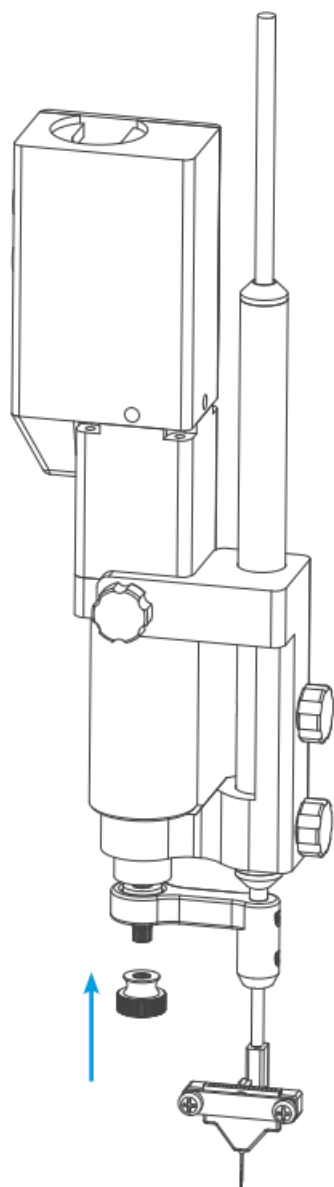

6

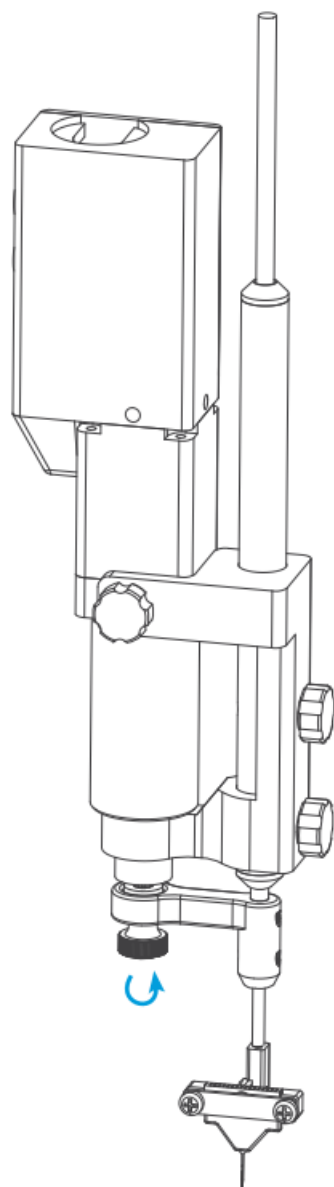


7

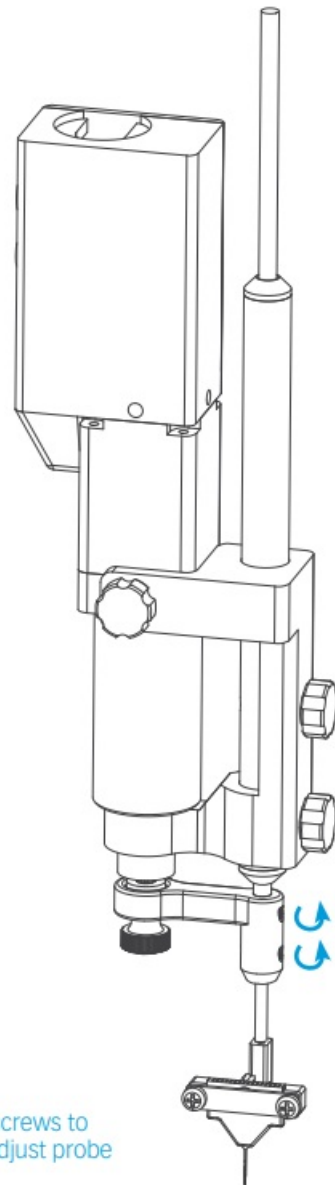

Loosen set screws to rotate and adjust probe orientation.


8

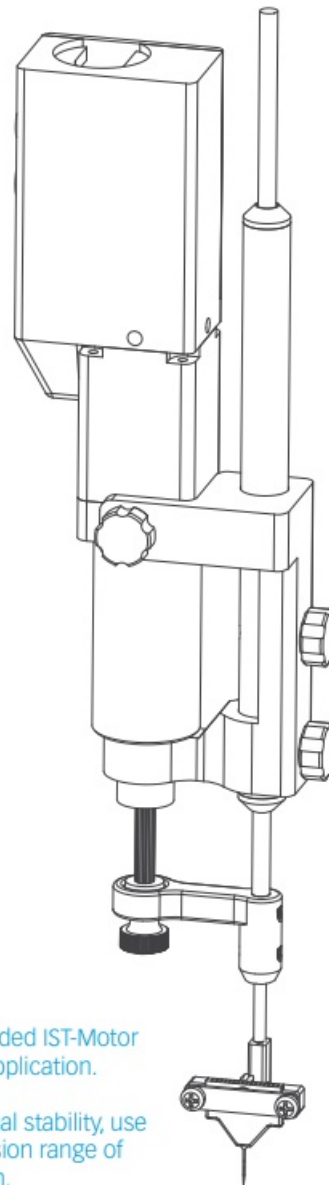

Use provided IST-Motor control application.

For optimal stability, use an extension range of 0 - 20 mm.

Documents / Resources

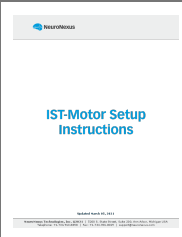	NeuroNexus IST-Motor Setup [pdf] Instructions IST-Motor Setup
---	---