

Newell®

**MC-DC2
Electronic
Programmable
Timer**



Newell MC-DC2 Electronic Programmable Timer Instruction Manual

[Home](#) » [Newell](#) » Newell MC-DC2 Electronic Programmable Timer Instruction Manual 

Contents

- [1 Newell MC-DC2 Electronic Programmable Timer](#)
- [2 OPERATING MANUAL](#)
- [3 SETTING THE TIME](#)
- [4 SPECIFICATION](#)
- [5 FAQs](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)

Newell®

Newell MC-DC2 Electronic Programmable Timer



OPERATING MANUAL

SAFETY INSTRUCTIONS

Before using the product, please read the following instructions carefully and keep them for future use. When transferring the product to a third party, it is advisable to include the instructions with the product.

1. Store in a dry, cool and ventilated place. Do not expose the device to moisture.
2. Keep away from heat sources and high temperature places, do not expose to direct sunlight.
3. Use indoors.
4. Do not drop the device or place heavy objects on it.
5. Keep out of the reach of children.
6. Disconnect the device from the mains before cleaning. Do not use liquid or aerosol cleaners.
7. Do not use the programmer if it is damaged.
8. If you notice smoke or a strange smell coming from the device, immediately disconnect the power supply.
Do not disassemble the device yourself. Disassembling the device will void the warranty. If there are problems with the device, bring it to an authorized service center.
9. The used equipment should be delivered to the appropriate waste collection point, it must not be placed together with other municipal waste.

FEATURES

- Display with backlight function,
- Possibility to program 10 options for switching on / off the device connected to the programmer,
- Random function,
- Manual switch,
- Optional DTS (daylight saving time) configuration.

FIRST STEPS

1. This timer contains a rechargeable battery. It is normal for the device to discharge if it has not been charged for a long time. In this case, the screen will not turn on.
 - To charge: just plug the programmer into an electrical outlet. The charging time should be at least 15

minutes.

- If the screen does not light up or displays distorted characters, just restart the system by pressing the “RESET” button.

2. Plug the programmer into a household electrical outlet, and then connect your electrical appliances to the programmer. Then you can proceed to the time setting and programming.

SETTING THE TIME




- Hold down the “CLOCK” button and the “WEEK” button to set the week.
- Hold down the “CLOCK” button and the “HOUR” button to set the hour.
- Hold down the “CLOCK” button and the “MINUTE” button to set the minutes.
- Hold down the “CLOCK” button and the “TIMER” button to select the 12-hour/24-hour screen.
- Hold down the “CLOCK” button and the “ON/AUTO/OFF” button to turn DST (daylight saving time) on/off.

SETTING THE TIMER

- Press the “TIMER” button, select and set the programmer. Setting rotations: 1 on, 1 off, 2 on, 2 off, 10 on, 10 off.
- Press the “HOUR” button to set the time.
- Press the “MIN” button to set the minutes.
- Press the “WEEK” button to set the day of the week. Multiple days of the week can be selected, e.g. if “MO” is selected, the programmer will operate only every Monday; if “MO, WE, FR” is selected, the programmer will operate every Monday, Wednesday and Friday.



- Press the “RES/RCL” button to cancel the selected on/off timer.”— — — : — —” will appear on the screen. , the timer will be canceled. Press the “RES/RCL” button again to reactivate the device.

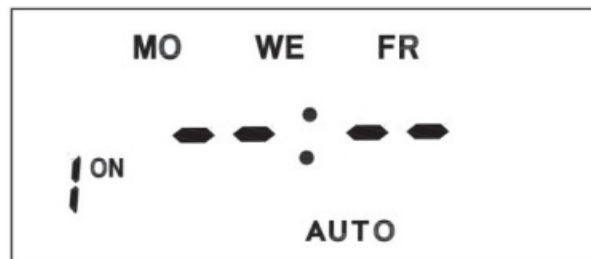

RANDOM FUNCTION



- Press the “RANDOM” button to activate the random function, press again to cancel the function.
- The system activates the random function only when the “AUTO” function is enabled.
- The random function will automatically start the timer from 2 to 32 minutes after setting.

Example:

- If timer 1 on was set to 7:30 pm with the random function enabled, the timer will start randomly between 7:33 pm and 8:03 pm. If timer 1 off was set to 23:00 with the random function enabled, the timer will start randomly between 23:02 and 23:32.
- To avoid overlap, leave at least 31 minutes of interval between different settings of the unit.

DISPLAYED FUNCTIONS MANUAL CONTROL

Displayed functions

- ON: outlet turns on.
- OFF: outlet turns off.
- AUTO: outlet turns on/off automatically using the programmer.

Manual switching on

- Press the “ON/AUTO/OFF”, button to switch from “AUTO” to “ON” mode.
- This mode allows you to turn on the appliance outlet. The power indicator will light up.

Manual shutdown

- Press the “ON/AUTO/OFF”, button to switch from “AUTO” to “OFF” mode.
- This mode turns off the appliance outlet. The power indicators will turn off.

SPECIFICATION

- **Operating voltage** 230VAC
- **Battery NiMh** 1.2V
- **Power consumption** <0.9W
- **Response time** 1 minute
- **Power output** 230VAC / 16A / 3680W

WASTE MANAGEMENT



The crossed-out trashcan symbol means that waste electrical and electronic equipment, batteries and packaging must not be placed with other household waste. They must be handed over to a separate waste collection system.

WARRANTY



Newell products are covered by a 40-month manufacturer's warranty.

The manufacturer reserves the right to change the information contained in this manual without prior notice.

- Made in China

FAQS

Q: Can I set the seconds?

A: No, the smallest unit of time is the minute.

Q: Does my programmer retain old settings without being plugged into an electrical outlet?

A: Yes, the device has a rechargeable battery that allows it to save settings without being plugged into an electrical outlet.

Q: Can the battery be recharged?

A: Yes, there is a rechargeable battery inside the programmer. We recommend charging for 4 hours to keep it fully charged.


Q: Does the device require an Internet connection?

A: The programmer does not require an Internet connection.

Q: Does the screen have a backlight function?

A: Yes, the screen has a backlight function.

Documents / Resources
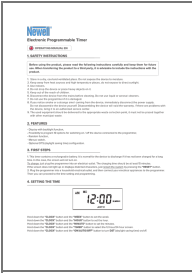
| | |
|---|---|
|  | <p>Newell MC-DC2 Electronic Programmable Timer [pdf] Instruction Manual MC-DC2 Electronic Programmable Timer, MC-DC2, Electronic Programmable Timer, Program mable Timer, Timer</p> |
|---|---|

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.