



Newell Remote RS Series Remote with Intervalometer Instruction Manual

[Home](#) » [Newell](#) » Newell Remote RS Series Remote with Intervalometer Instruction Manual

Newell Remote RS Series Remote with Intervalometer Instruction Manual



Contents [[hide](#)

[1 SAFETY INSTRUCTION](#)

[2 INSTALLATION](#)

[3 USING](#)

[4 WASTE MANAGEMENT](#)

[5 WARRANTY](#)

[6 Documents / Resources](#)

[7 Related Posts](#)

SAFETY INSTRUCTION

Before using the product, please read the following instruction manual carefully and keep it for future reference. When transferring the product to a third party, it is advisable to include the instructions.

1. This device is an accessory of electronic products. It may be affected by environmental elements, but this is unlikely.
2. Do not self-repair, disassemble or modify.
3. Do not expose to water or other sources of moisture.
4. Do not expose to high temperatures.
5. Do not use liquid or aerosol cleaners.
6. For use by adults.
7. Do not handle damaged battery.
8. Release the lock when not using it for a long time.
9. Dispose of used batteries according to guidelines in the manual.

INSTALLATION

1. To prevent any unexpected accidents, please turn off the camera.
2. Open the shutter socket cover and plug the remote control in the correct direction. (For a spiral plug, please turn the lock clockwise and make it tight. Then taking it off the camera, just turn the lock anti-clockwise and unplug it).
3. Turn on your camera and take pictures.

USING


The remote control does not need battery power. It is made with plug & play technology. The two-level shutter button works like the trigger in the camera. Pressing it halfway – sets the focus. Pressing it fully – releases the shutter.

1. Half press the release button and start the auto-focus system of the camera. After focusing on the subject, please fully press the release button to take a picture.
2. Lock the shutter (please set the camera to continuous shooting or BULB mode) and fully press the release button. By pushing the button forward, you may lock the camera and start continuous shooting or long exposure.

The manufacturer reserves the right to change the information contained in this manual without prior notice.

WASTE MANAGEMENT



 The crossed-out trashcan symbol means that waste electrical and electronic equipment, batteries and packagings must not be placed with other household waste. They must be handed over to a separate waste collection system.

WARRANTY



Newell products are covered by a 40-month manufacturer's warranty.



Documents / Resources

Newell Remote RS Series Remote with Intervalometer [pdf] Instruction Manual
Remote RS Series Remote with Intervalometer, Remote RS Series, Remote with Intervalometer, Intervalometer