

newline STV Plus Series Intelligent Display Instruction Manual

Home » newline » newline STV Plus Series Intelligent Display Instruction Manual



newline

STV+SERIES Intelligent Display Quick Start Manual



Contents

- 1 STV Plus Series Intelligent
- **Display**
- **2 Symbol Conventions**
- 3 Safety Instruction
- **4 Parts and Functions**
- 5 Ports
- **6 Remote Control**
- 7 Installation Guide
- 8 Operating
- 9 Documents / Resources
 - 9.1 References
- 10 Related Posts

STV Plus Series Intelligent Display

The company is committed to product updates and technical improvements. The technical parameters and specifications are subject to change without prior notice. The pictures in this manual are for reference only. Welcome to the world of NEWLINE.

Thank you for choosing the NEWLINE STV# series Intelligent Display. Please use this document to get the most out of your screen.

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:(1) This device may not cause harmul interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in

a particular installation. I this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient o relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipmentinto an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The symbol of the crossed out wheeled bin indicates this product should not be placed in municipal waste. Instead, dispose of waste equipment by handing it over to a designated collection point for the recycling of electrical and electronic equipment.

Symbol Conventions

Symbols are used in this document to indicate operations that need particular attention. The symbols are defined as follows:

□ NOTE	Provides additional information to supplement operation in the main text.
△ CAUTION	Indicates a potentially hazardous situation that, if not avoided, could resultin equipment dam age, data loss, performance deterioration, or unanticipated results.
△ WARNING	Indicates a hazard with risk that, if not avoided, could resultin death or injury.

Safety Instruction

For your safety, please read the following instruction before you use the product. Serious injury or property damage may be caused by improper operations. Do not try to repair the producton your own.

△ WARNING			
	Disconnect the product from the power supply immediately if major f ailures occur. Major failures include the following: • If smoke, a peculiar smell or an abormal sound is discharged from the product. • No image or sound is displayed, or the image error occurs. In the preceding scenarios, do not continue to use the product. Disc onnect power supply immediately and contact professional staff for t roubleshooting.		
\Diamond	Do not drop any liquids, metal or anything combustible onto the product. • If any liquid or metal are dropped onto or nto the product, power of the product and disconnect the power supply, then contact professi onal staff for solutions. • Pay attention to children when they are close to the product.		
	Putthe product on a stable surface. An unstable surface includes, and is not imited to aninclined plane, a shaky stand, desk or platform, that might cause the product to tur nover and be damaged.		
	Do not open the panel or change the product on your own. High voltage components are installed in the product. When you op en the panel, high voltage, electric shock, or other dangerous situati ons may occur. If inspection,adjustment, or maintenance is required, contact the local distributor for help.		
	Use the provided power supply. • To prevent the product from being damaged, do not use any types of power cables other than the one provided with the product. • Use a three-wire socket and ensure that is properly grounded. • Pull out the power plug from the socket if the productis not used fo r a long period.		
•	Clean the power plug regularly. • Fire or electric shock may be caused if the productis powered on, while you are cleaning. • Pull out the power plug before cleaning it with dried cloth.		

	Power output port is 5V/2A. The voltage/current of the rear power output port is 5 V/2 A (maxim um). Purchase the power code/ AC adapter according to customer needs. Please do not connect any products with different power requirement. Othe rwise, it may cause product damage o fire.
	 Do not put items on the top of the product. Do not put items, such as a container for liquid (avase, flowerpot, cosmetics or liquid medicine) onthe top of the product. If any water or liquid is spilled on the product, the product may sho rt circuit cause fire or electric shock. Donotwalk on or hang any items on the product.
	Do not install the product in an improper place. • Donotinstallthe product in humid places, suchas the bathroom, the shower room, near windows, or outdoor environments that experien ce rain, snow or other harsh weather. Avoid installation near hot spring vapor. The preceding environment s may cause faults in the product or electric shock under extreme conditions. • Do not put an exposed fire source, such as a lit candle onthe product.
A	Pullout the power supply during thunderstorms. • Do not touch the product during a lighting storm, you may experie nce an electric shock. • Install or place components that supply high enough voltage to ca use personal injury out of the reach of children.
	Do not touch the power cable with wet hands.

⚠ CAUTION		
	 Do not install the product in high temperature environments. Do not install the product near a heat source, such as a radiator, a heat reservoir, a stove or other heating products. Do not expose the product to direct sunlight, which may cause high temperatures and subsequent faults inthe product. 	
•	 When transporting the product: Pack the product for transport or maintenance by using the carton s and cushioning material provided with the product. Move the product vertially during transport. The screen or other components are easily broken if the productis moved in an improper way. Before you move the product, disconnect all external connections and separate all topple preventing products. Move the product carefully topreventit from being it or squeezed, especially the screen, which may cause injury if broken. 	



Do ot cover or block up any vents on the product.

- Any overheated components may cause fire, damage the product, and shorten the service life.
- Do ot lay the product down in a way where the venting surface will be covered.
- Do not install the product on carpet or cloth.
- Do not use a cloth such as table cloth to cover the product.

Keep the product away from the radio.

The product complies with the international EMI standard to prevent radio interference. However, interference may still exists and causes noise

in the radio. If noise occurs i the radio, try the following solutions.

- Adjust the direction of the radio antenna to avoid theinterference f rom the product.
- Keep the radio away from the product.

If the screen glass s broken or fall off.

- Keep all personnel 10 feet away from the screen to ensure safety.
- Do not perform any installation or disassembly while the screen gl ass s broken or has fallen off.

Use the battery correctly.

- Galvanic corrosion, electrc leakage, and even fire may be caused by improper battery usage.
- It is recommended to use the designated type of battery and instal I the battery by the correct electrodes (positive and negative).
- Donotinstalland use a new battery with a used one.
- Take out the battery if the remote control is not used for long peri od.
- Do not expose the battery to overheated environments, such as su nlight and or heat sources. «Dispose of the used battery based on y our local

regulations.

Do not damage the power cable.

- Do not damage, change, twist, bend, or forcibly drag the power ca ble
- Do not put weights (such as the product tself) onthe power cable.
- Do not forcibly drag the cable when you pullout the power plug. It he power cable is damaged, please contact the local distributor to repair or

replacet


• The power cable in the accessory box s for this product only. Do n ot use it on other products.

Additional advice:

- Use the product in an environment with comfortable lighting. Itis h armful to your eyes to watchina too bright or too dark environment.
- Relax your eyes watching for a period of time.
- Keep sufficient distance from the product to protect your eyes and prevent eyestrain.
- Adjust the volume to an appropriate level, especially at ight.
- Use amplifier equipment as the audio input source with caution. If you must use amplifier equipment, the input power should not exceed the maximum of speaker power. Otherwise, the speaker can become overpowered and damaged.




Front View

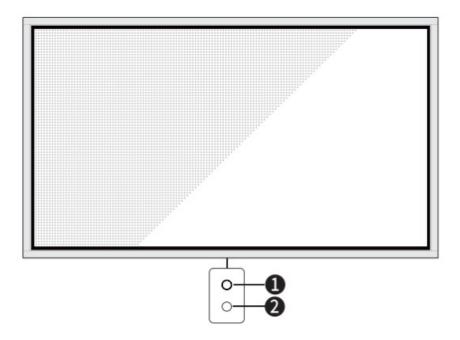

Rear View

STV-4324-PLUS/STV-5524-PLUS/STV-6524-PLUS STV-7524-PLUS/STV-8524-PLUS/STV-9824-PLUS

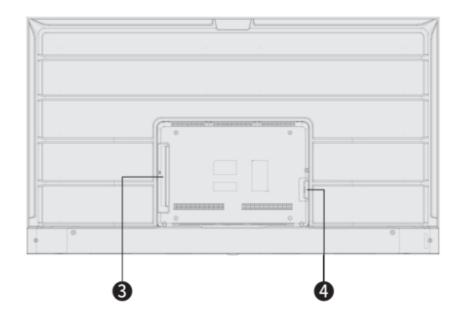

- 1. Indicator Light
- 2. PowerBution
- 3. RearPorts
- 4. Power Supply Plug

Note


The product images shown are for illustration purposes only and may not be an exact representation of the product.

Ports

Rear Ports

⚠ CAUTION

• While HDMI offers support for cables of varying lengths, the maximum cable length that Newline recommends for optimal performance 3 meters (10 feet) for HDMI and 1.8 meters (around 6 feet) for Display Port. Using cable longer than recommended length may cause data loss and a negative impact to display quality.

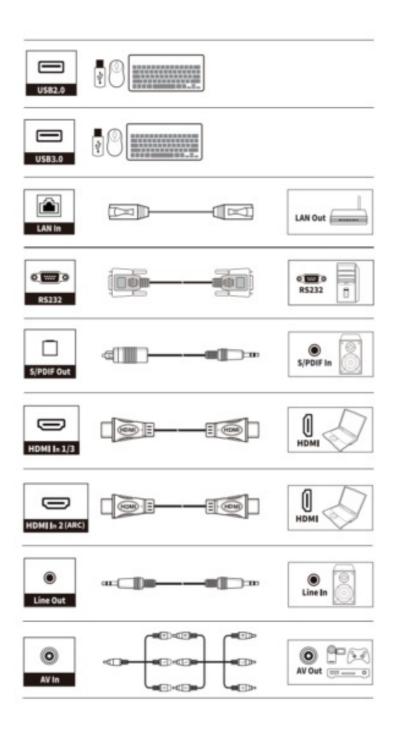

U Note

Please do not connect a 2.4G wireless mouse and USB 3.0 devices simultaneously, on the left back side of the display, in order to avoid the interference.

Remote Control



Carefully read the following instructions before using the remote control to avoid possible faults:

- Do not drop or damage the remote control.
- Do not spill water or other liquids on the remote control.
- Do not place the remote control on a wet object.
- Do not place the remote control directly under sunlight or near a heat source.

Buttons	Operations
Ф	PowerOn/Off
对	Mute/Unmute Audio
	Gobackto Home page
=	Openthe system menu
(;)	Up/Down/Left/Right
ОК	Confirm/OK
←	Return to Previous/Exit
Ð	Toselectinput source.
USB	To access Media Player.
₫┿/₡━	To control the volume.
₩	To access WiFi channel and wired network channel undersettings.
6	Open/turn off the wireless mouse mode
∅	To display the Settings menu.
	To access application list page.
SMART	No function.



Installation Guide

Safety Precautions

1. Linstallation Environment









 








2. Installation Direction





Hang the Product Horizontally

Do Not Lay Flat



Installation Precautions

Weight of the display:

43 inch: 14.1 b/6.4kg	55 inch: 23.8 lb/10.8kg
65 inch: 35.9 lb/16.3kg	75 inch : 50.1 lb/22.7kg
85 inch : 63.7 lb/28.9kg	98 inch ; 129.9 lb/58.9kg

- When using a mobile stand, ensure that the weight of the machine is less than the loading capacity of the mobile stand.
- When using the wall-mount bracket, ensure that the wall can support the weight of the machine. We recommend that the wall surface be reinforced and have a loading capacity 4 times of the weight of the machine. Consult a professionalinstaller for wall-mount installation.

Mote


The company does not undertake relevant legal responsibility for any problems caused by improper operation, i the third party mobile stand, or wall-mount bracket is beyond the scope of the machine.

• Do not install the machine where it might be hit by a door.

2. Vertical installation

When installing, try to keep the machine vertical.

Excessive tilt angle may cause the screen glass to fall off or the machine to collapse.

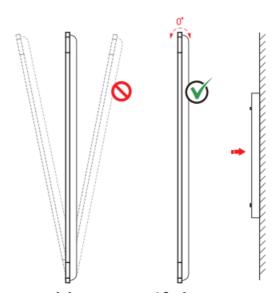


Note

Forany problem, please contact our support desk. Our company is not responsible for any damage or losses incurred by users if the users fails tofollow the instructions.

3. Ventilation

Ensure adequate ventilation and/or air conditioning environment. We recommend keeping certain distances from the side of the machine to the wall or panels.


Ventilation requirements are shown in following figure.

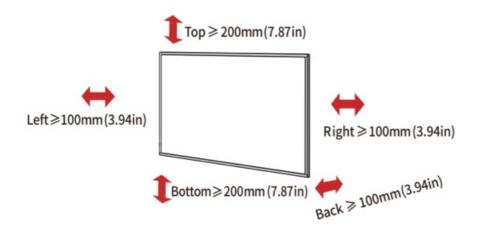

Installation

The dimensions of the four bracket mounting holes on the back panel are VESA MIS-F compliant. Dimensions of the mounting holes on the back panel are shown on the following figure.

- STV4324-PLUS: 300 X 300 mm/11.81 X 11.81in;
- STV-5524-PLUS: 300 X 300 mm/11.81 x 11.81in;
- STV-6524-PLUS: 400 X 300 mm/15.75 x 11.81in;
- STV-7524-PLUS: 400 X 300 mm/15.75 x 11.81in;
- STV-8524-PLUS: 500 X 400 mm/19.68 X 15.75in;
- STV-9824-PLUS: 800 X 200 X 200 mm/31.50 X 7.87X 7.87in;

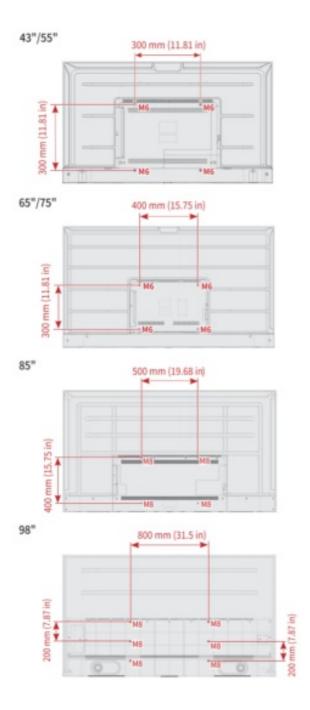

□ Note

• Consult a professionalinstaller to install the machine.

Turning On/Off

1. Power On

Step 1: Plug the power supply into the power outlet fully and plug the power connector into the side of the machine. Ensure the power is in the range of 100V to 240V with frequency at 50 Hz/60 Hz + 5%.

Mote

'The power outlet should be installed near the machine and shall be easily accessible.

Step 2: Press the "Power" button on the bottom or ⁽¹⁾ on the remote control.

2. Power Off

Step 1: Press the "Power" button on the bottom or press on the remote control, the power indicator will turn

to red.

Step 2: If you are not going to use the display for an extended period of time, we recommend you to Unplug the power cord.

Operating

Menu Page

On the Home page, press the menu button on the remote control to view menu page. The menu items include Picture and Sound.

Press ◀/▶/▲/▼ on the remote control to select a menu item, press OK to complete the menu switching and option setting in the menu. Ifyou don't want the menu page, press ← to exit the menu page.



Please scan below QR code for complete User Manual.



https://qrco.de/bfSBH0

Or visit our website <u>www.newline-interactive.com</u> for more information.

Contact Us for Support

Please directly contact the support team within your region.

USA

Hotline: +1 833 469 9520

Email: <u>support@newline-interactive.com</u>

EMEA

Hotline: +34 91 804 31 79 / +34 680 677 828 Email: <u>support eu@newline-interactive.com</u>

APAC

Hotline: +886 3 550 4768

Email: info_ap@newline-interactive.com

INDIA

Hotline: 1800-419-0309

Email: info.in@newline-interactive.com



Documents / Resources



newline STV Plus Series Intelligent Display [pdf] Instruction Manual STV-PLUS, STV-PLUS, STV-PLUS, STV-Plus Series Intelligent Display, STV Plus Series, Intelligent Display, Display

References

- Newline Global Leader in Interactive Displays
- User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.