




NEXA MLR-1922 Doorbell and Push Button User Guide

[Home](#) » [NEXA](#) » NEXA MLR-1922 Doorbell and Push Button User Guide 


NEXA



**MLR-1922/SET
DOORBELL AND PUSH BUTTON**

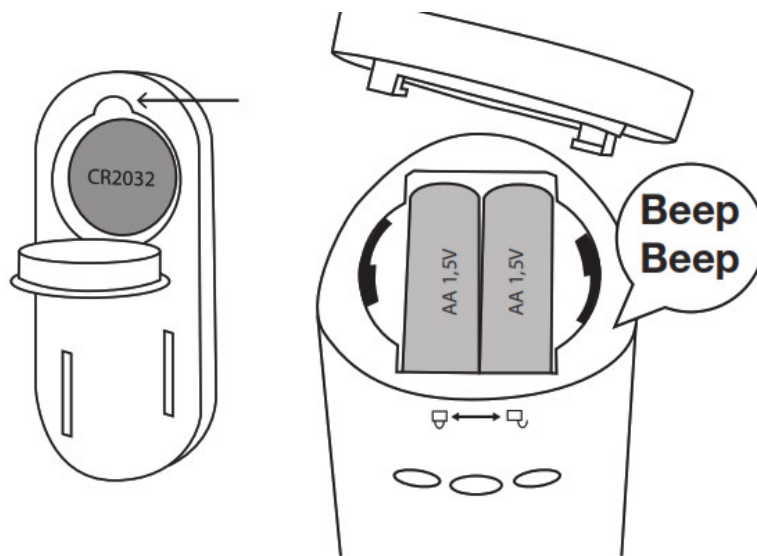

Insert batteries in the doorbell and remove the protective plastic for the battery on the ring button. The doorbell beeps two times when the batteries are inserted correctly.

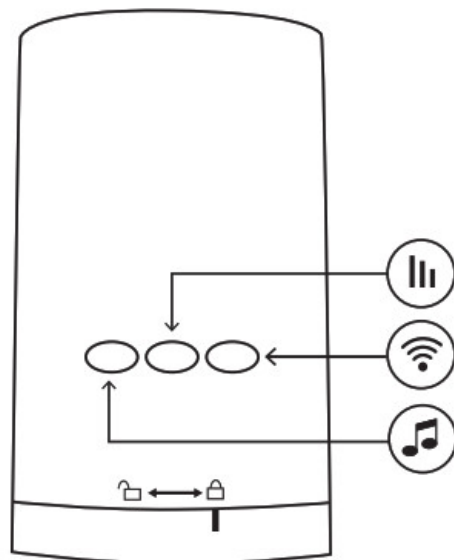

Select ring tone for the doorbell. 

Select sound volume on the doorbell. 



Press the programming button. Press the ring button. The doorbell will beep two times in response.



Contents

1 TECHNICAL DATA

**2 Documents /
Resources**

3 Related Posts

TECHNICAL DATA

DOORBELL

Power supply	Battery, 2 x AA (not included)
Protocol	System Nexa
Range	up to 150 m
Volume settings	0% 33% 66% 100%
Memory slots	32
Operating temperature	0-40 °C
IP rating	IP20, indoor use
Dimensions (W x H x D)	68 x 108 x 65 mm

PUSH BUTTON

Battery	1 x 3 V CR2032
Operating temperature	-10 – +40 °C
IP rating	IP44, outdoor use
Dimensions (W x H x D)	30 x 70 x 15,5 mm

NEXA AB, DATAVÄGEN 37B, 436 32 ASKIM, SWEDEN info@nexa.se | www.nexa.se

Documents / Resources

	NEXA MLR-1922 Doorbell and Push Button [pdf] User Guide MLR-1922, Doorbell and Push Button
--	--