



NEXA MLT-1925 Wireless Push Button User Guide

[Home](#) » [NEXA](#) » NEXA MLT-1925 Wireless Push Button User Guide 

NEXA MLT-1925 Wireless Push Button



Contents

[1 INSTRUCTION FOR USE](#)

[2 TECHNICAL DATA](#)

[3 Customer Support](#)


[4 Documents / Resources](#)

[4.1 References](#)


[5 Related Posts](#)

INSTRUCTION FOR USE

Remove the protective plastic for the battery on the ring button.

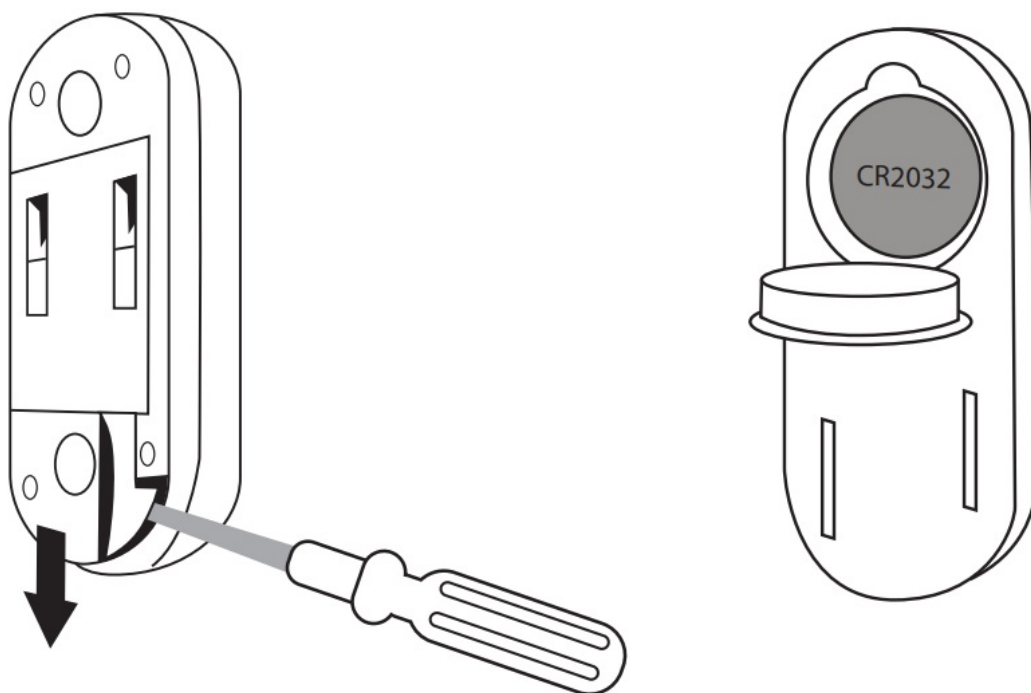

Programme the desired ring tone. Press the programming button. Press the ring button. The doorbell will beep two times in response.

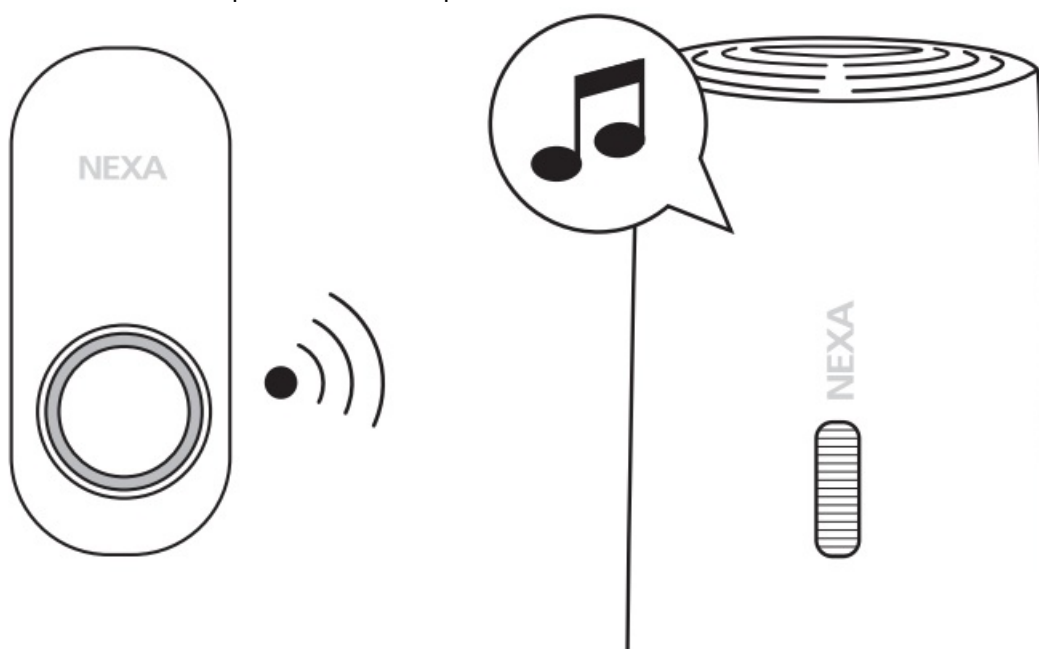

TECHNICAL DATA

PUSH BUTTON

Power supply	Battery, 1 x 3 V CR2032
Protoco	System Nexa
Range	up to 150 m
Operating temperatur	-10 – +40 °C
IP rating	IP44, outdoor use
Dimensions (W x H x D)	30 x 70 x 15,5 mm

Customer Support

NEXA AB, DATAVÄGEN 37B, 436 32 ASKIM, SWEDEN info@nexa.se | www.nexa.se

NEXA

Documents / Resources

	NEXA MLT-1925 Wireless Push Button [pdf] User Guide MLT-1925 Wireless Push Button, MLT-1925, Wireless Push Button, Push Button, Button
---	---

References

- [X NEXA – ett smart och tryggt hem](#)