



NexFoto NF-W10C 10.1 Smart Digital Picture Frame User Manual

[Home](#) » [NexFoto](#) » NexFoto NF-W10C 10.1 Smart Digital Picture Frame User Manual

Contents [[hide](#)]

- 1 NexFoto NF-W10C 10.1 Smart Digital Picture Frame
- 2 NF-W10C 10.1 Smart Digital Picture Frame
- 3 FRAME FEATURES
- 4 GETTING STARTED
- 5 UPLOADING PHOTOS AND VIDEOS
- 6 KEY FEATURES
- 7 MULTIPLE FUNCTIONS
- 8 GENERAL SETTINGS
- 9 TROUBLESHOOTING
- 10 CONTACTING US
- 11 FCC WARNING
- 12 FAQs
- 13 VIDEO
- 14 Documents / Resources
 - 14.1 References
- 15 Related Posts



 
 
 
NexFoto



NF-W10C 10.1 Smart Digital Picture Frame

1. 10.1" digital photo frame	1 piece
2. AC/DC adapter	1 piece
3. Bracket	1 piece
4. Quick Start Guide	1 piece
5. User Manual	1 piece
6. Micro USB Cable	1 piece

FRAME FEATURES

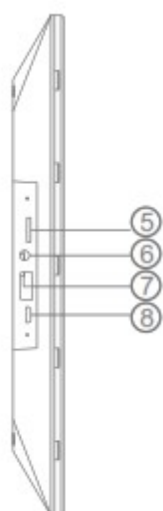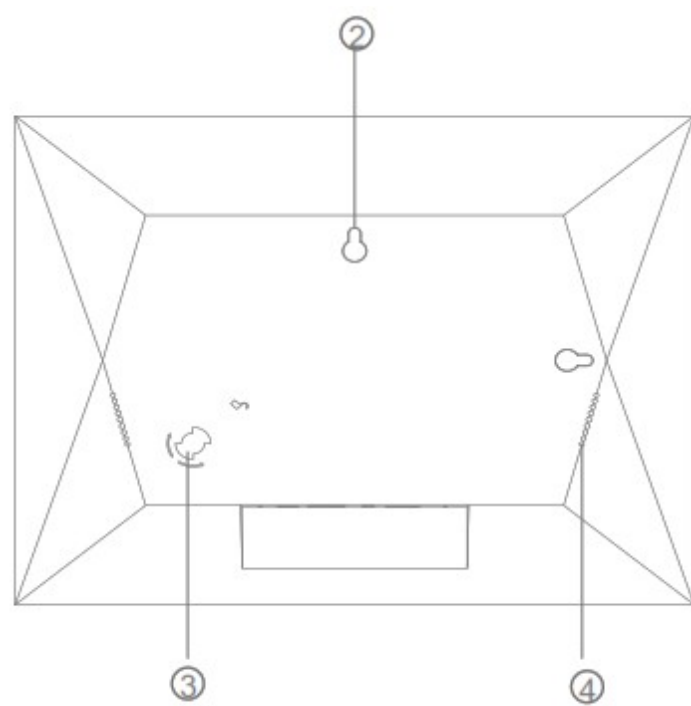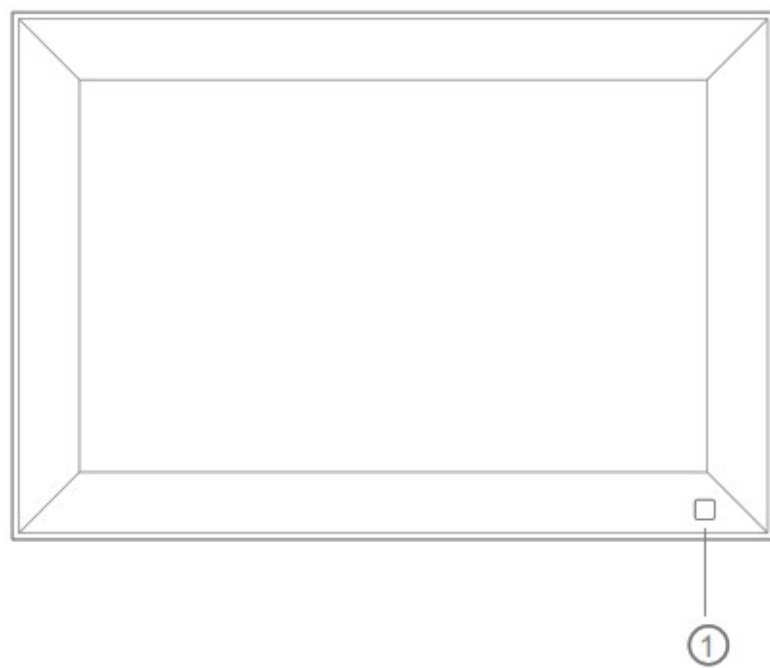

- | | |
|--|---|
| 1. Motion sensor lens
2. Wall-mounted hole
3. Bracket hole
4. Speaker | 5. Micro SD card slot
6. DC IN
7. USB(Type A)
8. Micro USB |
|--|---|

GETTING STARTED

1. Plug in your frame

Plug the socket in the back and connect the photo frame to a power source. The frame will power on in seconds. You can place the frame either in landscape or portrait mode (we recommend you place it in landscape mode during the first setup).

2. Initial Settings

There are several initial settings (Language, Wi-Fi, Nickname, City, Timezone etc.) when you enter the system for the first time.

3. Connect to Wi-Fi

You can connect to Wi-Fi during the initial settings or under the Wi-Fi setting. Select the Wi-Fi network you would like to connect to and enter the correct password if required. If your Wi-Fi network is not on the list, restart the router or move your frame closer to your router, wait for seconds and check it again.

Note:

1. The photo frame supports 2.4GHz Wi-Fi networks only.
2. A private Wi-Fi network is highly recommended.

UPLOADING PHOTOS AND VIDEOS

Upload Photos and Videos Via PHOTO App

1. Download the VPhoto App

Please download and install the VPhoto app on your mobile device by searching VPhoto on the App Store or Google Play.



2. Create an Account

 
Open the VPhoto app, please set your user name and your profile photo.

3. Pair Your Frame via the App

You will be required to enter the connection code or scan the QR code of your frame. It's in [Settings My Frame] on your frame. Once the process is completed, you will see a pop up message [Bind success].

Note:

- Connection Code is a 9-digit series number which can be found in your frame, device main interface → settings → My frame.
- The Connection code and QR code will refresh every 12 hours.
- Before you view the connection code and QR code, Please make sure your frame is connected to Wi-Fi, otherwise the connection code and QR code will not load out.

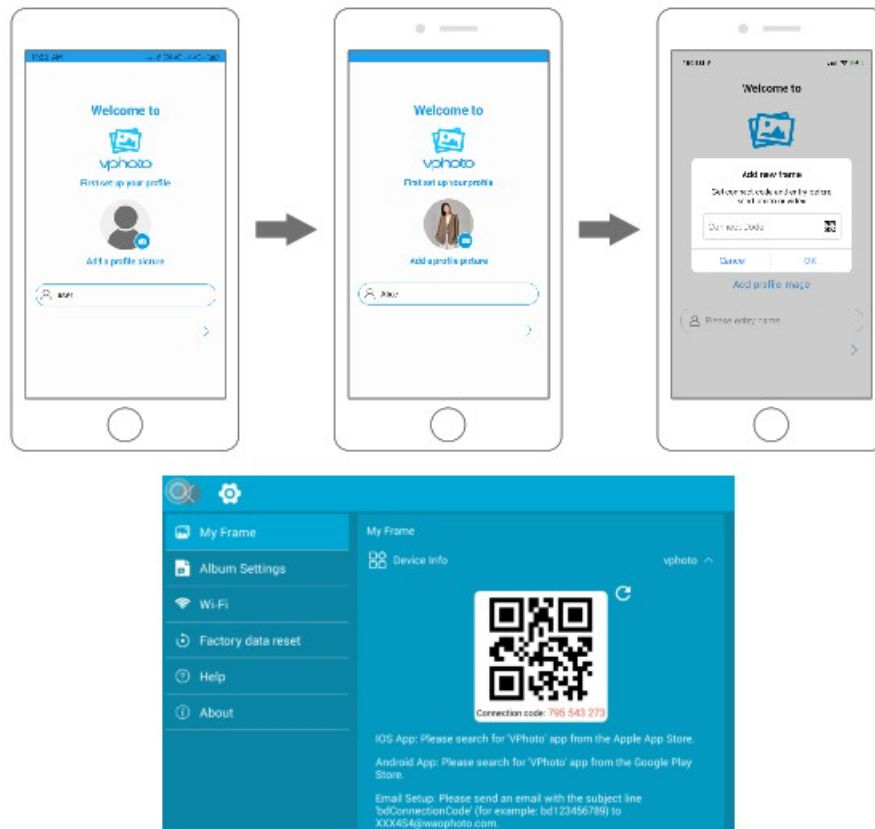


4. Upload Photos and Videos to Your Frame

After connecting the App to your frame, you can start adding photos and videos to your frame anywhere and anytime as below two ways:

- Select the photos or videos of your Albums of your phone to upload and choose the frame to send. Click the Next Step, you can write caption for each photo and choose the frame you want to send. Click the right arrow icon to confirm.
- Click Camera icon to take new photos or videos and choose the frame you would like to send to. Click the right arrow icon to confirm. The photo frame will receive the photos or videos in seconds, you can check the photo or video library on the frame.

Note:

 - If the frame didn't receive the photos or videos, please reboot the product or check the Wi-Fi network.
- Each video clip is limited to 200MB.

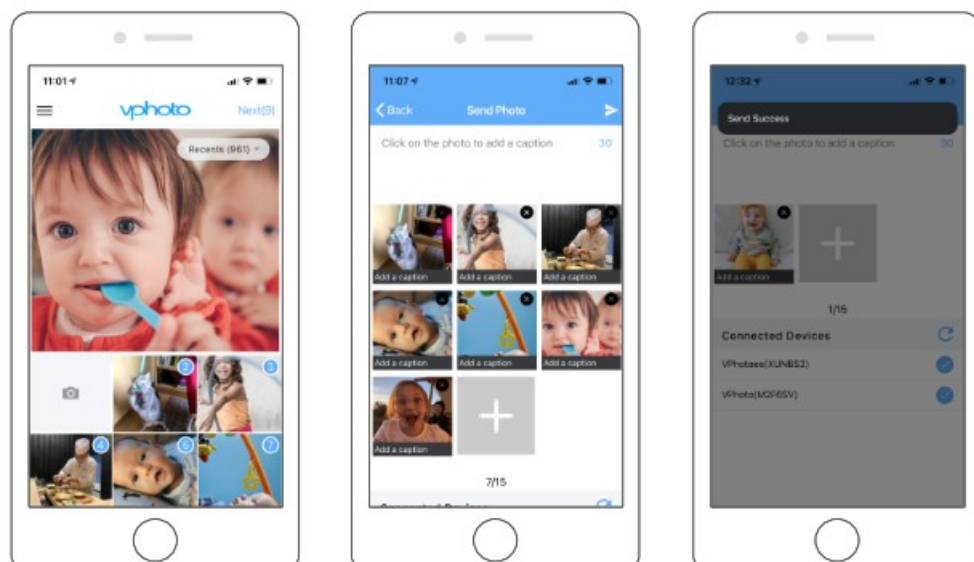

5. Invite Your Families&Friends to Connect

Your Frame Your families and friends can share their happy moments to your frame by following steps:

 
- Download and install the app.
- After opening App, please set user name and profile photo.
- Get the connection code shared by you to connect to your frame.
- Start sending the photos and videos to your frame.

Here are two ways to share you connection code:

1. Take a picture of the connection code on the frame to send.
2. Open your VPhoto App, click More icon on the upper left corner and choose Connected Device, select the frame you want your friend to connect, click the Share icon. You will receive a picture of QR code and Connection code. Send this to your families and friends.

Note:

1. Connection Code is a 9-digit series number which can be found in your frame, device main interfaceSettings My frame.
2. The Connection code and QR code will refresh every 12 hours.
3. Before you view the connection code and QR code, Please make sure your frame is connected to Wi-Fi, otherwise the connection code and QR code will not load out.


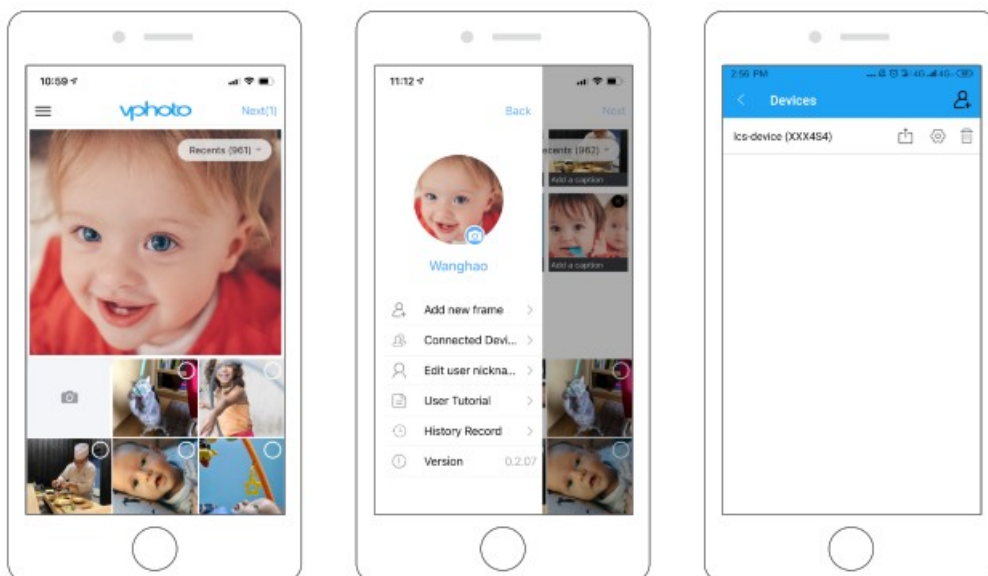


Upload Photos and Videos Via Email

You and your friends can also send photos and videos to the frame via your Email.

1. Connect your Email address to the frame via two methods:

  - By Pressing [+] in [User Management], then add mailboxes. You will receive an email to inform your binding request is completed and the way to send photos and videos to the frame.
- By emailing to the mailbox specified in [My Frame], with the subject: bd Connection Code (For Example bd1234576789).

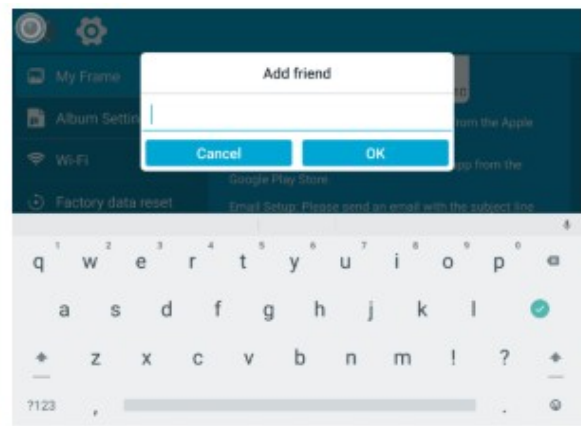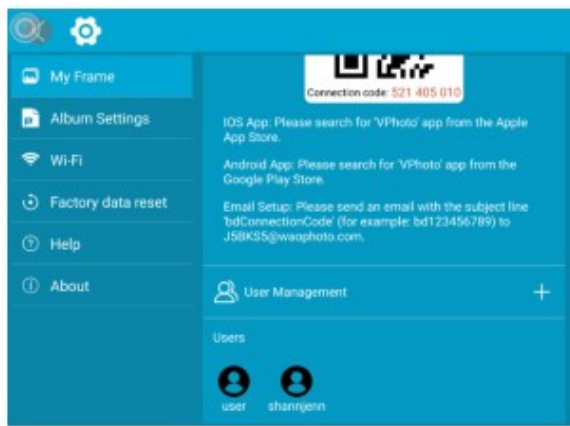

2. Upload Photos and Videos to Your Frame

After adding your email address to the frame, you can email photos and videos to the mailbox of the frame. Your photos and videos will be received in minutes, you can check the photo or video library on the frame. Each video clip is limited to 200MB.

Upload Photos and Videos Via USB Drive/Micro SD/SD Card

The frame can also support some external drive to add photos and videos to the frame.

1. Insert a USB drive/Micro SD/SD card into the frame, and wait for seconds, the frame will notify you when successfully connected.
2. Enter the Photo or Video library, click USB/SD card and you will see all the photos or videos stored in the USB drive/SD card.
3. Click the More icon at the upper right corner, select the photos or videos you would like to copy to the internal memory of the frame.
4. Click the Copy icon at the top then choose OK to import the photos or videos.
5. Your photos or videos will be reserved in internal storage in seconds, you can check the photo or video library on the frame.

Note:

1. Max support a 32GB Micro SD/SD Card.
2. Please remove all your external devices when you reset the photo frame.
3. If you have too many files stored in the card, it will take more time to read.
4. Not all models support external drive. Please take the actual product as the standard.

Upload Photos and Videos Via Computer

If you would like to upload large files to the frame, you can use computer to connect to your frame via USB cable simply. You can transferring photos and videos from computer in large quantities.

1. Connect your computer and frame with the USB cable.
2. Find your frame disk that named after the frame's model number in your computer.
3. Add media files that you would like to play on your frame to exact sub-folder in your frame disk. (pictures into 'Pictures' folder, videos into 'Movies' folder, etc.)
4. In your frame, the photos, videos and music you upload from your computer will be stored in 'Internal Storage' in the library.

KEY FEATURES

Pictures Slideshow

Enter [Picture] in the upper-left part of homepage.

You will find [All], [Internal Storage], [SD Card], [USB], [Folder], [Favorites] and user list; you can check all pictures of each playlist and operate in batch.

 
 
- [All] is including pictures in internal storage and external device. The default playlist is [All], you also can choose [Internal Storage] by tapping one picture of it to start slideshow.
- [Internal Storage] is all of the pictures sending from app, email, copied from external device.
- [SD Card]/[USB], shows the pictures in external drive like USB Drive, Micro SD, or SD card. To add pictures to [Internal Storage] from [SD Card]/[USB], you can click [!] in upper-right corner, choose the pictures you want to add to [Internal Storage] then click [] and [OK] to confirm the process.
- [Folder], you can create folders and name them. Only pictures in [Internal Storage] can be added.
- [Favorites], you can add favorite to your photos. Only pictures in [Internal Storage] can be added favorites, you can tap [♥] on the bottom column while playing pictures to add favorites to pictures.

Note:

1. Only pictures in [Internal Storage] can be added into folders and to favorite.
2. To delete some pictures, we highly recommend to operate in [Internal Storage] instead of [ALL]; Or please remove external device while deleting to avoid deleting files in your USB Drive/Card by mistake.
3. Not all models support external drive. Please take the actual product as the standard.

During the slideshow, you will have more tools to customize the slideshow just by touching the screen.

You can tap [♥] to add the picture to you [Favorites] and set multi-display for fun.

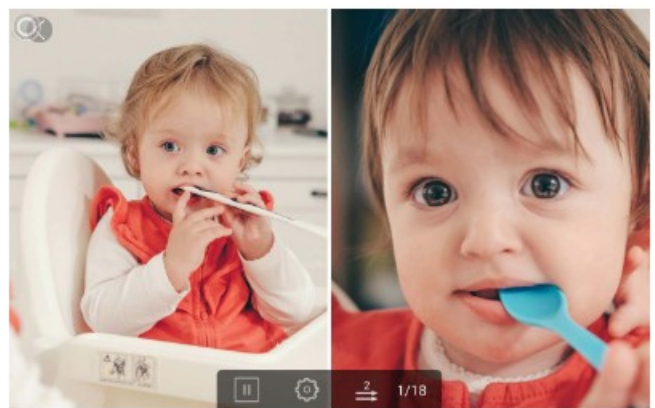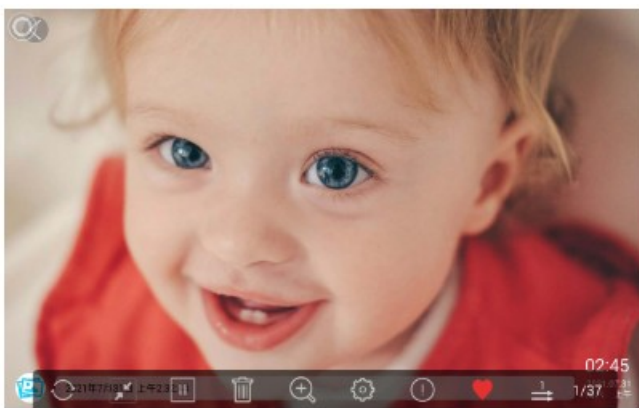

Videos Slideshow

Choose [Video] in homepage, select the video you want to play.

Note: Video Clip shared from the app and email will show in the video library.

MULTIPLE FUNCTIONS

Music

Choose [Music] in the homepage, select the music you want to play.

Weather Forecast

Choose [Weather] in homepage, you can check the weather of three days. Both [°C] and [°F] are available, switch to the temperature format you want to use. By pressing [+] on upper-left part to add several cities, you can know

the weather of the city you add.

Clock


Choose [Clock], you can choose the clock skin you like to present the time.

Alarm

Choose [Alarm] to set up alarm clock. [Add] for adding new alarm clock and [Edit] for adjusting the set time and deleting the alarm clock you choose.

GENERAL SETTINGS

My Frame shows your frame connection code and managing users.

- The Connection code and QR code will refresh every 12 hours. You can also refresh the code manually by .
- To nickname your frame, press the name of the frame on the right corner to edit; it will show on the app when you connect the frame.
- For sending photos and videos to your frame via email, you can easily by press [] at [User Management] to add the email address.
Please refer to “UPLOADING PHOTOS VIA EMAIL” for details.
- At [Users], it allows you to manage the connected account of the frame. Pressing the account name, you can Views Photos/Remark Name/Delete User/Delete User&Photos.

Album Settings

- **Brightness**
Adjust the brightness of the screen.
- **Sound**
Adjust the media volume.
- **Touch sounds**
Choose the sound on or off when touch the screen.
- **Assistive Touch**
Turn on this button, the assistive touch will appear on the screen. It is a quick navigation key to help you easily go to the Home page and adjust the volume.
- Language: English, Deutsch, Español, Français, Italiano, русский, , Choose the system language.
- **Slideshow**
Set Slideshow time to make the frame automatically displays photos after a period time of inactivity.
- **Slideshow Mode**
Choose either Sequential or Random mode to display photos.
- **Sort by**
Choose the pictures to be sorted by time or name.
- **Caption**
Turn on this button, the caption you write will be presented with the photo.
- **Date and Time**
Set the date and time according to your preference.
- **Sleep**
Set the Auto-On/Off time, as Sleep Schedule, to make the display automatically turn on and off at a specific

time.

- **Motion sensor**

Turn on this button, the frame will turn off when the room is empty for energy saving.

- **Auto-rotate screen**

With auto-rotate screen button on, you can place it in portrait and landscape, the frame will adjust the picture automatically.

- **Notification sound**

Choose to be notified new message with sound or not.

- **[Wi-Fi]**

Select the Wi-Fi you want your frame to connect with.

Factory data reset

1. Click Factory data reset
2. Here are two kinds of reset:
 - choose 'Delete all users and restore the device to inactive'; device files will be reset and all bound users will be unbound.
 - not choosing the option, only device files will be back to default setting. Bound users remain.
 - Click OK to reset your frame.

Help

A simple guide for you to share your pictures.

About

It's the product information about your frame like Version, Frame ID, Serial Number, etc.

When you contact us, sometimes our customer service may ask for frame information to better know the question. You may find it here.

TROUBLESHOOTING

1. **Does the frame have to be plugged in all the time?**

This frame needs to connect an DC outlet all the time.

2. **Why this frame cannot connect to Wi-Fi?**

It supports only 2.4GHz Wi-Fi networks, select the Wi-Fi network you would like to connect to and enter the password correctly if required. If your Wi-Fi network is not on the list, restart your router or move your frame closer to your router, wait for seconds and check it again.

3. **Does this frame have to be Wi-Fi connected to work or just in the setup process?**

This frame needs to connect to a Wi-Fi network for setup, receiving new photos/ videos, receiving user requests, and software updates. Other than that, the frame can play photos or video without a Wi-Fi connection.

4. **Why the frame does not have sound?**

Please check whether the volume is correct and the player is not in Mute mode.

5. **Can I share photos and videos to the frame?**

Yes, you can share both photos and videos (up to 200MB) to the frame.

6. Can I cycle pictures and videos together?

You could only play photos or videos separately.

7. Can this frame automatically turn on/off at a specific time?

You can go to the Sleep setting and set the auto on/off time as you want.

8. Why there is no files after sharing video or picture to cloud server?

Please check whether the upload process is completed or not.

9. Why this frame cannot play the file?

Please confirm if the file format is compatible with the frame.

10. Can I change the image transitions and displaying speed?

Yes, the speed can be adjusted in bottom column while pictures are displaying.

CONTACTING US

For any inquiries with NexFoto products, please feel free to contact us, we will respond within 24 hours.

E-mail: service@nexfoto.com

Official website: <http://www.nexfoto.com>

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.

FAQS

Is there an internal battery? If so, how long can I expected to last?

There is no battery. it has to stay plugged in.

If I order more than one, can I send different photos to each receiver?

You can send different photos to each receiver.

If you have any question, please contact us via service@nexfoto.com

Does this run on Battery or plugin or both?

It only runs when it is plugged in. The remote has a small circular cell battery but the remote cannot control the device if this device has no power.

If any questions, please feel free to contact us via service@nexfoto.com

If internet is intermittent, will photos be stored in a cloud sever until reconnected?

Photos are stored on the frame. No cloud. WiFi is only for transferring pics from phone to frame

How do i setup motion detection on the frame? Slideshow is still running when nobody is in the room

You can open Montion Sensor in Album Settings.

If you have any question,please contact us via service@nexfoto.com

What video and picture formats does this support?Because I always can't transmit

The digital photo frame supports pictures in JPG/JPEG/BMP/PNG format and videos in MP4 format.If you have any questions, please contact us via service@nexfoto.com

Why does it freeze up?

You can restart the digital photo frame. You can also contact us by email and we will assist you in solving this problem.If you have any question ,please contact us via service@nexfoto.com

Can I delete photos from digital photo frame?

While the photo is being displayed on the screen during a slideshow, press the menu button on the remote control or the onboard controls. On the popup menu, scroll down to "Delete Picture" and press "ok". Select "OK" and click it to delete the photo from your frame's storage.

Can digital frames be hacked?

Picture frames that are digital and allow you to scroll through photos or change an art display with the swipe of a hand are vulnerable. If your frame becomes hacked, a thief can discern non-active times in your home by the frame's ambient light sensors and can plan a robbery while you are away.

Does it download pictures from usb stick

Yes

Is it worth buying a digital photo frame?

Digital photo frames are a great way to display the hundreds of photos you take every year with your camera or smartphone. Let's face it; most just end up clogging up your storage or sitting in an online gallery that no-one ever visits.

Can you leave a digital photo frame on all the time?

Digital photo frames should stay connected to power all the time so that they can sync and receive all the latest photos and updates. Even if the display is off, most good digital frames will still be able to send and receive media.

VIDEO



<Documents/Resources/content/uploads/2022/10/Untitled-29.mp4>



[NexFoto NF-W10C 10.1 Smart Digital Picture Frame](#) [pdf] User Manual
JT150N-E02, JT150NE02, 2AJ8TJT150N-E02, 2AJ8TJT150NE02, NF-W10C 10.1 Smart Digital Picture Frame, NF-W10C, 10.1 Smart Digital Picture Frame, 10.1 Smart Picture Frame, Smart Digital Picture Frame, Digital Picture Frame, Picture Frame, Smart Frame, Frame

References

- [Nexfoto](#)