



NEXIGO ALR-F100 Fresnel Ambient Light Rejecting Screen for UST Projectors User Manual

<u>Home</u> » <u>NEXIGO</u> » NEXIGO ALR-F100 Fresnel Ambient Light Rejecting Screen for UST Projectors User Manual

Contents

- 1 NEXIGO ALR-F100 Fresnel Ambient Light Rejecting Screen for UST
- **Projectors**
- **2 Product Usage Instructions**
- **3 PARTS LIST**
- **4 INSTALLATION INSTRUCTIONS**
- 5 Documents / Resources
 - **5.1 References**



NEXIGO ALR-F100 Fresnel Ambient Light Rejecting Screen for UST Projectors



Specifications

• Product Name: 100 Fresnel Ambient Light Rejecting Screen for UST Projectors

• Model: ALR-F100

Product Usage Instructions

Unpacking and Checking Parts

After unpacking your unit, please check the packaging to make sure that every piece on the Parts List is present.

PARTS LIST

Code	Code Name	
A1	Inner Frame	2
A2	Inner Frame with NexiGo logo	2
В	Vertical Inner Frame	2
С	Bracket	2
D	Corner Bracket	4
F	Support Beam	1
G	Screw	20
Н	Fresnel Screen	1
1	Installation Mat	1
J1	Fiberglass Rod	4
J2	Fiberglass Rod	2
L	Rivet Bolt	20
М	Pull Rod	2
N	Vertical Pull Rod	2
0	Corner Protector	1
Р	Outer Frame Connector	2
Q1	Outer Frame	2
Q2	Outer Frame with NexiGo logo	1
Q3	Outer Frame	2
R	Vertical Outer Frame	1
U	Wall Protector	2
V	Wall Mounting Bracket	2
W	Regulating Rod	2
Х	Connecting Rod	2
Υ	Gloves	2
Z1	Wall Anchor	5
Z2	4mm Allen Wrench	2
Z3	3mm Allen Wrench	2

Installation

This installation video contains detailed instructions on the operation and installation of the NexiGo Ambient Light Rejecting Screen. Please scan the QR code provided in the manual or visit nexigo.com/manuals to download the latest manual or watch the installation video.

Contact Information:

Website: <u>www.nexigo.com</u>
Manufacturer: Nexight INC

• Address: 11075 SW 11th St, Beaverton, OR 97005, US

Tel: +1(458) 215-6088Email: cs@nexigo.com

Safety Notes:

Get in touch with FREE online services. Visit facebook.com/letsnexigo

FAQ

- Q: Where can I download the latest manual or watch the installation video?
 - A: You can scan the QR code provided in the manual or visitnexigo.com/manuals to download the latest manual or watch the installation video.
- Q: How many screws are included in the package?
 - A: There are 20 screws included in the package.
- Q: What is the contact information for NexiGo?
 - A: You can visit the website at <u>www.nexigo.com</u>, contact them via email at <u>cs@nexigo.com</u>, or call +1(458) 215-6088.

Scan the QR code or visit our link to download the latest manual or watch the installation video. nexigo.com/manuals



Thank you for choosing NexiGo! After unpacking your unit, please check the packaging to make sure that every piece on the Parts List is present.

PARTS LIST

Code	Name	Image	Quantity	Code	Name	Image	Quantity
A1	Horizontal Inner Frame		2	A2	Horizontal Inner Frame		2
В	Vertical Inner Frame		2	C	Horizontal Bracket	6000	2
D	Corner Bracket		4	F	Support Beam		1
G	Screw	E) ora	20	Н	Fresnel Screen		1
1	Installation Mat	\Diamond	1	L	Rivet Bolt		20
31	Horizontal Fiberglass Rod		4	J2	Vertical Fiberglass Rod		2
М	Horizontal Pull Rod		4	N	Vertical Pull Rod		2
0	Corner Protector		5	Р	Outer Frame Connector		2

Code	Name	Image	Quantity	Code	Name	Image	Quantity
Q1	Horizontal Outer Frame		2	Q2	Horizontal Outer Frame		1
Q3	Horizontal Outer Frame with NexiGo logo		1	R	Vertical Outer Frame		2
U	Wall Protector	9	2	V	Wall Mounting Bracket		2
W	Regulating Rod	2	2	х	Connecting Rod		2
Υ	Gloves		2	Z1	Wall Anchor	Ammin.	5
Z2	4mm Allen Wrench		2	Z3	3mm Allen Wrench		2

SPARE PARTS

E	Auxiliary Screw	9	1	G	Screw	S	4	
К	Rivet Nut		2	L	Rivet Bolt		1	

INSTALLATION INSTRUCTIONS

This installation video contains detailed instructions on the operation and installation of the NexiGo Ambient Light Rejecting Screen. Please scan the QR code below and FOLLOW THE INSTALLATION VIDEO to install and use.



CONTACT INFORMATION

Website: www.nexigo.com Manufacturer: Nexight INC

Address: 11075 SW 11th St, Beaverton, OR 97005, US

Tel: +1(458) 215-6088 Email: <u>cs@nexigo.com</u>

SAFETY NOTES

- 1. Please wear gloves to protect your hands from scratches.
- 2. Accidental damage to the screen is not covered under warranty. Please adhere to the following instructions to prevent damaging your Fresnel Screen.
 - 1. Do not curl or fold the screen after installation is complete.
 - 2. Don't touch the screen to avoid leaving fingerprints. Always use gloves while handling.
 - 3. Be careful not to scratch the material, as this will leave permanent markings on the surface of the screen.
 - 4. Don't point to the screen with your finger or any sharp objects.

Get in touch with FREE online services. facebook.com/letsnexigo



Documents / Resources



NEXIGO ALR-F100 Fresnel Ambient Light Rejecting Screen for UST Projectors [pdf] User Manual

ALR-F100 Fresnel Ambient Light Rejecting Screen for UST Projectors, ALR-F100, Fresnel Ambi ent Light Rejecting Screen for UST Projectors, Ambient Light Rejecting Screen for UST Projectors, Light Rejecting Screen for UST Projectors, Rejecting Screen for UST Projectors, Screen for UST Projectors, UST Projectors

References

- A NexiGo Manuals | NexiGo
- 🚵 NexiGo | Home Theater Projectors & Video Collaborations
- User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.