



NEXIGO CONT-19252 Gripcon Switch Controller for Handheld Mode User Manual

[Home](#) » [NEXIGO](#) » NEXIGO CONT-19252 Gripcon Switch Controller for Handheld Mode User Manual 



User Manual
Advanced Controller for
Switch



Model No:NexiCo-SWITCH CONT-19252

Contents

- 1 **CONT-19252 Gripcon Switch Controller for Handheld Mode**
- 2 **Contact Information:**
- 3 **Product Introduction:**
- 4 **specifications:**
- 5 **Package Includes:**
- 6 **Product Overview:**
- 7 **Charging Instructions:**
- 8 **Pairing Instructions:**
- 9 **Firmware Upgrade Instructions:**
- 10 **Notes:**
- 11 **Documents / Resources**
 - 11.1 **References**

CONT-19252 Gripcon Switch Controller for Handheld Mode

Register to get EX 'warranty. Only valid in registering 'within 14 days of product delivery. [nexigo.com/warranty](http://www.nexigo.com/warranty) :



<http://www.nexigo.com/warranty>

Welcome to the NexiGo Family!

Thank you for choosing the NexiGo Switch Controller! You are now part of an exclusive clubs the NexiGo family!Its our job to make sure you enjoy your membership. f you have any problems please contact us at cs@nexigo.com at any time for further assistance. This product is covered by our industry leading 1-year manufacturers warranty. Make sure to register your purchase at [nexigo.com/warranty](http://www.nexigo.com/warranty) within 14 days of the Gelivery date to extend your warranty coverage to TWO Years! From all of us here at NexiGo, we want to welcome you again tothe family. We thank you deeply for your trust and for your business. We know you'll love it here. We look forward to serving you again in the near future.

'Yours Sincerely,
The NexiGo Team

Contact Information:

Website: www.nexigo.com

Manufacturer: Nexight INC

Email: cs@nexigo.com

Tel: +1(458) 215-6088

Address: 11075 SW Tlth St, Beaverton, OR 97005, US

Product Introduction:

The NexiGo Switch Controller is designed specifically for the Switch. The console is directly plugged into the controller through the USB Type-C interface. You will then have to pair the controller with the console, but after initial pairing the controller will connect to the system automatically. This Switch controller provides better grip and enhances your gaming experience.

It features many additional functions, such as the ability to take screenshots, a six-axis gyroscope, dual motor vibration, and upgradeable firmware. This controller supports the original Switch power adapter or a standard 15V PD protocol power adapter for charging.


specifications:

- Rated Input Voltage/ Current: 15V /15A.

Package Includes:

Advanced Controller x1
User Manual x1

Product Overview:

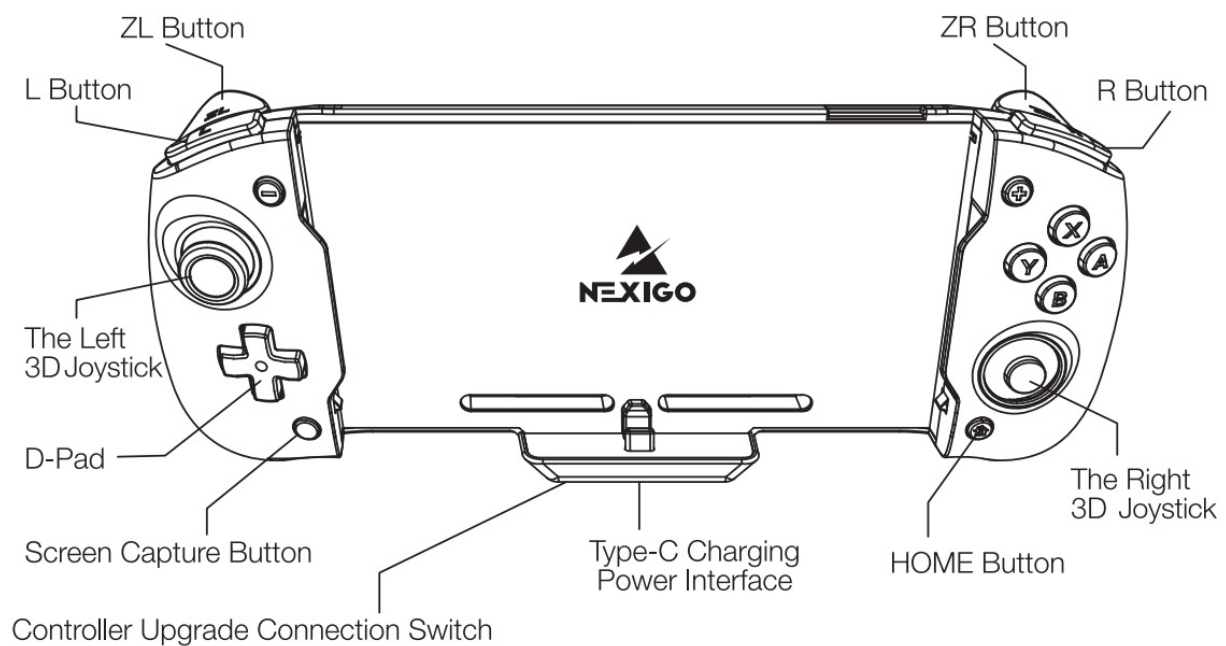

Charging Instructions:

- The original Switch power adapter when plugged in supports playing games while also charging the game console Simultaneously.This can also be done with standard 15V PD protocol povier adapter
- Note.There s o it battery inthe corfroller Charging aliays rfers specifically o Charging the Switch game console

Pairing Instructions:

- After you have plugged the Switch into the controller.start up the console and enter the 'Settings" menu. Find "Controller and select the *Pro Controller Wired Connection. then switch itto-On
- After the controller i selected. pressthe A key on the controller to connect to the console. You may need to goto

the Settings” menu to calibrate the joystick and gyroscope before use.

Note: Do not touch the joysticks or other keys when installing and plugging in the Switch console. This prevents the autorretic calibration. f the joysticks are deviating during use.
please unplug the Switch from the controller and reinsert it or g0'to the Settings” menu on the Switch and attempt Joystick Calibration again



Please scan the QR code to watch the controller pairing video.

Firmware Upgrade Instructions:

Note: Only needed if instructed to upgrade firmware by customer service.

1. Please remove the Switch console from the controller
2. Turn over the controller so you are looking at the bottom charging port from above. you will see a small toggle to one side.
3. Please flip the toggle to the on position. You may need to use a needle or small screwdriver to flip it.
4. Press and hold the left joystick while plugging the connection cable first into the controller and then into the computer. Once plugged into the computer you can release the left joystick.
5. Open the firmware upgrade, and follow the instructions to upgrade the hardware on the controller.
6. Once the upgrade is completed, please flip the toggle back to the off position to finish the firmware upgrade process.

Note: Firmware upgrades can be found at nexigo.com.

Notes:

- To clean the product, use only a dry cloth. Do not use water or alcohol. Ensure the controller is not powered or plugged in when doing so.
- This product cannot be used and/or stored in high humidity conditions.
- To ensure longevity and lifespan of the docking station. protect it from dust and do not stack heavy objects on it.
- If the docking station is inoperable but does not show signs of damage, please exercise the warranty or dispose of the item.
- If the dock is damaged. please exercise the warranty or dispose of the iter. DO NOT attempt to open and repair it independently.
- Keep this product dry.

- Keep away from small children due to potential shock hazards.



Documents / Resources

| | |
|--|--|
| The cover of the NEXIGO User Manual for the CONT-19252 Gripcon Switch Controller for Handheld Mode. It features the NEXIGO logo, the title "User Manual", and a small image of the controller. Below the image is a QR code and some text. | <p>NEXIGO CONT-19252 Gripcon Switch Controller for Handheld Mode [pdf] User Manual CONT-19252 Gripcon Switch Controller for Handheld Mode, CONT-19252, Gripcon Switch Controller for Handheld Mode, Switch Controller for Handheld Mode, Controller for Handheld Mode, Handheld Mode, Mode</p> |
|--|--|

References

- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.