




# NEXT audiocom MV3 High Power Portable Speaker User Manual

 
[Home](#) » [NEXT audiocom](#) » NEXT audiocom MV3 High Power Portable Speaker User Manual 

## Contents

- [1 NEXT MV3 High Power Portable Speaker](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 INTRODUCTION](#)
- [5 GETTING STARTED](#)
  - [5.1 MV3 OVERVIEW](#)
- [6 HANDS-ON](#)
  - [6.1 CONNECTIONS](#)
- [7 SERVICE](#)
- [8 ABOUT COMPANY](#)
- [9 Documents / Resources](#)
  - [9.1 References](#)
- [10 Related Posts](#)



**NEXT MV3 High Power Portable Speaker**

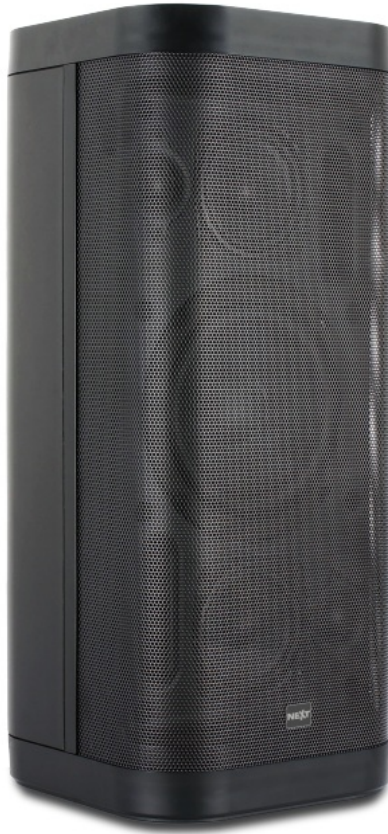

## Product Information

The NEXT Audiocom MV3 is a portable audio speaker that offers various features for an enhanced listening experience. It supports wireless Bluetooth connection, NFC pairing, and True Wireless Stereo (TWS) mode. The speaker also has a Line In input for connecting audio devices using a 3.5mm stereo jack. It comes with a built-in battery that can be charged using the supplied power adapter or via the USB charging port.

## Product Usage Instructions

To get started with the NEXT Audiocom MV3, follow these steps:

### Unpacking

When you receive the product, carefully unpack it and check the packaging contents to ensure everything is included.

### Safety First:

Review the safety precautions mentioned in the user manual to ensure safe usage of the product.

### Getting Started:

Refer to the user manual for an overview of the MV3, including its top panel and back panel features.

### Connections:

Make the necessary connections to use the speaker:

- **NFC Pairing:** If your audio device supports NFC, you can pair it with the MV3 by simply touching them together.
- **Wireless BT Connection:** Enable Bluetooth on your audio device and use the BT button on the MV3 to connect them.
- **Line In Input (AUX):** Connect your audio player device using a 3.5mm stereo jack to the LINE IN connector of

the MV3. This input has priority over Bluetooth.

- **USB Charger:** Use the USB charging port to connect an external USB device and charge it. Note that the speaker must be turned on to charge an external device.
- **TWS Mode (True Wireless Stereo):** Use the pairing button to pair two MV3 speakers for a stereo sound experience.

#### **Battery Care:**

Before using the MV3 for the first time, fully charge the built-in battery to prolong its lifespan. You can check the battery status using the Battery Status Check Button and the Battery Status LED Indicator.

#### **Troubleshooting:**

If you encounter any issues with the MV3, refer to the troubleshooting section in the user manual for possible solutions.

#### **Warranty Policy:**

Read the warranty policy provided by CVA ELECTRONICA, LDA for information on the warranty coverage and how to claim it.

#### **Correct Disposal:**

Dispose of the product correctly following the guidelines mentioned in the user manual.

#### **Technical Specifications:**

Refer to the user manual for detailed technical specifications of the NEXT Audiocom MV3.

## **INTRODUCTION**

### **GENERAL DESCRIPTION**


Thank you for purchasing a NEXT Audiocom MV3 portable speaker. This user manual will provide you with useful and important information about your equipment. Please devote some time reading it and keep it at hand for future reference. The NEXT Audiocom MV3 is an high power portable speaker that provides a balanced sound with an excellent bass response. Your parties will never be the same.

**ATTENTION!** Because of the continuous evolution of techniques and standards, NEXT Audiocom reserves the right to change the specifications of its products without warning. For the most updated version of this manual and general information about this and other products, please visit our website [www.nextaudiogroup.com](http://www.nextaudiogroup.com).

### **UNPACKING**

NEXT Audiocom's products are built under strict quality guidelines and supervision, according to the highest standards. When unpacking your product, carefully examine it for any signs of possible transit damage and inform your dealer immediately if any such damage has occurred. It is suggested that you retain the original packaging so that the product can be repacked in the future when necessary. Please note that NEXT Audiocom and its authorized distributors cannot accept any responsibility for damage to any returned product using non-approved packaging.

### **PACKAGING CONTENTS:**

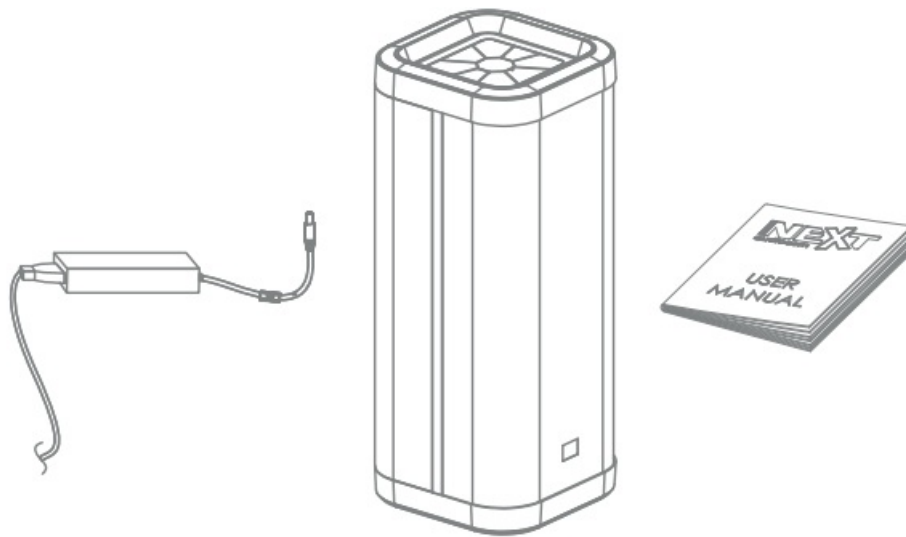

- NEXT Audiocom MV3
- Power Supply
- User Manual

### **SAFETY FIRST**

Please take some time to review the following statements concerning safe use of your NEXT Audiocom MV3.

- Read these instructions
- Keep these instructions
- Heed all warnings
- Follow all instructions
- This equipment is intended to be used only with the power supply and/or charging cable provided by the manufacturer
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles and the point where they exit from the apparatus
- Never use the speaker close to ignition or heat sources such as radiators, ovens or any other apparatus that produce heat
- Do not use the equipment near water or exposed to rain
- Do not expose batteries to excessive heat such as sunshine, fire or the like
- If the equipment is not functioning properly or has been damaged in any way, switch it off immediately
- Do not open or try to service the equipment. It may only be repaired by authorized, qualified personnel
- Clean the equipment using only a clean dry cloth
- Unplug this apparatus during lightning storms or when unused for long periods of time
- Do not operate the unit for an extended period with the sound distorting

### **WARNINGS**



**CAUTION:**

- Never remove the cover, because otherwise there may be a risk of electric shock. There are no user serviceable parts inside. Have repairs carried out only by qualified service personnel.
- The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electrical shock.
- The exclamation mark within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions.



**CAUTION:**


The use of this equipment is subject to the respectively applicable national accident prevention rules and regulations. As a manufacturer, NEXT Audiocom is obligated to notify you formally about the existence of potential health risks. Hearing damage due to high volume and prolonged exposure: When in use, this product is capable of producing high sound-pressure levels (SPL) that can lead to irreversible hearing damage in performers, employees, and audience members.

For this reason, avoid prolonged exposure to volumes in excess of 90dB.

**GETTING STARTED**

**MV3 OVERVIEW**

**TOP PANEL**

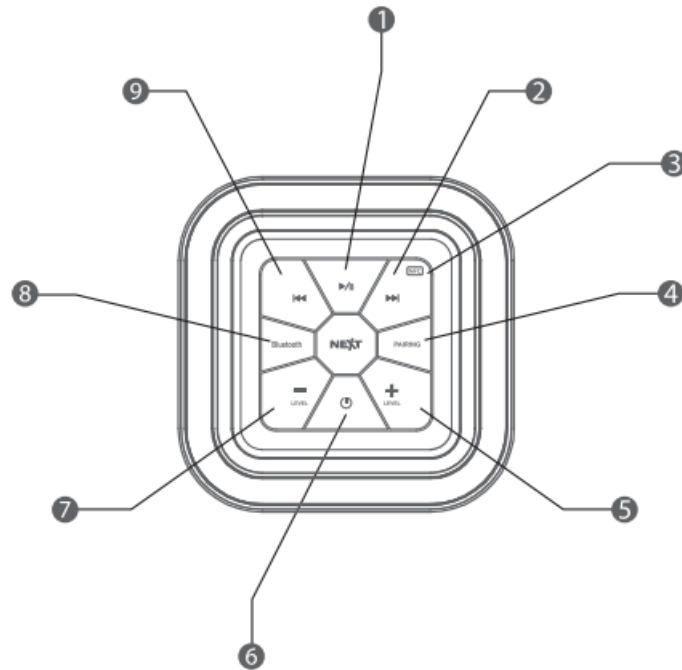

### 1. **Play/Pause**

Press once to play. When playing press once to pause, press again to continue playing

### 2. **Forward**

Press to jump to the next song (on BT only)

### 3. **NFC TAG**

Use the NFC function to quickly connect your device (refer to page 3)

### 4. **Pairing**

Use it to pair two MV3 speakers in TWS mode (refer to page 3)

### 5. **Volume Up**

Increase overall volume. All LEDs will blink when the maximum level is reached

### 6. **Power**

- Press to turn the MV3 ON
- Press and hold for 3 seconds to turn the MV3 OFF

### 7. **Volume Down**

Decrease overall volume. All LEDs will blink when the minimum level is reached


### 8. **BT**

- Click to Enable/Disable BT connection
- When disconnected the LED will blink fast (twice per second)
- When connected the LED will stay solid
- When playing the LED will blink (once per second)

### 9. **Backwards**

Press to jump to the previous song (on BT only)

## **BACK PANEL**

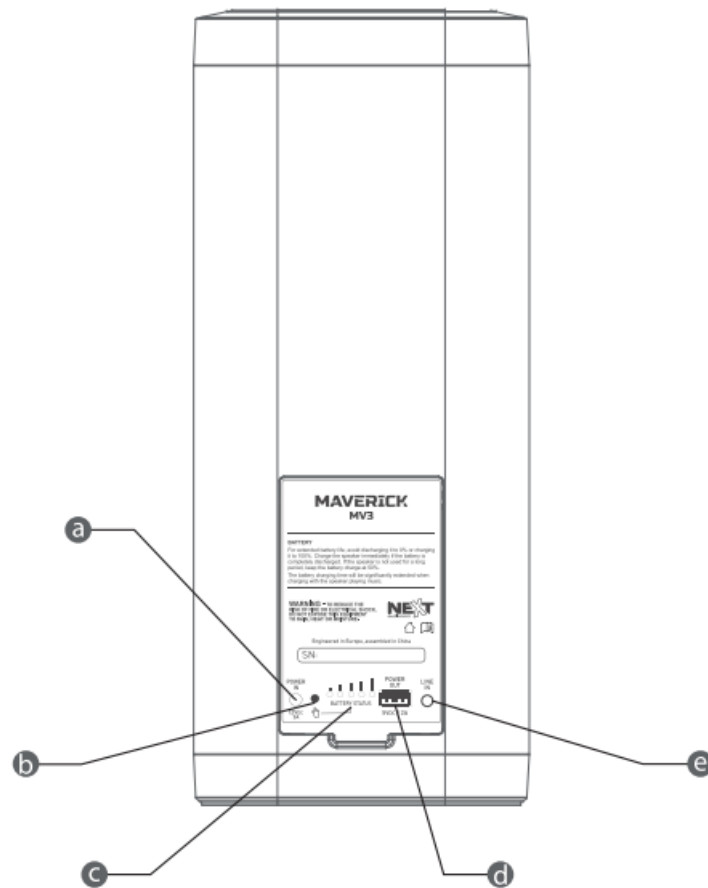

- **a. Power Input**

Use the supplied power adapter to charge the MV3

**ATTENTION!**

Fully charge the built-in battery before using for the first time, which will prolong the battery lifespan.

- **b. Battery Status Check Button**

- Check the status of the MV3 battery by pressing this button.
- The battery level can be consulted even with the speaker turned off

- **c. Battery Status LED Indicator**

The number of LED's that will light up indicate the battery level according to the table below:

1:	■	0%-20%
2:	■ ■	21%-40%
3:	■ ■ ■	41%-60%
4:	■ ■ ■ ■	61%-80%
5:	■ ■ ■ ■ ■	81%-100%

- **d. USB Charging Port (5V, 2A)**

Connect an external USB device to this port to charge it.

**NOTE:** This USB port is intended for charging only. In order to charge an external device, the speaker must be turned on.

- **e. Line IN**

AUX audio input. Connect your audio player device using a 3.5mm stereo jack. This input has priority over BT.


## HANDS-ON

### CONNECTIONS

#### NFC PAIRING

The NEXT Audiocom MV3 features NFC pairing function. Simply pair your audio device with one touch.

1. Turn on your speaker. Set the NFC function of your mobile device to ON. (Prior to NFC pairing the mobile device must have been manually paired at least once with the MV3)
2. Touch your mobile device to the NFC logo on the top of your speaker.

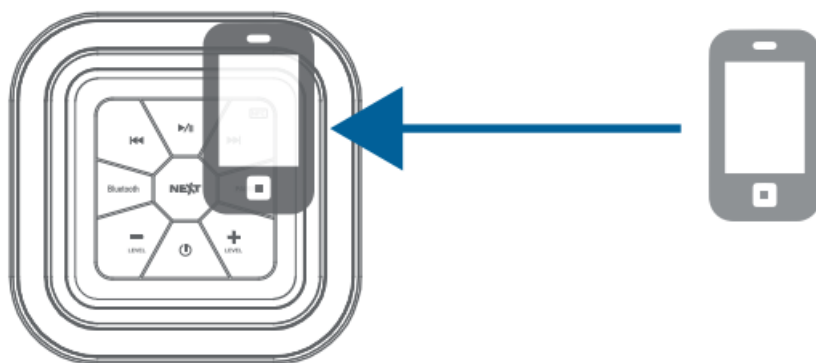

#### ATTENTION!

Avoid using covers or any blocking parts on your mobile phone while reading the NFC tag for pairing.


3. Follow the on-screen instructions to complete the connection, if there are any.

After the BT connection is established, the BT LED indicator switches from flashing to steady.

#### WIRELESS BT CONNECTION

1. Press the BT button (page 2, button 8) on the speaker to enter BT pairing mode. A voice will sound “BT Mode” and the BT LED will blink quickly waiting for pair.
2. On your mobile device choose “NEXT MV3” to connect.

Once successfully connected, audio will stream from your BT device to this speaker.

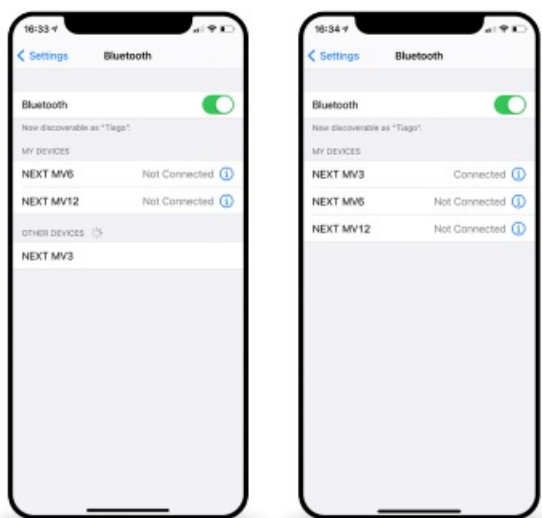


**NOTE:** The image represents a certain mobile phone model. In your case, the display may differ.




### LINE IN INPUT (AUX)

Connect a 3.5mm audio cable (not supplied) to the headphone socket of your portable audio device and the LINE IN connector of the MV3. Turn on your portable audio device and start playing your favourite songs.

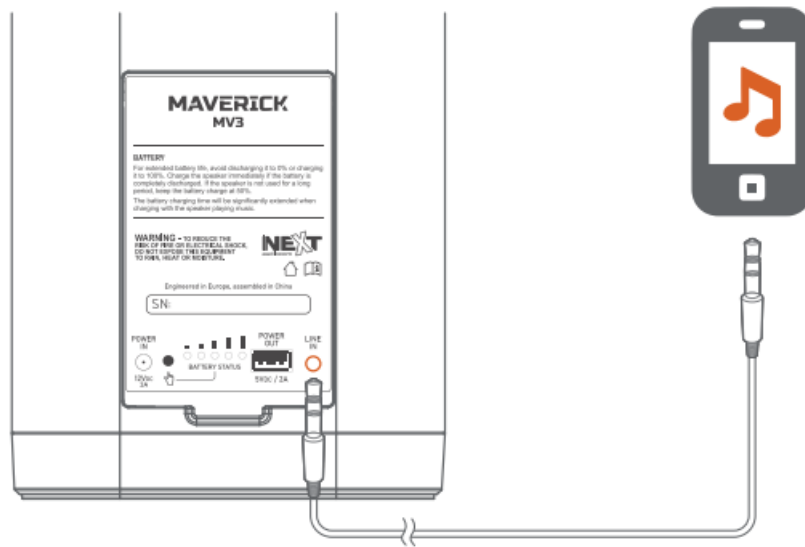


### USB CHARGER

- You can use the MV3 as a power bank for your rechargeable USB devices (5V, 2A).
- Connect your USB device to the USB port on the rear of this speaker.

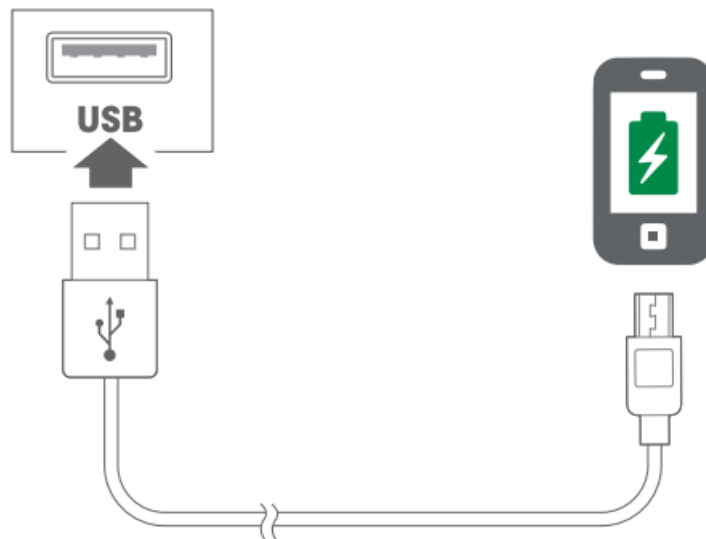

### TWS MODE (TRUE WIRELESS STEREO)

- Connect two MV3 with no cables using the TWS technology.
- Press and hold "PAIRING" on both speakers simultaneously for 3 seconds, you will hear a voice indicating the speakers are pairing. Once TWS connection built up, you will hear another voice confirming the successful pairing

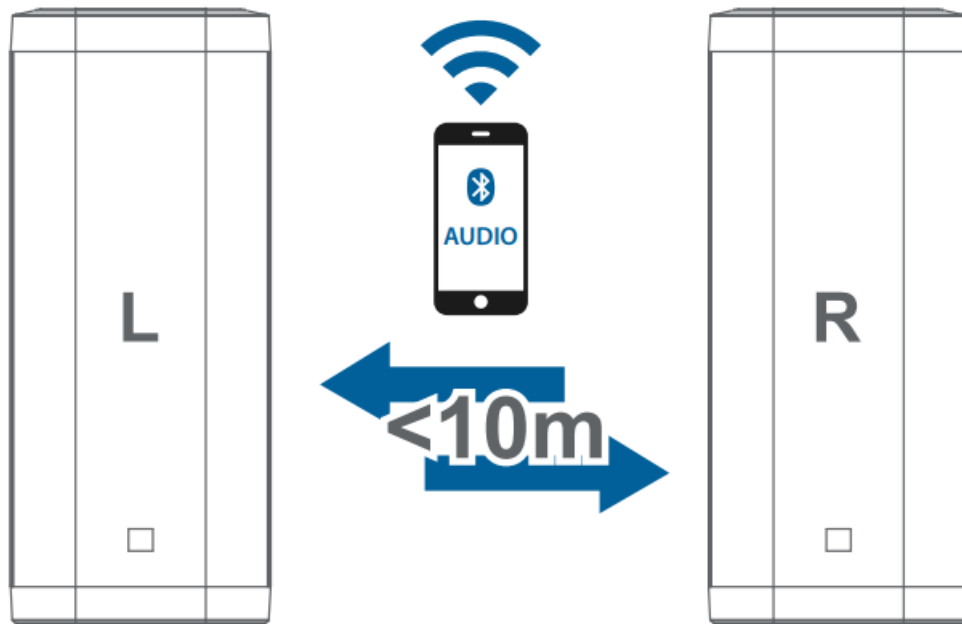

## SERVICE

### BATTERY CARE

- Fully charge the built-in battery before using for the first time, which will prolong the battery lifespan.
- Avoid to discharge the battery below 20% and charge it above 90%. It will decrease the battery's life time.
- If you are going to store your speaker for an extended period (over 10 days), charge it to between 40% and 60% before turning it off and storing it.
- Avoid extremes of heat and cold. If your speaker gets very hot or cold it can strain the battery and shorten its lifespan.

### TROUBLESHOOTING

#### CAUTION:

Never try to repair the product by yourself. If you have any problems while using this product, check the following points before you request service.

- **Problem: The equipment doesn't turn on Action to Solution:**
  - Ensure the power adapter is plugged into the outlet and to the MV3
  - Make sure the speaker is fully charged, if not use the power adapter to turn your speaker on
- **Problem: No Sound from the Speaker Action to Solution:**
  - Make sure that the MV3 is powered on
  - Make sure that volume level is turned to an audible level on both audio player and MV3
  - Make sure that it is connected to a music source
- **Problem: The BT device can't connect with the Speaker Action to Solution:**
  - Check if you enable the BT function of the device
  - Move the device closer to the MV3, or remove any obstacle between the device and the MV3

### WARRANTY POLICY

NEXT Audiocom products are warranted, by NEXT Audiocom, against manufacturing defects in materials or craftsmanship over a period of 2 years counting from the date of original purchase for final customer. The original

receipt of purchase is mandatory for warranty validation purposes, and the product must have been bought from a NEXT Audiocom authorized dealer. The warranty can be transferred to a subsequent owner during the warranty period, however, this cannot extend the warranty period beyond the original warranty period of two years from the original date of purchase stated on the NEXT Audiocom's invoice. During the warranty period NEXT Audiocom will, at its own discretion, either repair or replace a product which prove to be defective provided that the product is returned in its original packaging, shipping prepaid, to an authorized NEXT Audiocom service agent or distributor. NEXT Audiocom cannot be held responsible for defects caused by unauthorized modifications, improper use, negligence, exposure to inclement weather conditions, act of God or accident, or any use of this product that is not in accordance with the instructions provided by this manual and/or NEXT Audiocom. NEXT Audiocom is not liable for consequential damages. This warranty is exclusive, and no other warranty is expressed or implied.

This warranty does not affect your statutory rights.

## **CORRECT DISPOSAL**

When the MV3 is to be definitively discarded, take the product to a local recycling plant for a disposal which is not harmful to the environment. This equipment should not be treated as general household waste. Devices marked with the symbol below must not be disposed of as household waste. For more information, please contact your retailer or local authorities.

For products with a built-in battery that lasts for the lifetime of the product, removal may not be possible for the user. In this case, recycling or recovery, it becomes necessary to replace such a battery, this procedure must be performed by authorized services centers. In the EU, it is illegal to dispose of any battery with household trash. All batteries must be disposed of in an environmentally sound manner. Contact your local waste-management officials for information regarding the environmentally sound collection, recycling and disposal of used batteries.

## **TECHNICAL SPECIFICATIONS**

- **Product Type:** High Power Portable Speaker
- **Frequency Response (-6dB):** 60Hz – 20kHz
- **RMS Power:** 65W
- **SW Driver:** 1 x 6" Subwoofer
- **LF Driver:** 2 x 3" Woofer
- **HF Driver:** 2 x 1" Tweeter
- **Wireless Connection System:** BT 4.2+EDR+BLE
- **Wireless Range:** 10m (32.8ft)
- **Audio Inputs:** Stereo BT, AUX 3.5mm Audio Jack
- **Special Features:** NFC, TWS, USB Charger 5V/2A
- **Power Supply:** DC 12V/3A
- **Battery Type:** Rechargeable 7.4V/6600mAh (Lithium-ion) Battery Charge Time: 4 Hours
- **Battery Play Time:** Up to 20 Hours
- **Dimensions (WxHxD):** 178 x 425 x 178mm (7 x 16.7 x 7") Net Weight: 4.2kg (9.3lb)
- **Shipping Weight:** 4.6kg (10.1lb)


**NOTE:** 20 hours battery playtime is only for reference and may vary depending on music content and battery aging after numerous cycles.

## **ABOUT COMPANY**





- Rua da Venda Nova, 295 | 4435-469 Rio Tinto, Portugal mJ info@nextaudiocom.com
- [www.nextaudiocom.com](http://www.nextaudiocom.com)
- [instagram.com/next.audiocom](https://www.instagram.com/next.audiocom)

- [facebook.com/nextaudiocom](https://facebook.com/nextaudiocom)

Documents / Resources

	<p><a href="#">NEXT audiocom MV3 High Power Portable Speaker</a> [pdf] User Manual ACP00922_MV3-manual.pdf, MV3_manual_v202210, MV3, MV3 High Power Portable Speaker , High Power Portable Speaker, Power Portable Speaker, Portable Speaker, Speaker</p>
---	---

References

-  [Homepage | NEXT Audiogroup](#)
-  [Homepage | NEXT Audiogroup](#)
-  [Downloads | NEXT Audiogroup](#)
-  [Downloads | NEXT Audiogroup](#)