



NEXT LEVEL GT Lite User Guide

[Home](#) » [next level](#) » **NEXT LEVEL GT Lite User Guide** 

NEXT LEVEL GT Lite User Guide



We know you're eager to start racing! Take your time with the instructions and follow this guide to assemble your product.

You'll be setting yourself up for success with following the instruction booklet to fully optimize your product.

ASSEMBLY VIDEO



FOLLOW US



@next_level_racing



@nextlevelracingOfficial



@nextlvlracing



Next Level Racing



support@nextlevelracing.com

Contents

- 1 PRE-RACE CHECKS
- 2 IN THE BOX
- 3 START
- 4 ADJUSTMENTS
- 5 WARNING
- 6 ASSISTANCE
- 7 Documents / Resources
- 8 Related Posts

PRE-RACE CHECKS

WARNING

- Please do not use power tools for assembly as over tightening can damage your frame.
- Do not adjust the hubs while user is sitting in cockpit. Make sure user is out of the cockpit before adjusting.
- Make sure the hubs are tightened fully before using the cockpit. (spin the hub clockwise to ensure it is fully tight)
- Make sure strap on wheel bar is tight when adjusting the hubs otherwise the wheel will fall when hubs are open.



 
If you require any support with your product please contact our friendly team at:
support@nextlevelracing.com

WARNING


CHOKING HAZARD – Small parts not for children under 3 years or any individuals who have a tendency to place inedible objects in their mouths.

IN THE BOX


- 8 X M6 15MM

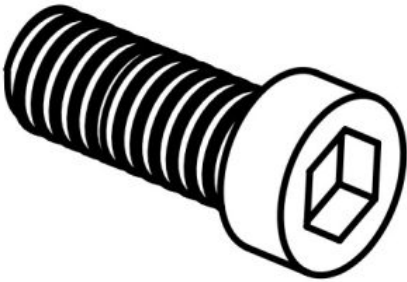


- 8 X M6 WASHERS

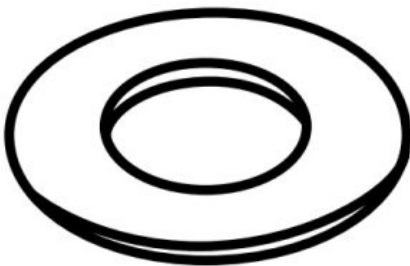 


- 4 X M6 NUTS

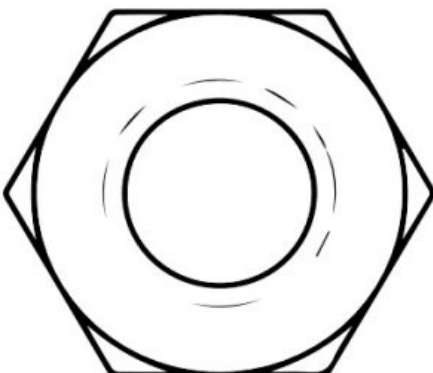 

- 1 x M6 ALLEN KEY PHILLIPS HEAD

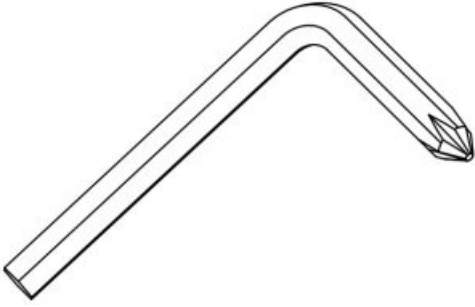 

- 1 x M4 ALLEN KEY

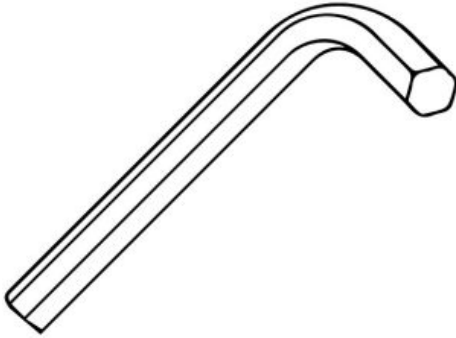 


- 1 X WRENCH




- 4 x M5 30MM



 
- 4 X M5 WASHERS

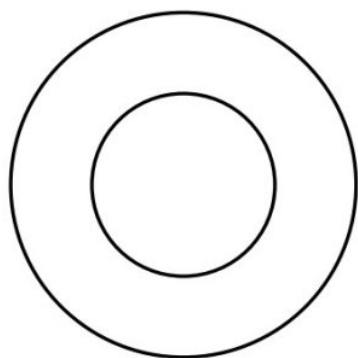

- 4 X M5 NUTS

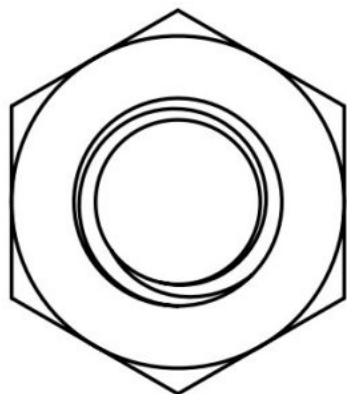 

START

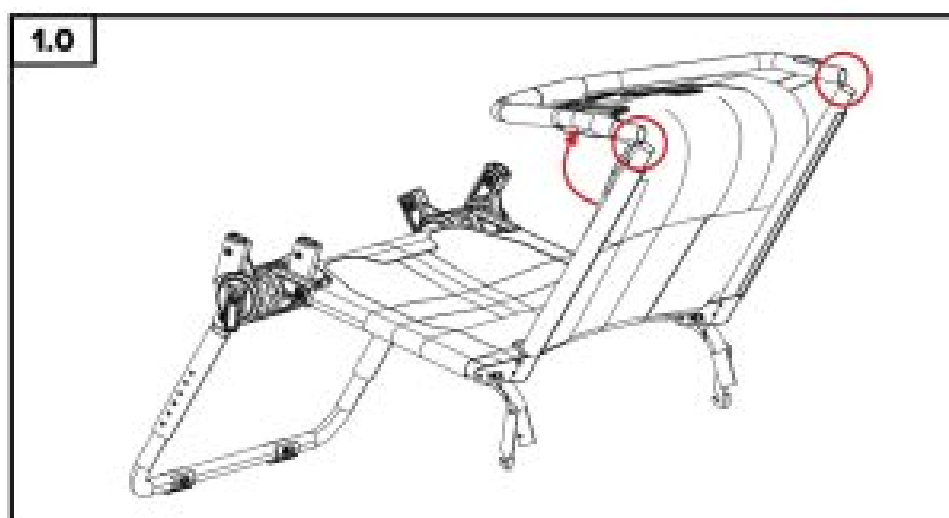 

1.1

Install nut, bolt
and washer from
bag A

 
2.0

Repeat
on other side


2.1

Install nut, bolt
and washer from
bag A


3.0

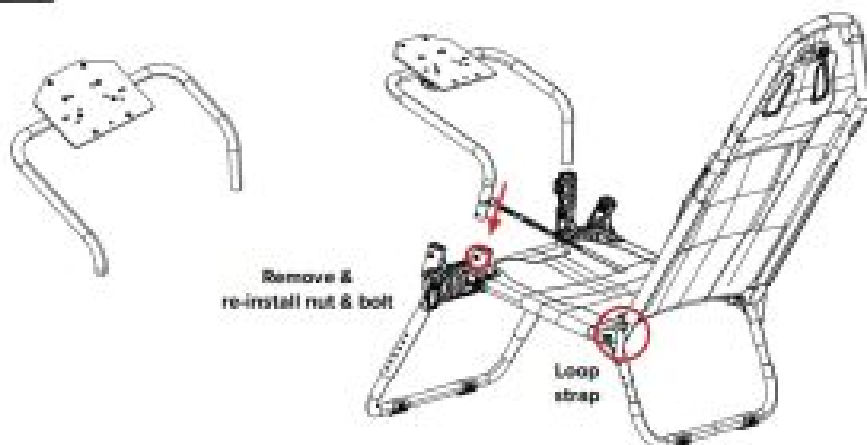

 3.1

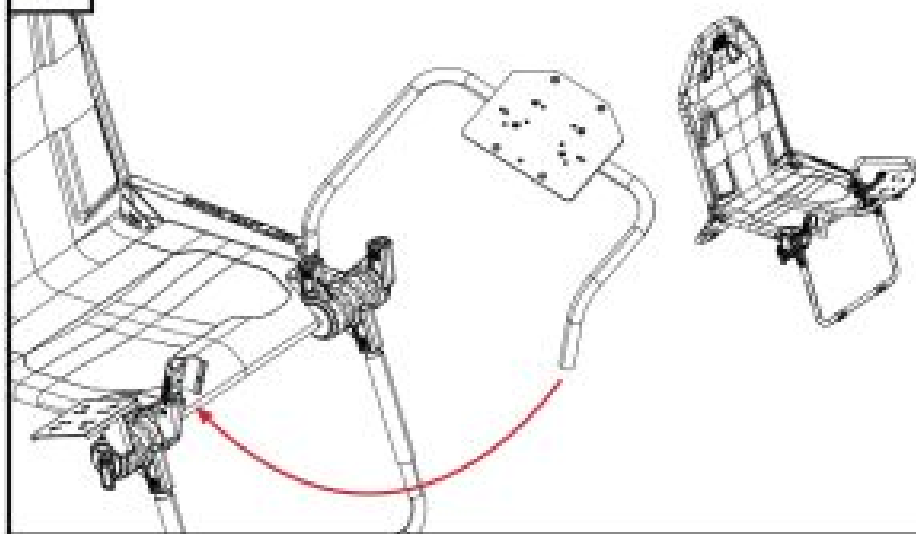


 3.2

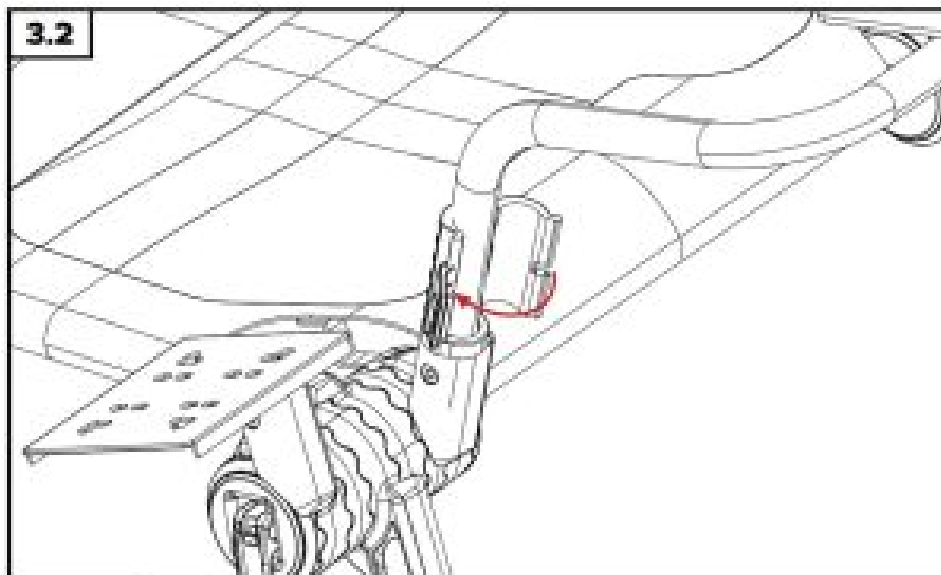

3.3

 Open wheel bar
to get in & out safely

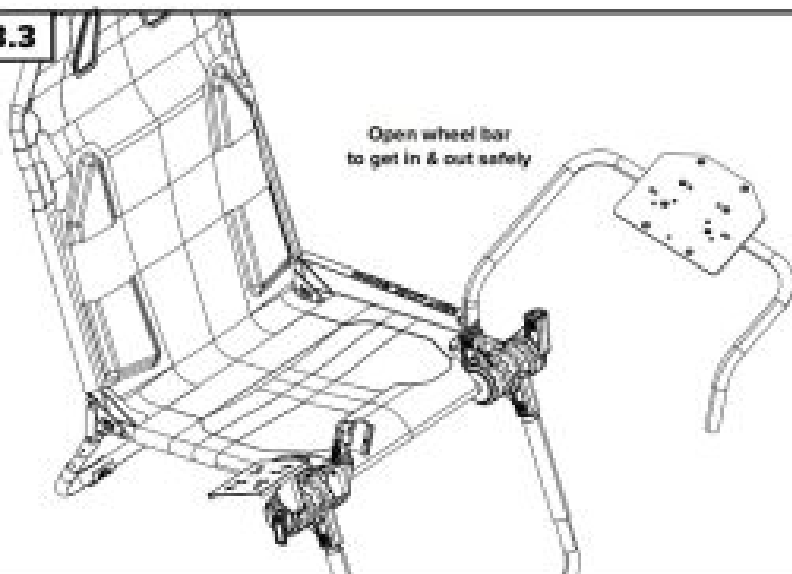





4.0




4.1

 
 
 
 
Position mounting
bracket as shown



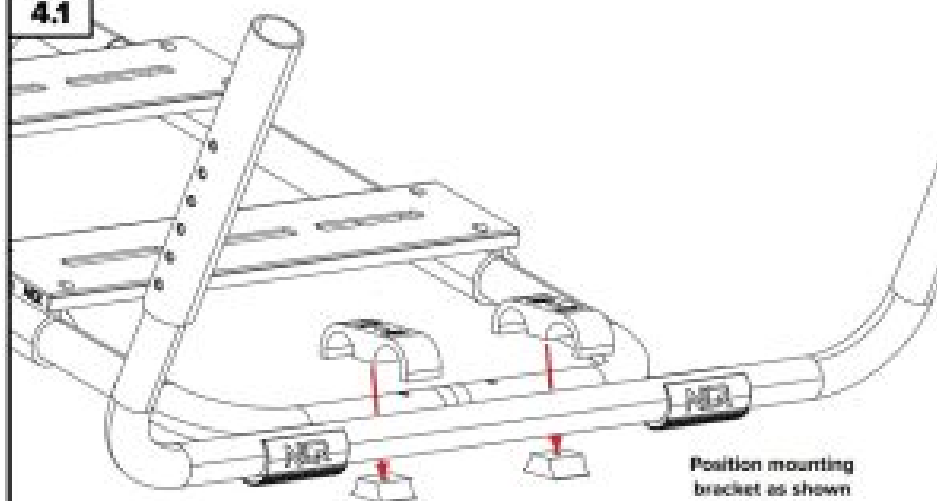


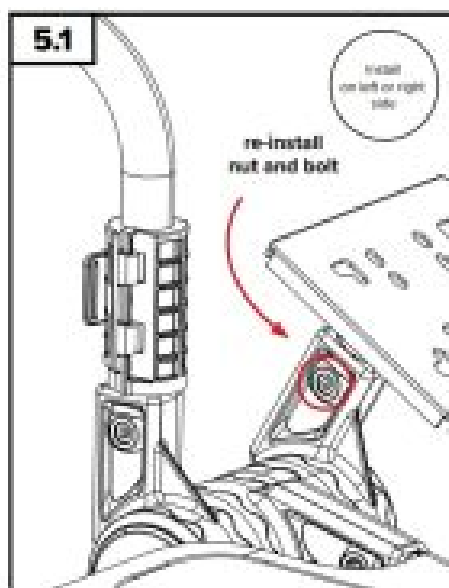
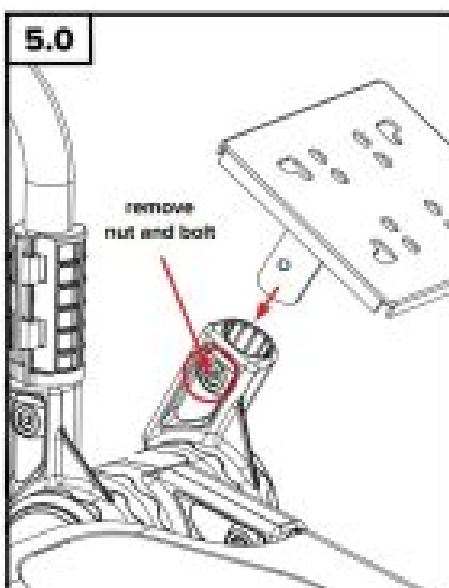
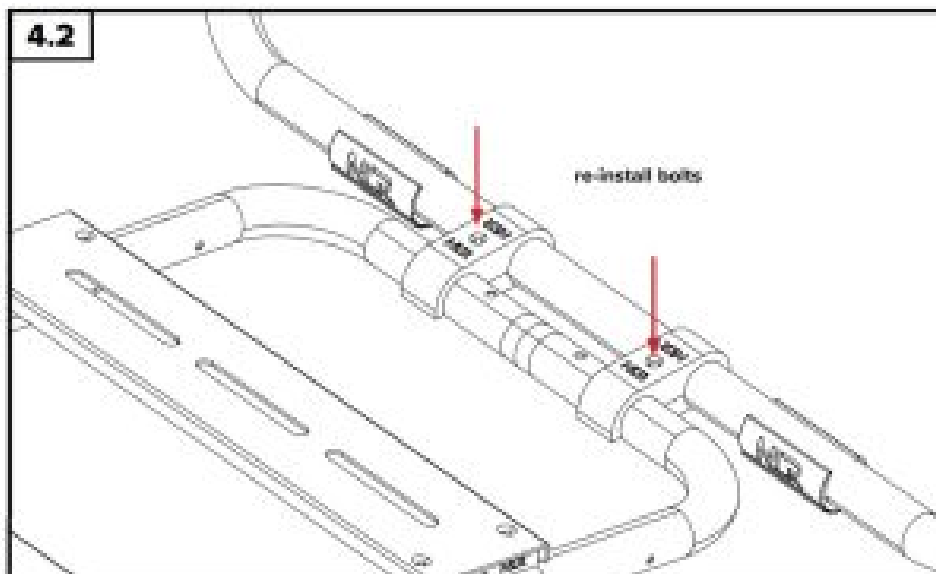


ADJUSTMENTS

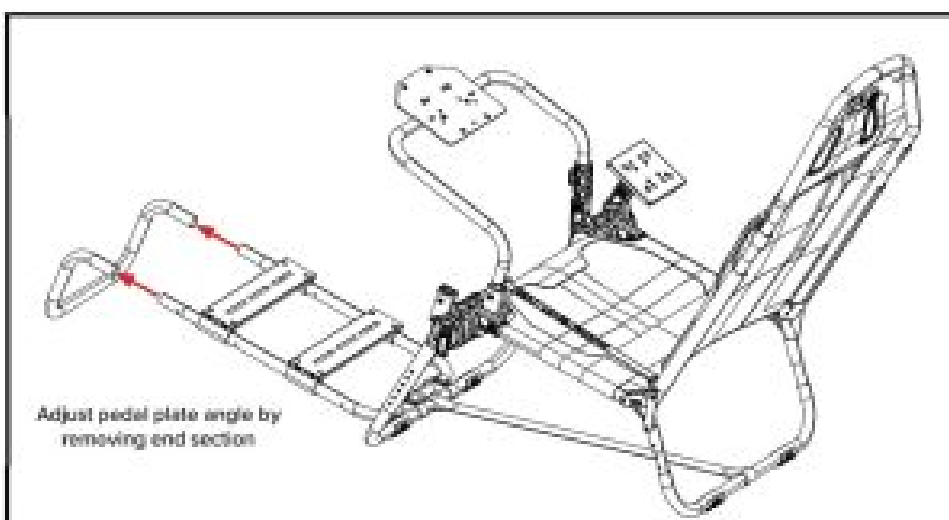 

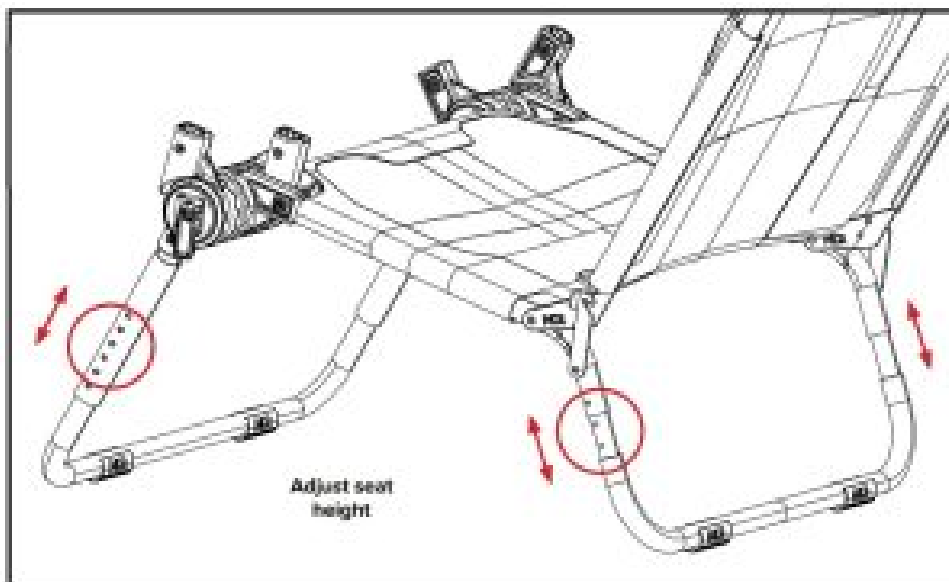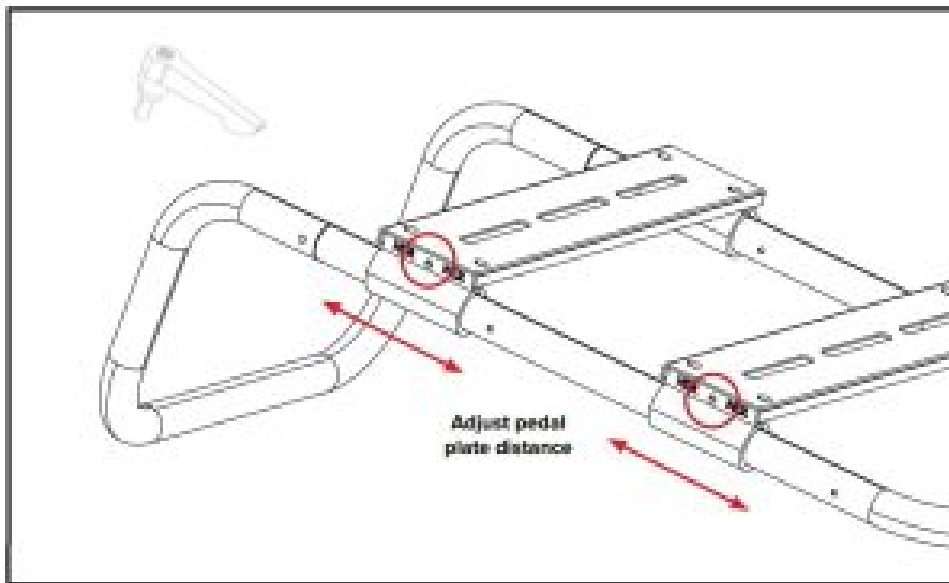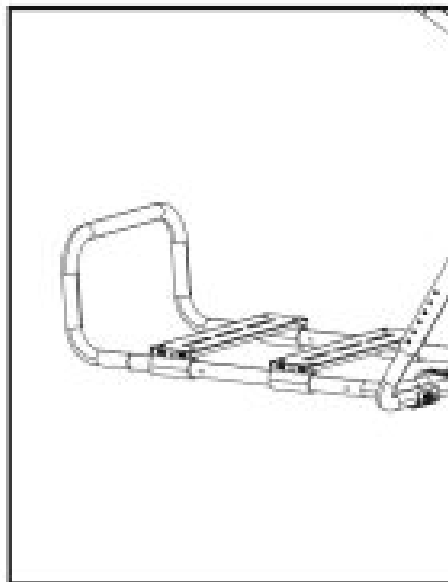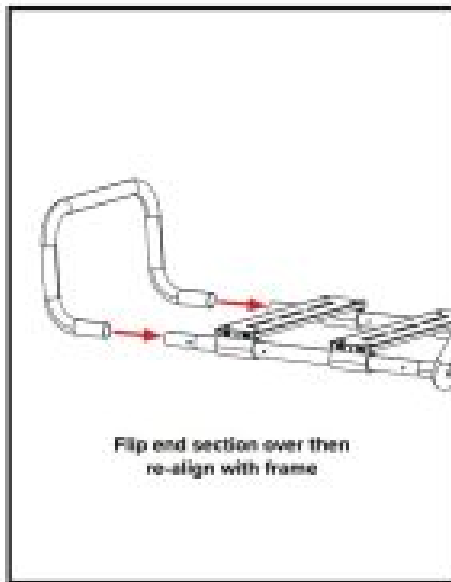    

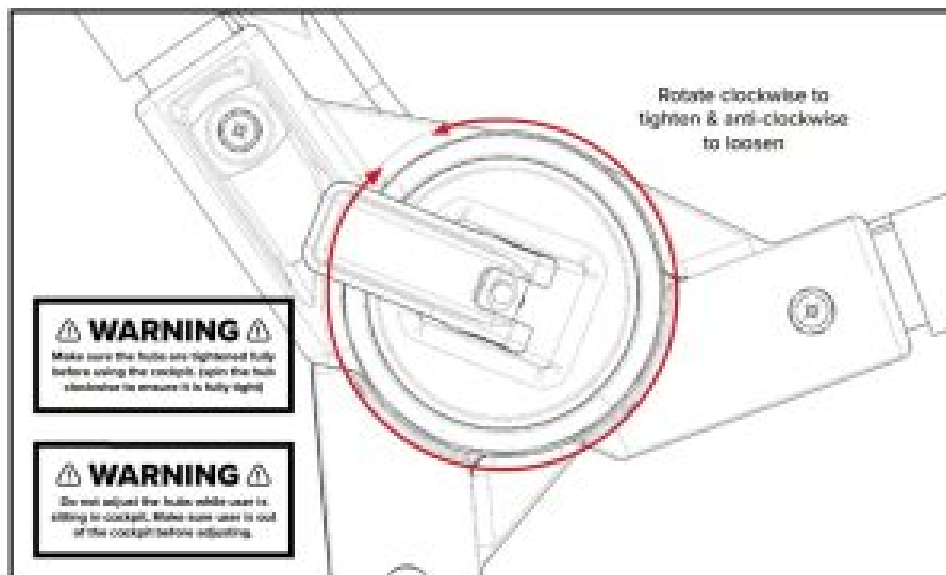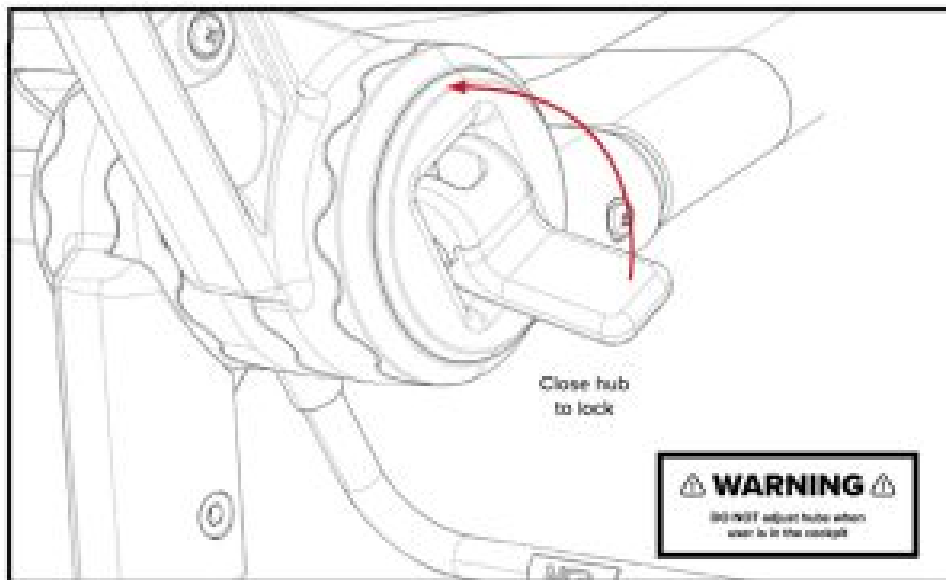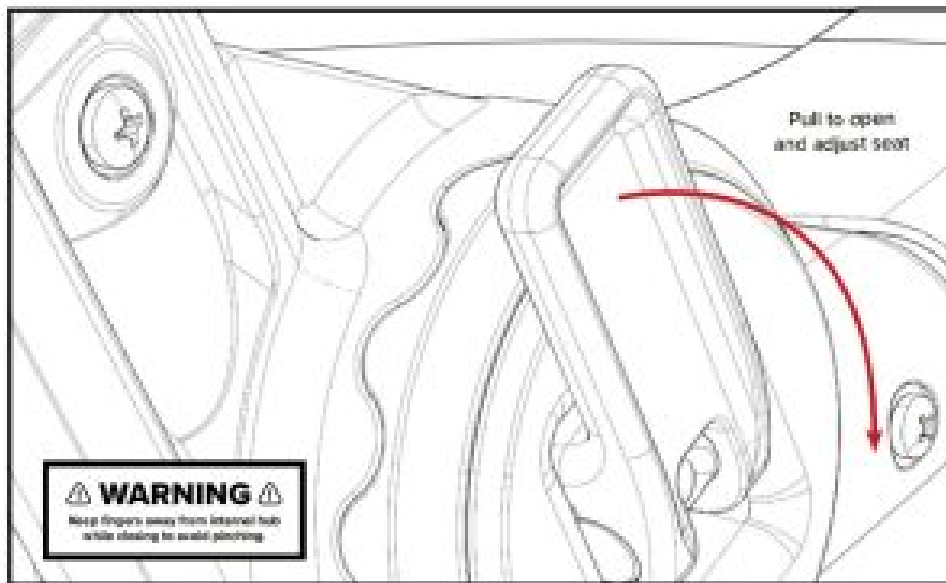   

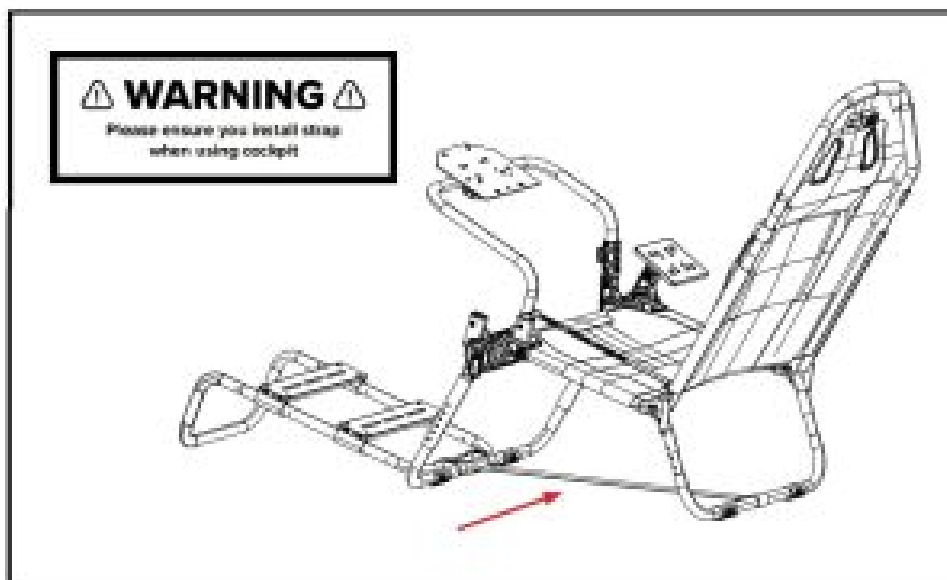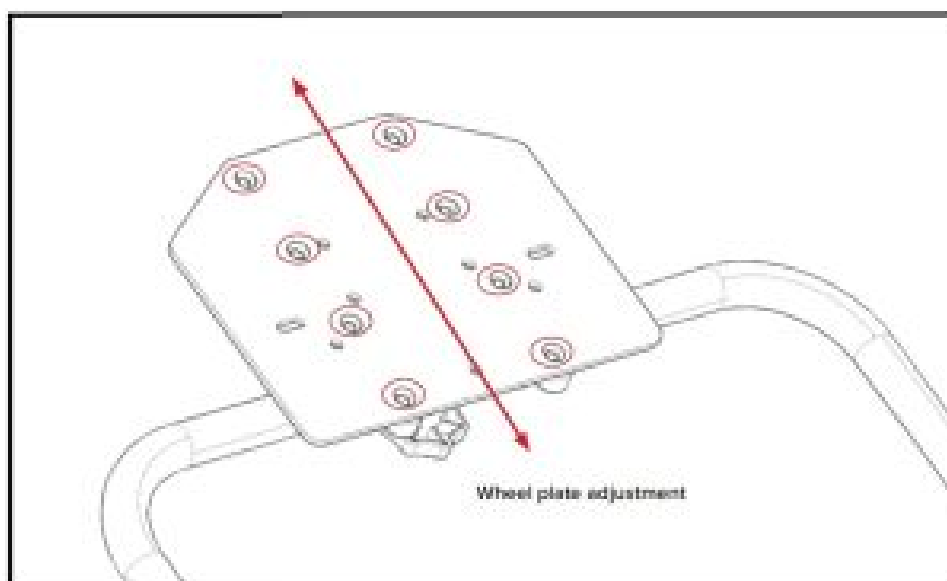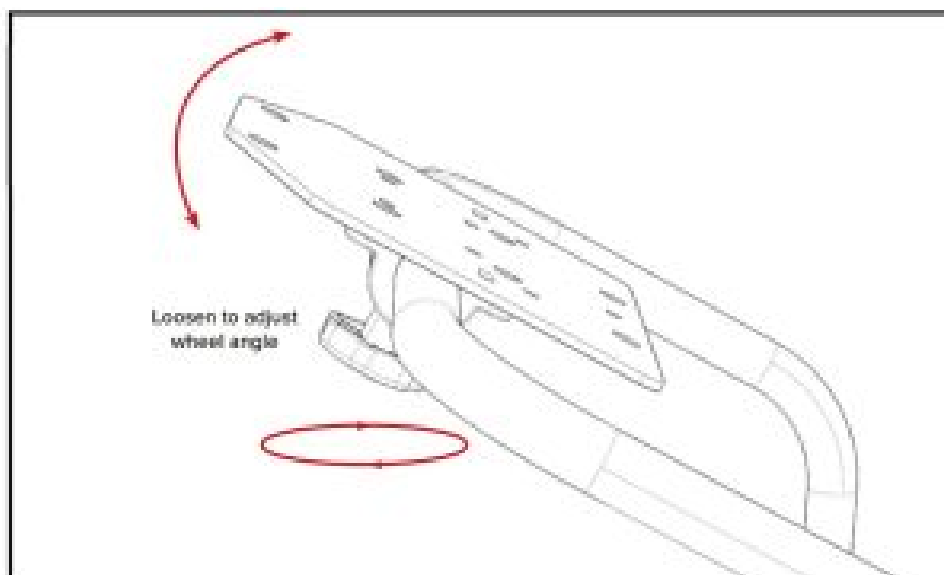   

WARNING

- Do not use power tools for assembly as over tightening can damage your frame.
- Do not adjust the hubs while user is sitting in cockpit. Make sure user is out of the cockpit before adjusting
- Make sure the hubs are tightened fully before using the cockpit (spin the hub clockwise to ensure it is fully tight)


- Make sure strap on wheel bar is tight when adjusting the hubs otherwise the wheel will fall when hubs are open.

ASSISTANCE

bit.ly/nlrbuild

If you require further support with your product please contact our friendly team at:
support@nextlevelracing.com

Documents / Resources

	<p>NEXT LEVEL GT Lite [pdf] User Guide NEXT LEVEL, GT Lite</p>
---	--

[Manuals+.](#)