



NEXT NX-SWLCA Mini Wireless Pro Controller for Switch User Guide

[Home](#) » [NEXT](#) » NEXT NX-SWLCA Mini Wireless Pro Controller for Switch User Guide 

NEXT NX-SWLCA Mini Wireless Pro Controller
for Switch User Guide

NEXT

QUICK SETUP GUIDE

 
MINI WIRELESS PRO CONTROLLER
FOR SWITCH
NX-SWLCA

 
Contents

- 1 PACKAGE CONTENTS
- 2 CONNECT WITH NINTENDO SWITCH
- 3 CONNECT WITH PC
- 4 TURBO MODE
- 5 STANDBY MODE
- 6 HARD RESET
- 7 SAFETY INFORMATION
- 8 SPECIFICATIONS
- 9 LEGAL NOTICES
- 10 ONE-YEAR LIMITED WARRANTY
- 11 Documents / Resources
 - 11.1 References

PACKAGE CONTENTS

- Mini Wireless Pro Controller
- USB A to C Charging Cable

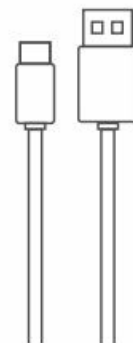

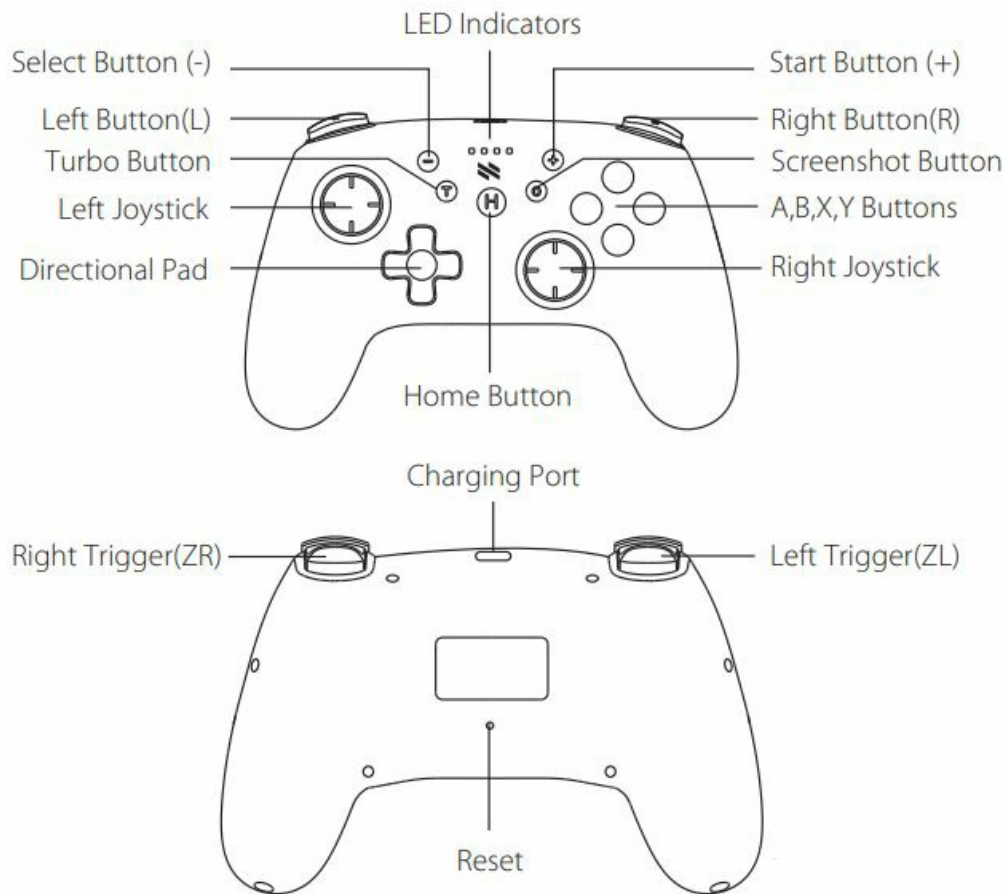

Before using your new product, please read these instructions to prevent any damage.

CONNECT WITH NINTENDO SWITCH

Wired Connection

1. Turn on the 'Pro Controller Wired Communication' within the Switch System Setting>Controllers and Sensors>Pro Controller Wired Communication: On
2. Insert the USB cable into a USB port on the Nintendo Switch dock. Connect the other end of the cable to the controller.
3. The controller will automatically connect and the LED indicator light will blink slowly.

Wireless Connection

1. From the Switch HOME menu, select 'Controllers,' then 'Change Grip and Order.'
2. While the following screen is displayed, press and hold down the 'Home button' for at least one second on the controller you wish to pair.

NOTE: After controller is paired once, it will auto connect next time.

CONNECT WITH PC

Wired Connection

1. Using the included USB-C Cable, connect to the USB-C port at the top of the controller and connect the other

end to an available USB port on the PC.

2. If controller is off, press the 'Home button' to turn on.

Wireless Connection

1. When the controller is turned off, press and hold the 'Home Button' to power on for 3 seconds. The controller LED1-LED4 will flashing.
2. The controller will enter the Bluetooth pairing state, The device name recognized by the computer is 'Pro Controller'. Press and hold the 'Home Button' for 3 seconds to enter pairing mode (LED will flash BLUE rapidly).
3. Enter the Bluetooth settings on your device.
4. Select 'Pro Controller' . LED will turn solid BLUE when connected.
5. After the connection is successful, the current channel LED will be on NOTE: A previously paired device will automatically pair to the controller when powered on.

TURBO MODE

Configurable Buttons

The A/B/X/Y, Left Button, Right Button, Left Trigger and Right Trigger.

Turbo Setup

Press and hold the Configurable button, then press the 'T button' once to enable the Turbo option. Repeat this operation to cycle through the Turbo option(Automatic, Off)

Clear all Turbo Buttons

- Hold the 'T Button' and the '(-)Select Button' simultaneously for 1 second.
- Turbo will be automatically disabled if the power is off or disconnected.

STANDBY MODE

The controller is in wireless connection state and will automatically power off after 5 minutes without any operation; Press the 'Home Button' to wake up the controller.

HARD RESET

Find the small hole labeled 'Reset' on the back side of the controller. Use a straightened paperclip to press the button. The controller will turn off. Press the 'Home Button' to turn the controller back on.

SAFETY INFORMATION

- Use the product only as instructed. Read all instructions before operating the product.
- Do not disassemble any of the components.
- Do not place or store the product in a humid area and do not expose it to water or rain.
- Failure to follow these directions may void the warranty.

SPECIFICATIONS

Input Charging Voltage	USB-C input 5V
Bluetooth Version	5.3
Connectivity Range	25ft
Battery	Built-in 500mAh
Charge Time	Approx 3hours
Cable Length	2.6ft (0.8M)

LEGAL NOTICES

FCC Information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.


FCC ID: WP8-NX-SWLCA

ONE-YEAR LIMITED WARRANTY

Visit www.next-accessories.com for details.

This product is not approved, endorsed or affiliated with Sony. ©2025. All Rights Reserved. Made in China

 Documents / Resources

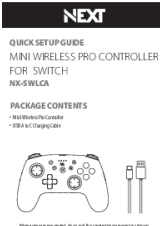 <p>QUICK SETUP GUIDE MINI WIRELESS PRO CONTROLLER FOR SWITCH NX-SWLCA</p> <p>PACKAGE CONTENTS - Mini Wireless Pro Controller - USB-C Charging Cable</p>	<p>NEXT NX-SWLCA Mini Wireless Pro Controller for Switch [pdf] User Guide</p> <p>WP8-NX-SWLCA, WP8NXSWLCA, nx swlca, NX-SWLCA Mini Wireless Pro Controller for Switch, NX-SWLCA, Mini Wireless Pro Controller for Switch, Wireless Pro Controller for Switch, Pro Controller for Switch, Controller for Switch, Switch</p>
---	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.