



NEXTECH External Vehicle Camera with IR Illumination QC3542 Instruction Manual

[Home](#) » [Nextech](#) » NEXTECH External Vehicle Camera with IR Illumination QC3542 Instruction Manual 

Contents

- [1 NEXTECH External Vehicle Camera with IR Illumination QC3542](#)
- [2 SPECIFICATIONS:](#)
- [3 WIRING INSTRUCTIONS:](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)

NEXTECH

NEXTECH External Vehicle Camera with IR Illumination QC3542



ATTENTION:


- Keep the lens clean or the camera may cannot work normally.
- Please don't clean the lens with high corrosive liquid.
- Do not point the camera to toward high intensity lights, as the image may be affected.
- The power supply must be according to the instruction on the camera, otherwise it may damage the camera.
- Make sure to connect the cables correctly.

Attention: don't disassemble the camera by yourself, please contact with us if there are any issues with the camera.


SPECIFICATIONS:

Sensor: CMOS
Resolution: 1080P
Illumination: 0.1 Lux, IR night vision
Viewing Angle: 120°
Images: Mirror or Non-mirror (Switchable)
System: NTSC/PAL
Waterproof Class: IP69K
Anti-shock Class: 4G
Reversing Line: On/Off
Power Supply: 12V DC/12V-24V DC
Connector: 4 PIN/RCA
Working Temperature: -20°C ~ 70°C
Storage Temperature: -30°C ~ 80°C
Accessories: User manual, other necessary installation parts.

CONNECTOR DEFINITION:

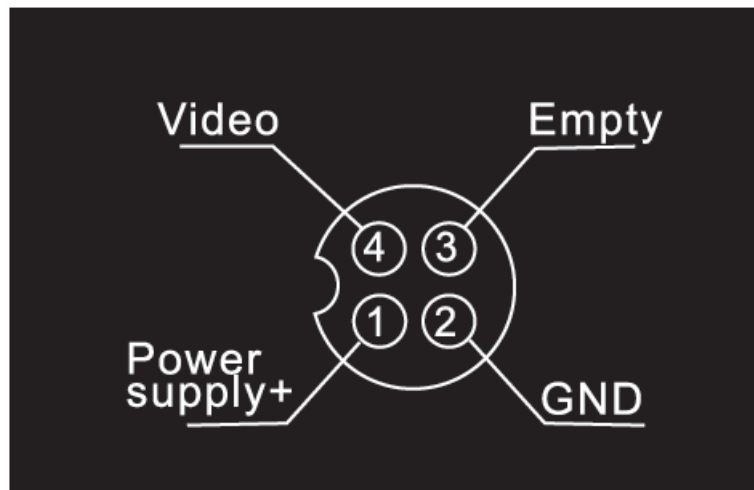

WIRING INSTRUCTIONS:

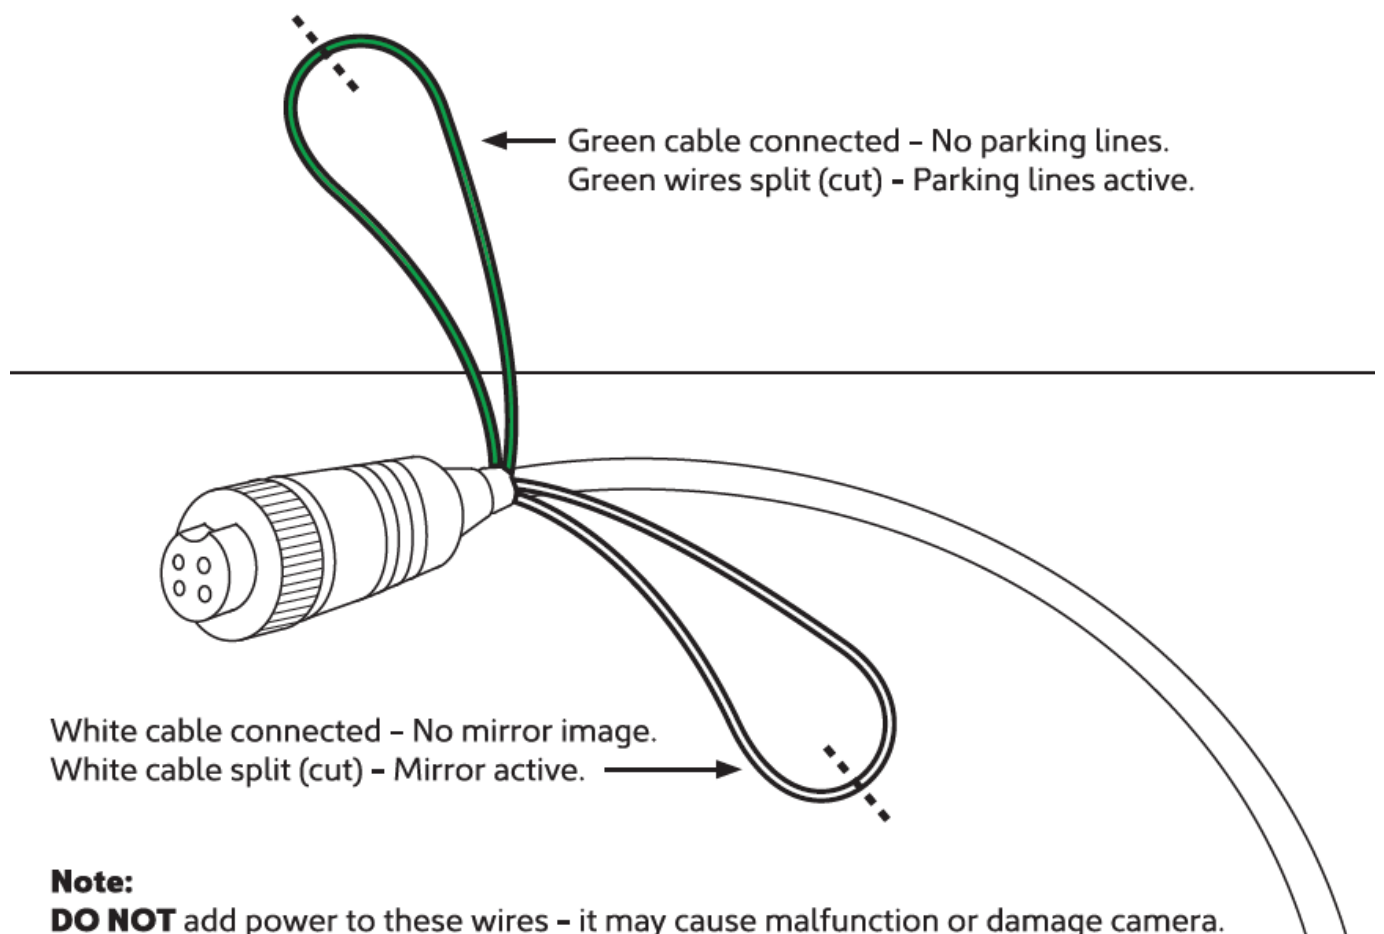

Note: DO NOT add power to these wires – it may cause malfunction or damage camera.

NEXTech



External Vehicle Camera with IR Illumination

Instruction Manual

NEXTECH External Vehicle Camera with IR Illumination QC3542 [pdf] Instruction Manual
External Vehicle Camera, IR Illumination, NEXTECH