

**XC5140 Bluetooth
Media Keyboard
with Holder**



NEXTECH XC5140 Bluetooth Media Keyboard with Holder Instruction Manual

[Home](#) » [Nextech](#) » NEXTECH XC5140 Bluetooth Media Keyboard with Holder Instruction Manual 

Contents

- 1 NEXTECH XC5140 Bluetooth Media Keyboard with Holder
- 2 Product Usage Instructions
- 3 Frequently Asked Questions
- 4 GENERAL INFORMATION & SAFETY INSTRUCTIONS
- 5 BOX CONTENTS
- 6 PRODUCT DIAGRAM
- 7 BEFORE FIRST USE
- 8 OPERATION INSTRUCTIONS
- 9 MULTIMEDIA BUTTONS
- 10 CLEANING, CARE, STORAGE & MAINTENANCE
- 11 TROUBLESHOOTING
- 12 SPECIFICATIONS
- 13 WARRANTY INFORMATION
- 14 Documents / Resources
 - 14.1 References
- 15 Related Posts

NEXTECH

NEXTECH XC5140 Bluetooth Media Keyboard with Holder



Specifications:

- Model: XC5140
- Compatibility: PC (Windows), Android, iOS™
- Bluetooth Version: BT5.0
- Charging Port: USB Micro B
- Power Source: Rechargeable battery

Product Usage Instructions

Before First Use:

1. Fully charge the keyboard before the first use.
2. Place the product on a dry, flat, even surface.

Operation Instructions:

1. Turn on the media keyboard by pressing the on/off switch. The LED status indicator will begin flashing blue.
2. Depending on the operating system of your device (PC, Android, iOS™), follow the specific instructions below.
3. To pair with a device, select BT5.0 Keyboard from the devices list. The LED status indicator will flash slowly during pairing.
4. Once paired successfully, the LED status indicator will stop flashing blue.
5. To activate multimedia key function, press the designated keys simultaneously as per your operating system.
6. If the media keyboard or device is turned off, press any key and wait for up to 10 seconds for reconnection.

For Android (Smartphone & Tablet):

1. Open the settings on your smartphone or tablet.
2. Click on the connected devices menu to view current connections.
3. Select BT5.0 Keyboard to initiate pairing.
4. Press pair button on the pop-up menu to complete pairing.
5. Press fn and W buttons simultaneously to activate multimedia keys.

Frequently Asked Questions

- **Q: What should I do if the media keyboard is not pairing with my device?**

- A: Ensure the media keyboard is turned on and in pairing mode. Check that the LED status indicator is flashing blue during pairing. Try restarting both devices and attempt pairing again.

- **Q: How can I charge the keyboard?**

- A: You can charge the keyboard using the provided USB Micro B charging cable. Connect it to a power source such as a computer or USB wall adapter.

Please read and save all instructions to ensure safe and effective use of this product

GENERAL INFORMATION & SAFETY INSTRUCTIONS

Read this manual thoroughly before first use, even if you are familiar with this type of product. Please keep this user manual in a safe place along with your purchase receipt and gift box for future reference.

- Do not attempt to repair, disassemble or modify the keyboard.
- Keep the keyboard away from high temperatures or open flame as it may damage the device.
- Never immerse the keyboard in any liquids or pour liquid onto it.
- Turn off the keyboard when not in use to preserve the battery life.

WARNING: The manufacturer is not responsible for any potential injury from misuse

NOTE: Fully charge the keyboard before the first use.

BOX CONTENTS



1 x Bluetooth® Media Keyboard with Holder



1 x USB Micro B Charging Cable

PRODUCT DIAGRAM



BEFORE FIRST USE

- Prior to using your product, please read all the safety and operating instructions thoroughly. Please ensure you follow the steps below before using the product. We recommend you keep the original packaging for storing the product when not in use.
- Please pay close attention to the section entitled Important Safety and General
- Instructions. Find a safe and convenient place to keep this instruction manual for future reference.
- Unpack the product but keep all packaging materials until you have made sure your new product is undamaged and in good working order. Ensure you have all accessories listed in this manual.

WARNING: The manufacturer is not responsible for any potential injury from misuse

NOTE: Fully charge the keyboard before the first use.

NOTE: Place the product on a dry, flat, even surface.

OPERATION INSTRUCTIONS

NOTE: Fully charge the keyboard before the first use.

1. Turn on the media keyboard by pressing the on/off switch. The LED status indicator will begin flashing blue.
2. Press the “fn” and “C” buttons simultaneously on the keyboard to begin the Bluetooth® pairing process.
3. Refer to the instructions below depending on the operating system of the device such as PC (Windows), Android or iOS™.

NOTE: The media keyboard will enter standby mode after it has been inactive for 10 minutes. Press any key to to disable standby mode.

PC (Windows):

1. Click on the start menu and find settings located on the left hand control panel.
2. Click on the devices menu which will display a list of current Bluetooth® devices.
NOTE: Bluetooth® must be turned on in order for the media keyboard to connect
3. Click on the “Add Bluetooth® or other device” button and select Bluetooth® devices to begin scanning
NOTE: The PC must be Bluetooth® enabled in order to connect to the media keyboard otherwise a Bluetooth®

adaptor is required.

4. Select "BT5.0 Keyboard" from the devices list in order to pair. The LED status indicator will begin flashing slowly while pairing

NOTE: Ensure the media keyboard is turned on and the LED status indicator is flashing blue

5. The LED status indicator will stop flashing blue once the media keyboard has been paired successfully.

6. Press the "fn" and "E" (Windows) buttons simultaneously on the keyboard at the same time to activate the multimedia key function

NOTE: If you do not activate the multimedia key function; then the multimedia keys will not work correctly

NOTE: If the device or media keyboard has been turned off, press any key and wait for up to 10 seconds for the connection to be established

Android (Smartphone & Tablet):

1. Open the settings on the smartphone or tablet.

2. Click on the connected devices menu which will display a list of current Bluetooth® devices.

NOTE: Bluetooth® must be turned on the smartphone or tablet in order for the media keyboard to connect.

3. Click on the "Pair new device" button which will begin scanning for Bluetooth® devices.

4. Select "BT5.0 Keyboard" from the devices list in order to pair. The LED status indicator will begin flashing slowly while pairing

NOTE: Ensure the media keyboard is turned on and the LED status indicator is flashing blue.

5. A pop up menu will display asking to pair with the current device. Press the pair button to finish pairing.

6. The LED status indicator will stop flashing blue once the media keyboard has been paired successfully.

7. Press the "fn" and "W" (Android) buttons simultaneously on the keyboard to activate the multimedia key function.

NOTE: If you do not activate the multimedia key function; then the multimedia keys will not work correctly

NOTE: If the device or media keyboard has been turned off, press any key and wait for up to 10 seconds for the connection to be established.

iOS™ (iPhone® & iPad®):

1. Open the settings on the iPhone® or iPad®.

2. Click on the "Bluetooth®" button which will display a list of current Bluetooth® devices.

NOTE: Bluetooth® must be turned on the iPhone® or iPad® in order for the media keyboard to connect

3. Scroll down to "other devices" which will begin scanning for new Bluetooth® devices.

4. Select "BT5.0 Keyboard" from the devices list in order to pair. The LED status indicator will begin flashing slowly while pairing.

NOTE: Ensure the media keyboard is turned on and the LED status indicator is flashing blue.

5. The LED status indicator will stop flashing blue once the media keyboard has been paired successfully.

6. Press the "fn" and "Q" (iOS™) buttons simultaneously on the keyboard to activate the multimedia key function.

NOTE: If you do not activate the multimedia key function; then the multimedia keys will not work correctly.

NOTE: If the device or media keyboard has been turned off, press any key and wait for up to 10 seconds for the connection to be established

Bluetooth® Channel Switch:

The media keyboard supports two Bluetooth® devices to be connected at the same time. One device may be connected to channel 1 and a second device connected to channel 2.

NOTE: The Bluetooth® connection may take up to 10 seconds when pressing the Bluetooth® channel switch to change to a different device.

Charging















 



1. Connect the USB Micro B charging cable to the USB charging socket of the keyboard.
2. Connect the opposite end of the USB Micro B charging cable to a USB mains power adaptor or a computer USB port.
3. The LED status indicator will turn red while charging and turn off when charging is complete.

NOTE: The LED status indicator will flash red when the keyboard has a low battery.










 








MULTIMEDIA BUTTONS

NOTE: The multimedia buttons need to be activated in order for it to work on PC, Android or iOS™. Refer to the instructions on page 5-7 to setup up the multimedia buttons depending on which operating system is being used.



















PC (Windows):

	Back To Home Page		Previous Song		Cut
	Windows Menu		Play/Pause		Copy
	Search		Next Song		Paste
	Not Applicable		Mute		Not Applicable
	Not Applicable		Reduce Volume		Auxiliary Function
	Not Applicable		Increase Volume		Lock Screen

Android (Smartphone & Tablet):

	Back To Home Page		Mute	Fn+End	Cursor To End
	Not Applicable		Decrease Volume	Fn+PgUp	Cursor To Top
	Search		Increase Volume	Fn+PgDn	Cursor To Bottom
	Return To Parent Dir.		Cut	Ctrl+C	Copy
	Not Applicable		Copy	Ctrl+X	Cut
	Mailbox		Paste	Ctrl+V	Paste
	Previous Song		Not Applicable	Ctrl+Z	Undo
	Play/Pause	Fn	Auxiliary Function		Lock Screen
	Next	Fn+Home	Cursor To Top		Paste

iOS® (iPhone® & iPad®):

	Back To Home Page		Increase Volume	Fn + Home	Cursor To Front
	Not Applicable		Mute	Fn + End	Cursor To End
	Search		Reduce Volume	Fn + PgUp	Cursor To Top
	Not Applicable		On-Screen Keyboard	Fn + PgDn	Cursor To Bottom
	Reduce Screen Brightness		Cut	Cmd + A	Select All
	Increase Screen Brightness		Copy	Cmd + C	Copy
	Previous Song		Paste	Cmd + X	Cut
	Play/Pause		Not Applicable	Cmd + V	Paste
	Next Song		Lock Screen	Ctrl + Spacebar	Switch Language
				Fn	Auxiliary Function

NOTE: Some devices using Windows, Android or iOS™ may not be compatible with certain multimedia keys.

CLEANING, CARE, STORAGE & MAINTENANCE

- Always turn off the keyboard and remove the charging cable before cleaning the keyboard.
- Only use a soft cloth when cleaning the keyboard, do not use a damp sponge or cloth.
- Store the keyboard in a clean and dry place.
- Turn off the keyboard when not in use to preserve the battery life.

TROUBLESHOOTING

The keyboard will not turn on.	<p>Ensure the battery is fully charged, connect the USB Micro B charging cable to a suitable USB mains power adaptor or a computer USB port.</p> <p>Ensure the power switch is turned on.</p>
Battery is not charging.	<p>Ensure the charging cable is in working order and it is connected to a USB mains power adaptor or a computer USB port using 5VDC,500mA.</p>
Bluetooth® won't connect.	<p>A Bluetooth® enabled device is required when using this keyboard, otherwise a Bluetooth® USB or PCIE adaptor is required when using Windows.</p> <p>Ensure the Bluetooth® is turned on when using Android or iOS™. Connect to the Bluetooth™ name "BT5.0 Keyboard" and make sure the keyboard has the correct channel switch.</p>
Some multimedia keys are not working.	<p>The Multimedia function needs to be activated by pressing the "fn" and either the "Q", "W" or "E" buttons simultaneously depending on which operating system is being used. Refer to the instructions on page 5-7 to this function. Some devices using Windows, Android or iOS™ may not be compatible with certain multimedia keys.</p>

SPECIFICATIONS

Bluetooth® Version	5.0
Bluetooth® Range	Up to 10m
Run Time	Up to 40 Hours
Charge Time	2-3 hrs
Battery	3.7V Li-po, 250mA
Power	5VDC, 500mA (USB Micro B)
Dimensions	291(L) x 159(H) x 16(D)mm

WARRANTY INFORMATION

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months. If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.

This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.


Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure. To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim. Any expenses relating to the return of your product to the store will normally have to be paid by you. The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by:

- Electus Distribution

- Address 46 Eastern Creek Drive, Eastern Creek NSW 2766
- Ph. 1300 738 555

Documents / Resources

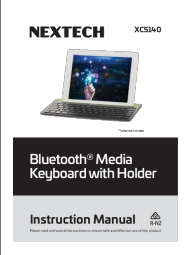 The image shows the cover of the instruction manual for the NEXTECH XC5140 Bluetooth Media Keyboard with Holder. It features a laptop with the keyboard attached to its side. The text on the cover includes 'NEXTECH XC5140', 'Bluetooth® Media Keyboard with Holder', and 'Instruction Manual'.	<p>NEXTECH XC5140 Bluetooth Media Keyboard with Holder [pdf] Instruction Manual XC5140 Bluetooth Media Keyboard with Holder, XC5140, Bluetooth Media Keyboard with Holder, Media Keyboard with Holder, Keyboard with Holder, with Holder, Holder</p>
---	--

References

- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.