



[Home](#) » [NEXTIVITY](#) » **NEXTIVITY A71-JV4,A91-JV4 Smart Server Antenna User Guide** 

Contents [[hide](#)]

[1 NEXTIVITY A71-JV4,A91-JV4 Smart Server Antenna](#)

[2 PRODUCT INFORMATION](#)

[3 Included In the Box](#)

[4 Antenna Installation](#)

[5 Connection Diagram](#)

[6 MORE INFORMATION](#)

[7 FAQs](#)

[8 Documents / Resources](#)

[8.1 References](#)



NEXTIVITY A71-JV4,A91-JV4 Smart Server Antenna




PRODUCT INFORMATION

- **KIT#:**

- A71-PV4-C00
- A71-JV4-C00
- A71-JV7-C00

The Smart Server Antenna is an active, omnidirectional antenna that is compatible with select CEL-FI and SHIELD products. Installation is easy on hard and dropped ceilings. Integration and alarms are accessible via WAVE software.


Included In the Box

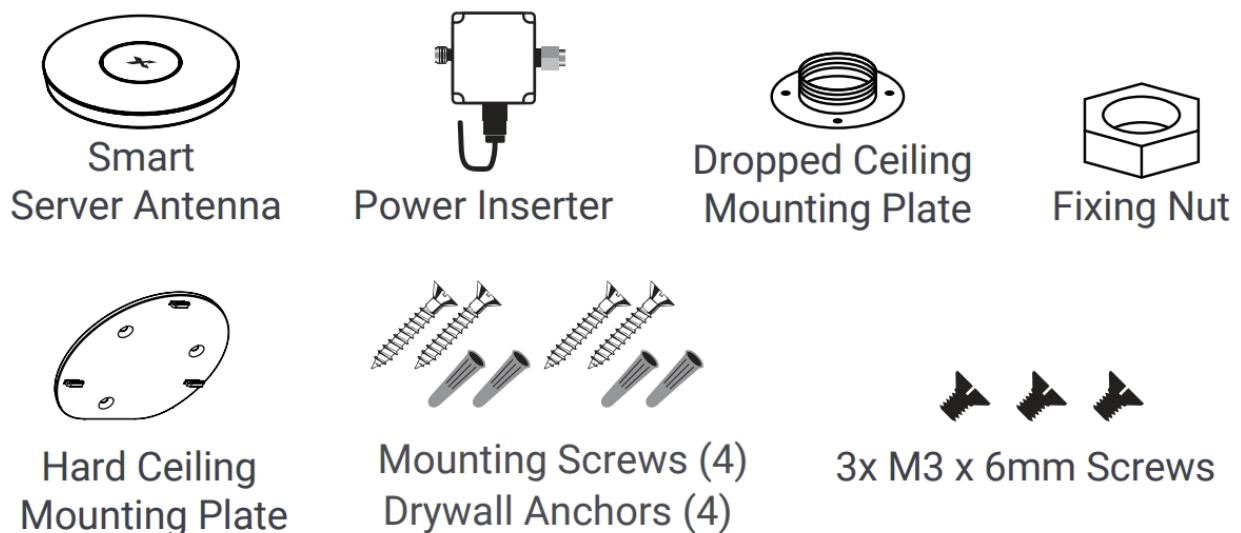

Antenna Installation


DROPPED CEILING INSTALL

- **STEP 1:** Connect the Power Inserter to the signal source cable before each splitter/coupler/tapper in the Distributed Antenna System (DAS). A typical directional coupler example is shown below.

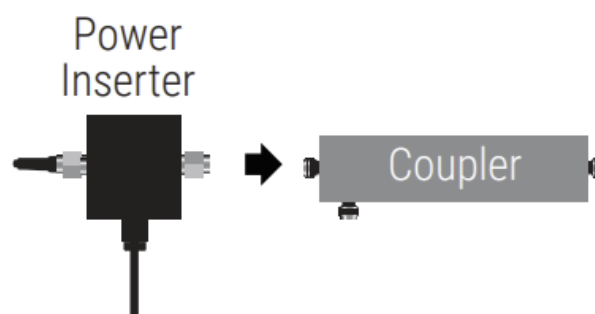


- **STEP 2:** Route the DC and coax cables to the Smart Server Antenna. Add a separate


DC extension cable if needed to reach the desired Smart Server Antenna installation location.

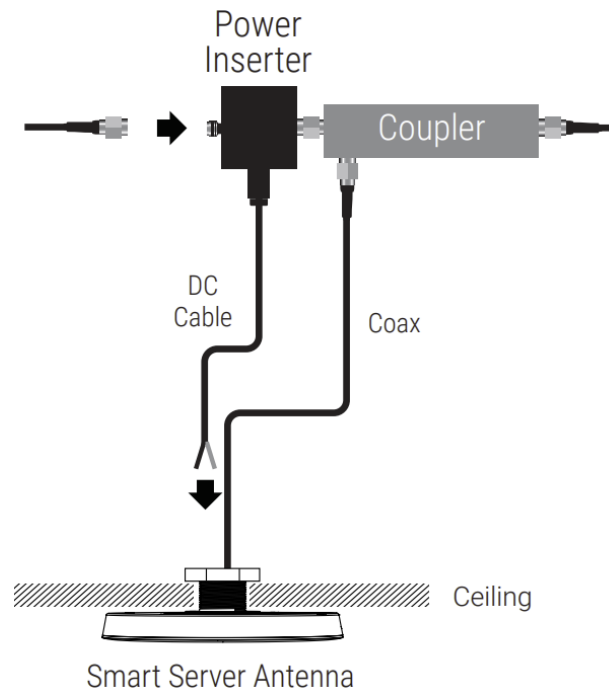


- **STEP 3:** Drill a 2-inch (50 mm) diameter hole in the dropped ceiling at the desired Smart Server Antenna location.
 - **NOTE:** If installing on a hard ceiling, go to Step 3 in the “HARD CEILING INSTALL” section.

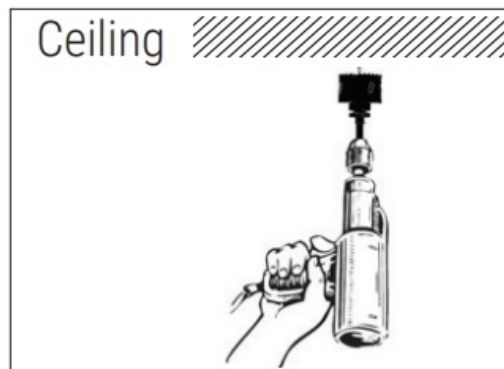


- **STEP 4:** Feed the antenna coax cable up through the Dropped Ceiling Mounting Plate and attach the Dropped Ceiling Mounting Plate to the back of the Smart Server Antenna using the three M3 Screws and a 2 mm hex wrench.

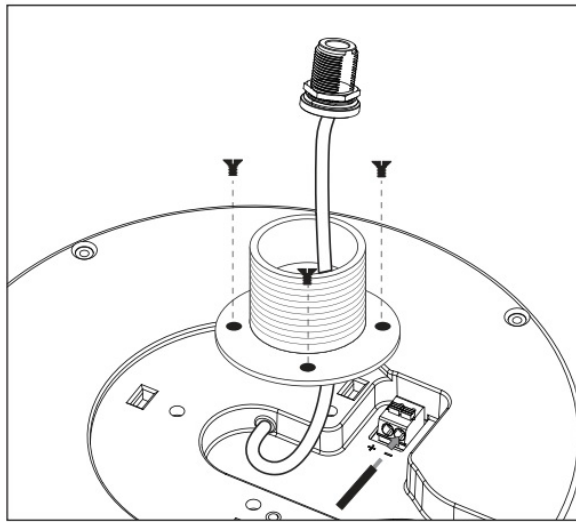


- **STEP 5:** Thread the DC Power cable through the Fixing Nut above the ceiling and down through the hole. Continue by guiding it through the center of the Dropped Ceiling Mounting Plate, ensuring that the DC cable wires extend with sufficient length for easy connection to the DC wire terminal block on the antenna.

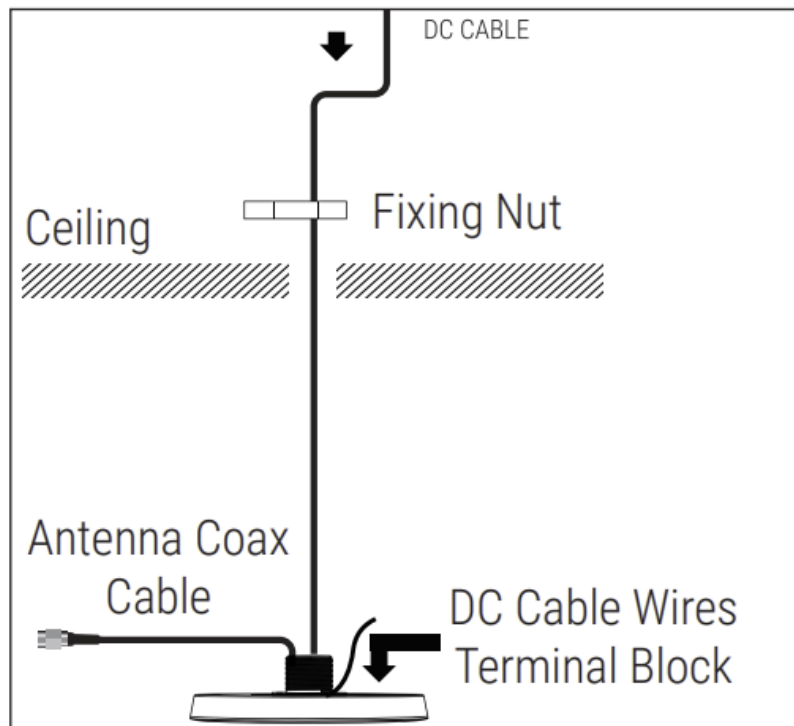


- **STEP 6:** Depress the negative wire spring button on the antenna DC wire terminal block, insert the stripped negative wire into the slot, and release the button. Gently pull-test the wire to make sure that it is firmly connected.
- **STEP 7:** Repeat Step 6 for the positive wire.

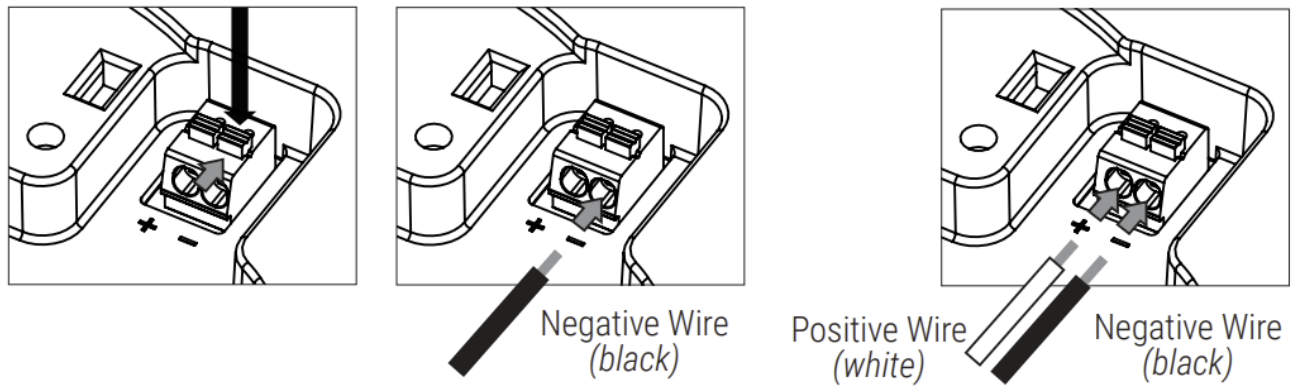

- **STEP 8:** Feed the antenna assembly and cabling up through the drilled ceiling hole in Step 3, and screw the Fixing Nut onto the Dropped Ceiling Mounting Plate threads to secure the antenna to the dropped ceiling.

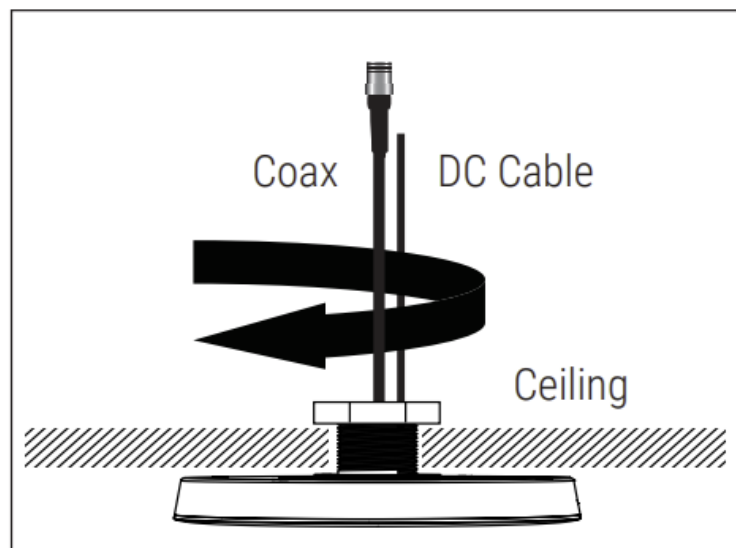


- **STEP 9:** Connect the antenna coax cable to the signal source coax cable.

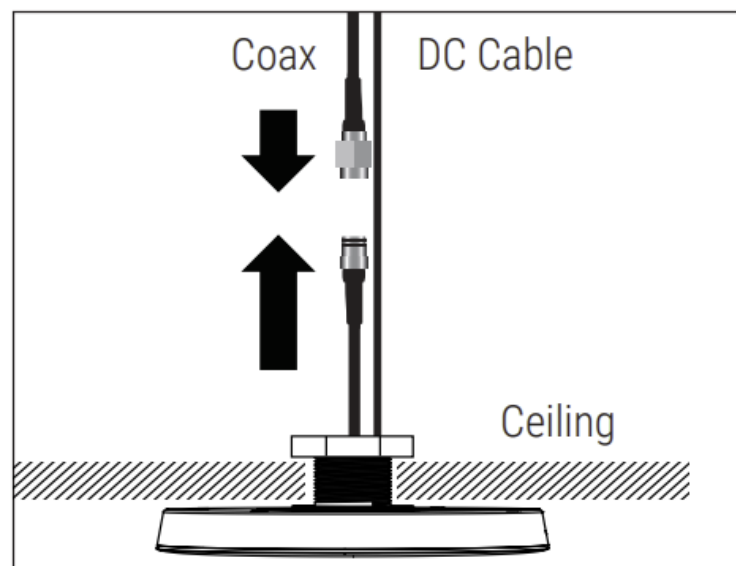


HARD CEILING INSTALL

- **STEP 1:** Place the Hard Ceiling Mounting Plate against the ceiling, oriented so the cables will exit the antenna in the desired direction along the flat edge of the plate.


Then mark the three holes for the Drywall Anchors.

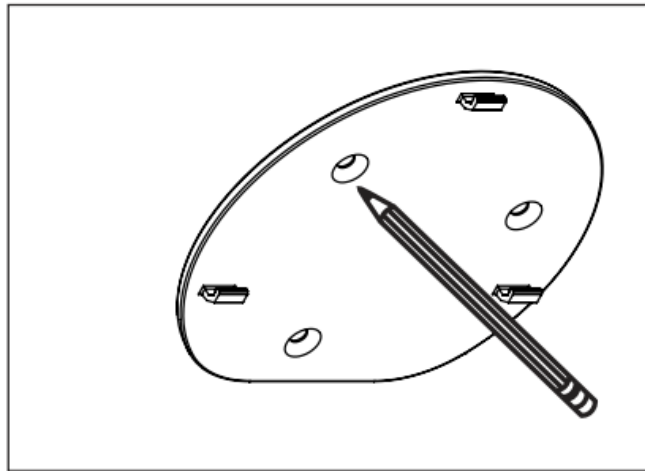


- **STEP 2:** Drill the three holes for the supplied Drywall Anchors.

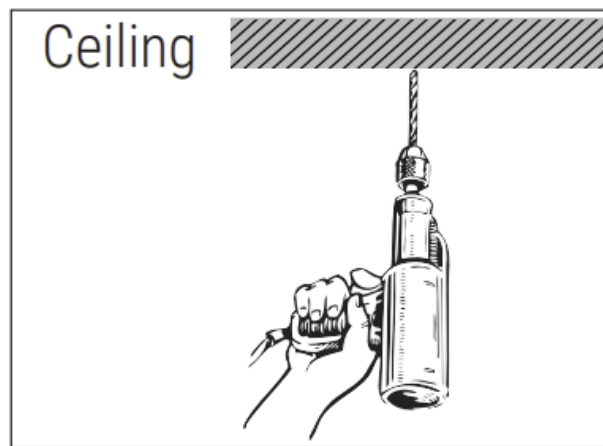


- **STEP 3:** Insert the Drywall Anchors into the drilled holes and use the Mounting Screws to secure the Hard Ceiling Mounting Plate to the ceiling.

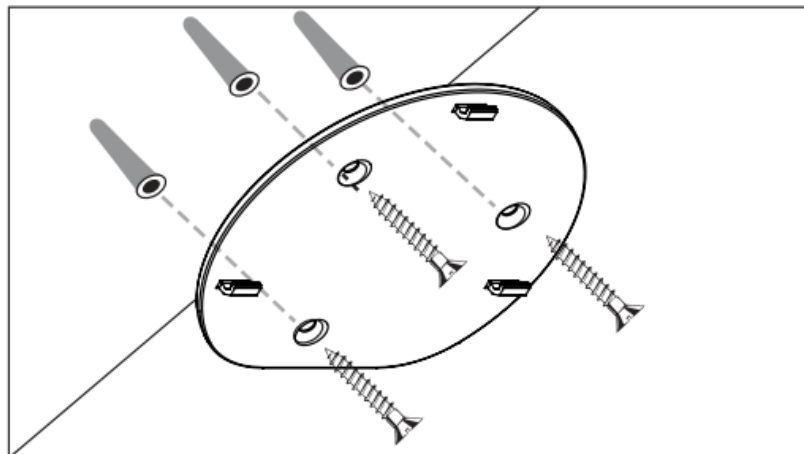


- **STEP 4:** Connect the DC cable wires to the DC wire terminal block as shown in DROPPED CEILING INSTALL Steps 6 and 7. Then place the DC cable and antenna coax cable into the groove, being careful not to pull on the RF connector.

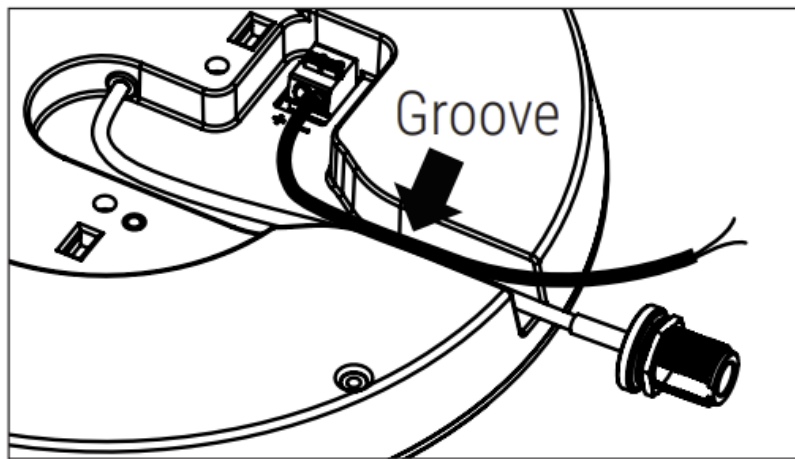


- **STEP 5:** Align the plastic clips on the Hard Ceiling Mounting Plate with the three holes on the antenna and snap the antenna onto the plate in the direction of the cable groove.

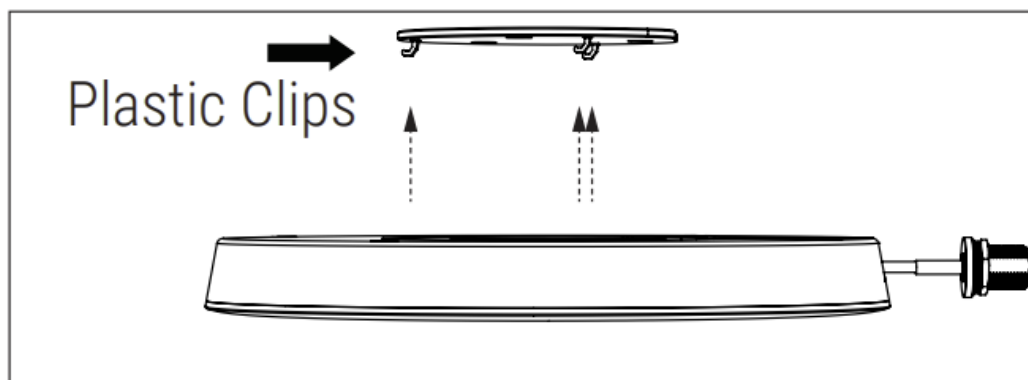

- **STEP 6:** Connect the antenna coax cable to the signal source cable, being careful not to pull on the antenna coax cable connector.

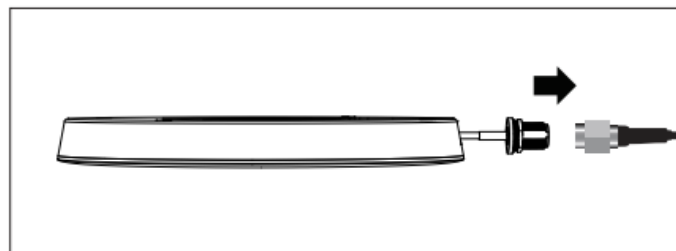

Connection Diagram

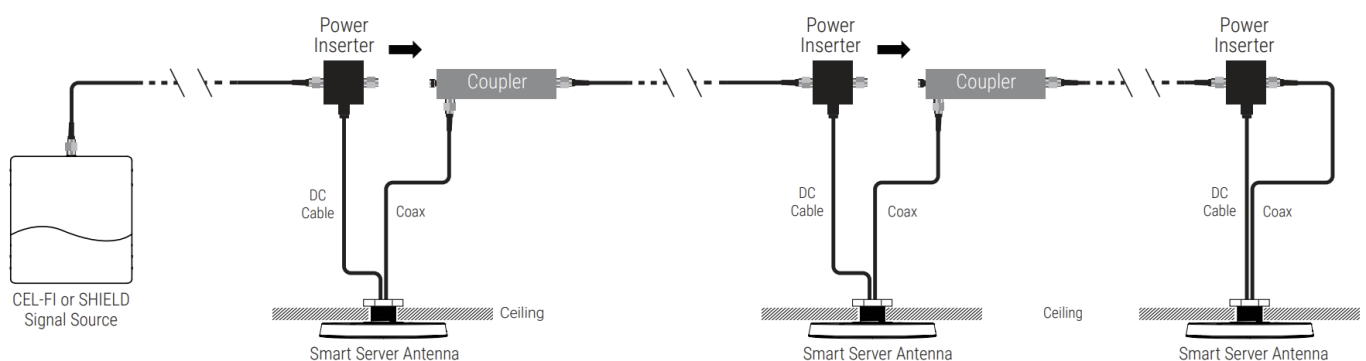

MORE INFORMATION

Review the latest authorized antennas at: www.nextivityinc.com/antennas/smart-server-antenna




Copyright © 2023 by Nextivity, Inc., U.S. Patents pending. All rights reserved. The Nextivity and CEL-FI logos are registered trademarks of Nextivity, Inc. All other trademarks or registered trademarks listed belong to their respective owners. Designed by Nextivity, Inc. in California.

FAQs

- **Q: What should I do if I experience interference with the Smart Server Antenna?**
 - A: If you encounter interference that affects the device's operation, try adjusting the placement of the antenna to minimize interference sources such as electronic devices or metal structures.
- **Q: How can I ensure proper operation of the Smart Server Antenna?**
 - A: To optimize performance, ensure the Smart Server Antenna is installed according to the provided instructions, away from potential interference sources, and within the recommended operating conditions.

Documents / Resources

	NEXTIVITY A71-JV4,A91-JV4 Smart Server Antenna [pdf] User Guide A71-JV4, A91-JV4, A71-JV4 A91-JV4 Smart Server Antenna, A71-JV4 A91-JV4, Smart Server Antenna, Server Antenna
---	--

References

- [User Manual](#)

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.