



## NEXXT SOLUTIONS NHC-0640 Smart Wifi Battery Camera User Guide

[Home](#) » [Nexxt Solutions](#) » NEXXT SOLUTIONS NHC-0640 Smart Wifi Battery Camera User Guide 



**SOLUTIONS NHC-0640 Smart Wifi Battery Camera  
User Guide**



**Smart VVi-Fi battery camera  
Indoor and outdoor NHC-0640**

## User guide

Thank you for purchasing the smart battery-powered Wi-Fi camera from Nexxt Solutions. We are excited about being a part of making your life easier, safer, and bringing peace of mind outside and inside your home.

### Contents

 
- [1 Product overview](#)
- [2 Package content](#)
- [3 Inserting the microSD™ card](#)
- [4 Mounting location](#)
- [5 Mounting your camera on the wall](#)
- [6 Installing the Nexxt Home App](#)
- [7 Add device](#)
- [8 Camera settings](#)
- [9 Documents / Resources](#)
- [10 Related Posts](#)

## Product overview

1. Lens
2. Microphone: picks up the voice of anyone standing near the camera or sound in the surrounding area
3. Status LED indicator light:

LED status	Camera status
White LED on	Camera charging
Red LED on	System starting up
Red LED blinks quickly	Standby for configuration
Red LED blinks quickly	Network pairing
Green LED on	Camera online

4. Light sensor
5. PIR: Passive Infrared sensor that detects heat energy and can differentiate between an animal and a human shape
6. Battery mode on/off switch: On: Turns on battery mode. Off: Turns off battery mode.
7. Built-in microSD™ card slot: supports local storage for a card of up to 128GB
8. Micro USB port: charge the camera's battery through this port. It is recommended to always charge it at 100%. Also provides the alternative to plug the device to an electrical outlet.  
While the camera's battery is charging, the LED light turns on white. Once it is fully charged, the LED light turns off and a notification is received in the Nexxt Home app indicating that the camera's battery is fully charged and ready to be mounted again.
9. Sync button: press and hold this button for 5 seconds to reset the camera
10. Mount base: mounting hole for flexible installation on a wall or a ceiling

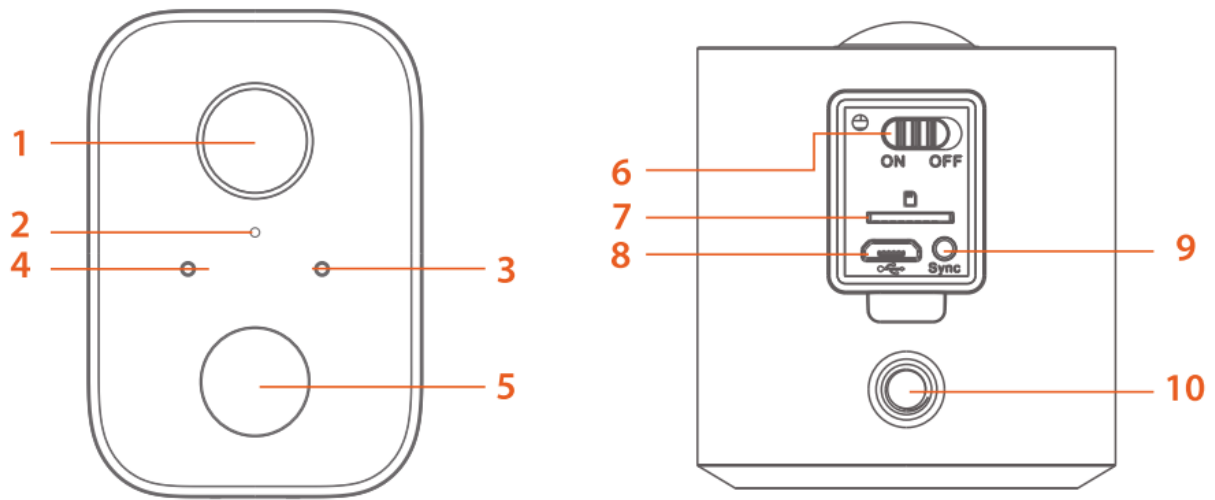


## Package content

- Smart camera (1)
- Wall mount bracket (1)
- Wall screw set (3)
- USB cable (1)
- Quick setup guide (1)

## Inserting the microSD™ card

 
Gently insert the microSD™ card (up to 128GB) into the slot. The camera will automatically recognize the inserted memory card when it powers on.

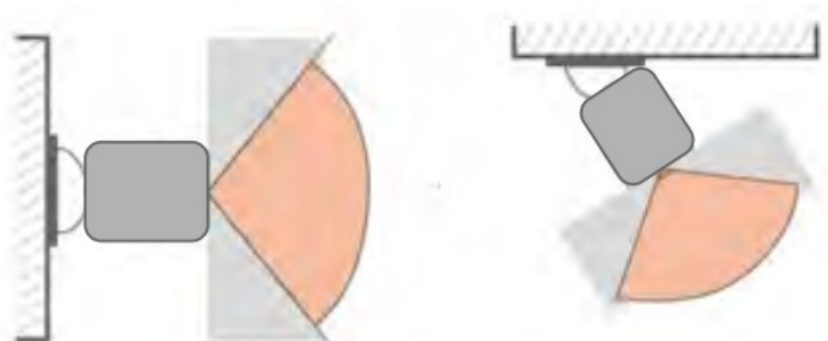

## Mounting location

First choose the location to mount the smart camera, preferably one that offers the best viewing angle and wireless reception.

The illustrations below show the optimal field of view of the camera, when mounted vertically or horizontally.

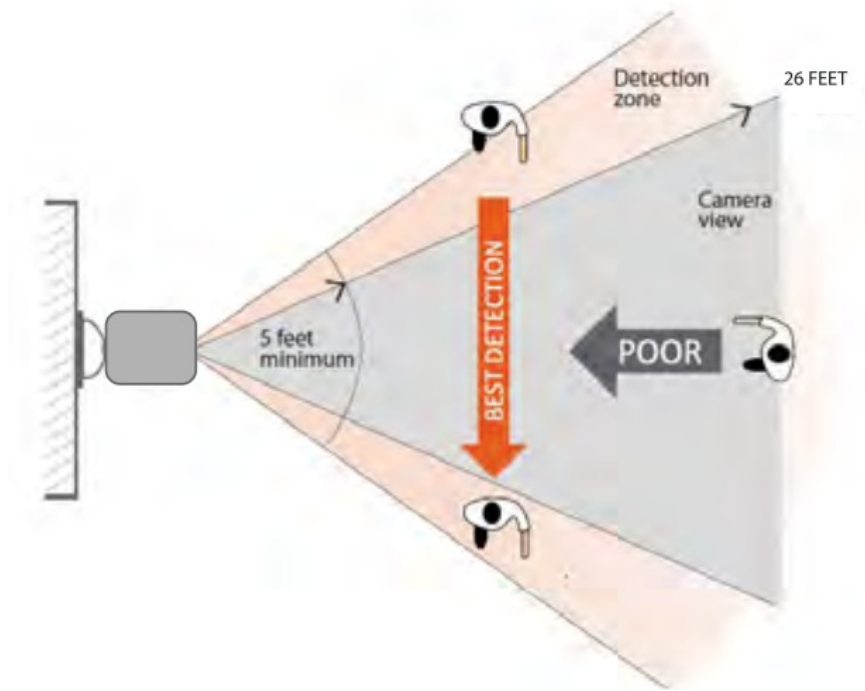 


### Installation

You can place the camera on a shelf or other flat surface, or you can mount it on the wall.

### Mounting your camera on the wall


Select a location to install the camera. The camera should be installed at least 7 feet above the floor or ground for best motion sensor performance.

 Tilt and aim slightly downwards to ensure an effective detection range of up to 26ft away from the mounting location. Place the camera on the wall and secure it using the 3 screws and 3 concrete anchors provided.

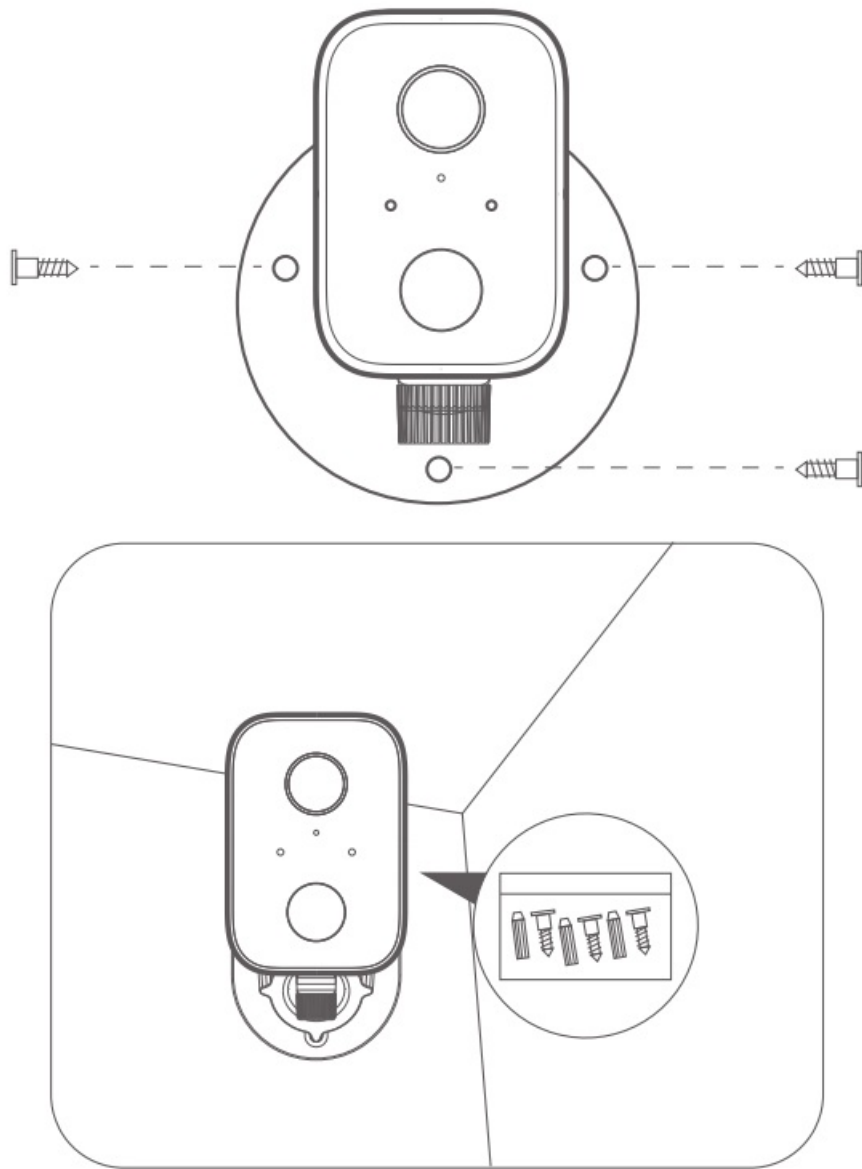


You may connect the power to the camera by using the Micro USB power adapter (5V/2A max.)

### Installing the Nexxt Home App

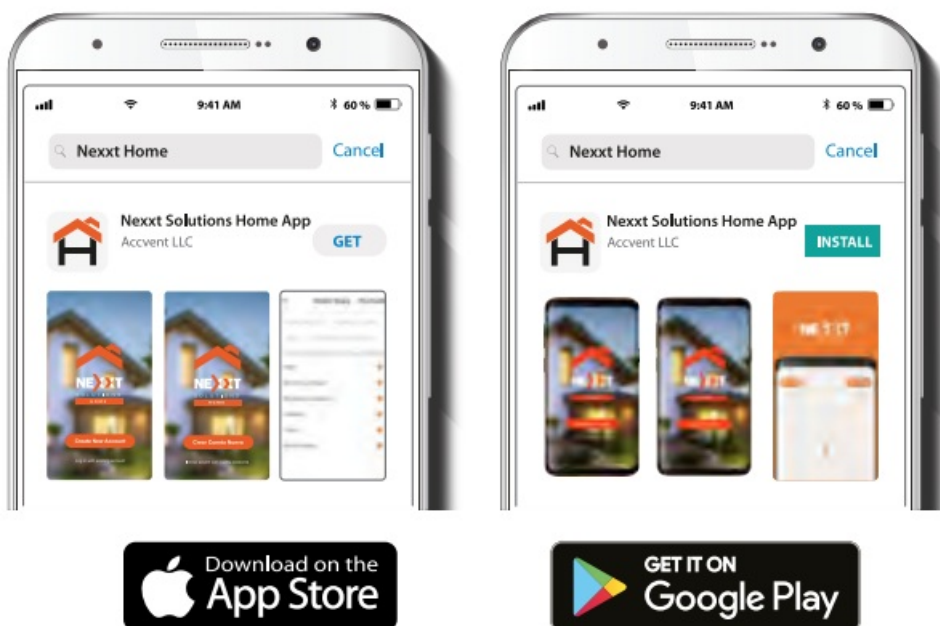 


Download the Nexxt Home app from Google Play or Apple App Store and create a new account .

### Step 1

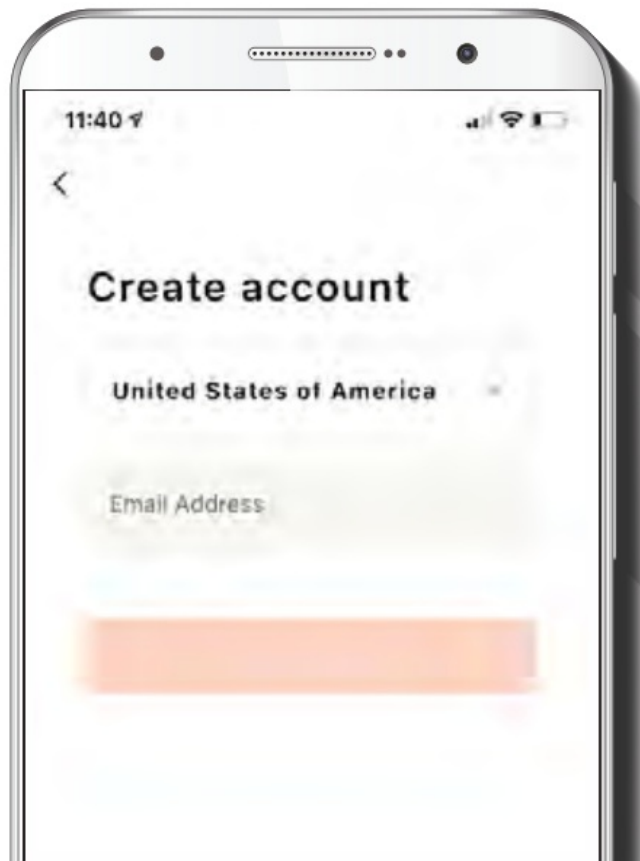 


Register by email. Fill in the required fields.

## Step 2

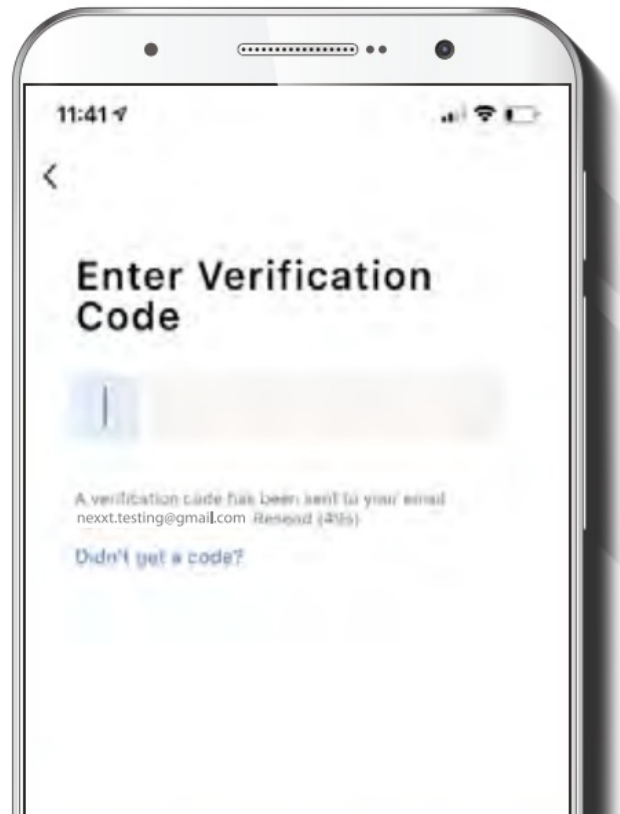 

Enter the verification code you received.

## Step 3

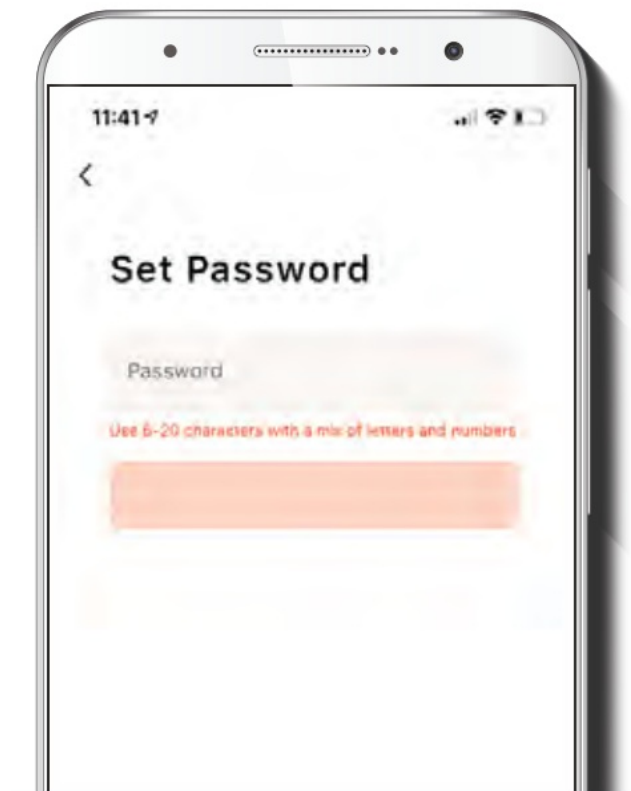 

Create a new password and then select Done.

## Step 4





The Nexxt Home account has been successfully configured.

## Step 5




Assign a home name and a family location. Then click on Save.

Add device
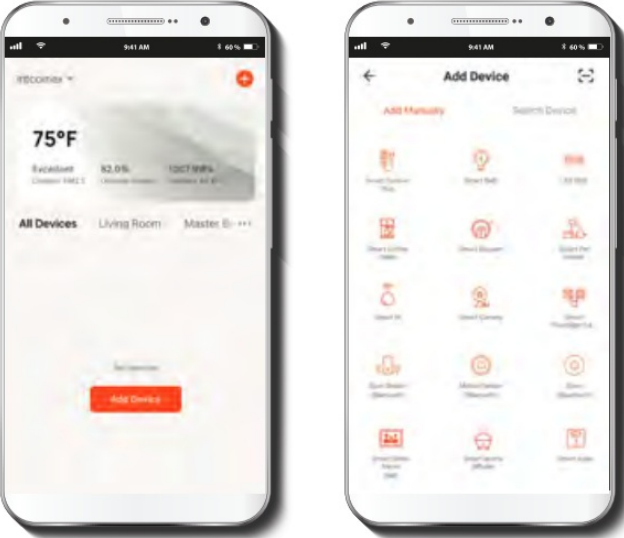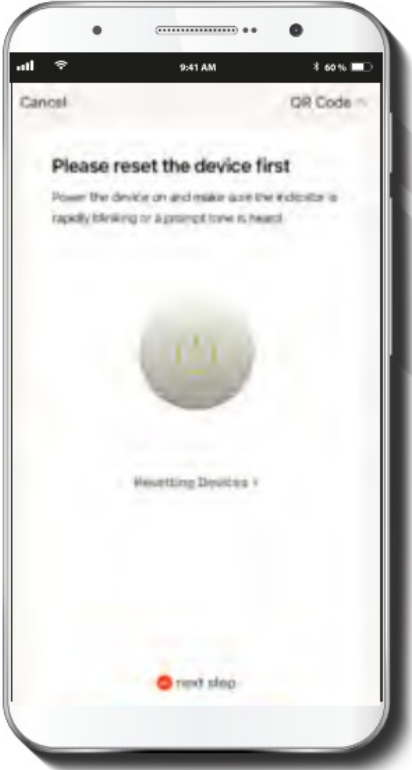
<div data-bbox="405 338 488 371">Step 1</div> <div data-bbox="140 416 767 952"></div>	<div data-bbox="1104 188 1214 228">Step 2</div> <div data-bbox="940 349 1353 1115"></div>
<div data-bbox="124 1171 778 1234">Select the + icon or the Add device, button to add the device, followed by the Smart Camera icon.</div>	<div data-bbox="809 1153 1461 1252">Power on the smart camera and wait for the power-on tone, once it is heard, the LED begins to blink in red. Click on Next.</div>



### Step 3

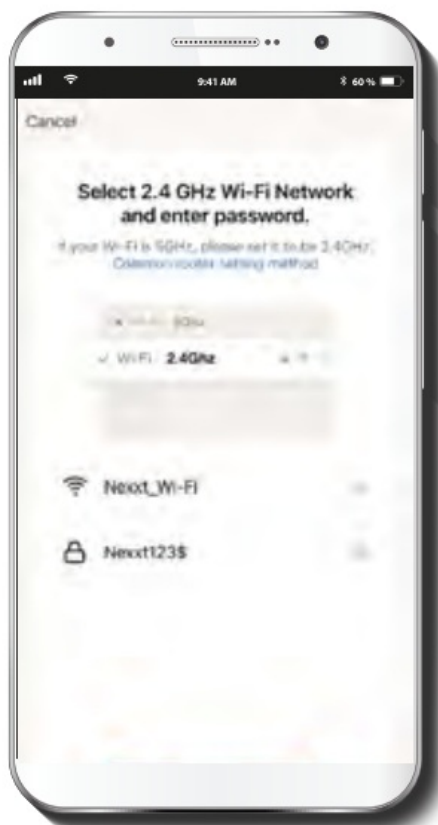 





### Step 4



You must connect to a 2.4GHz WiFi network. Enter your network password. Make sure you enter the correct password, otherwise the device will not connect.













Scan the QR code from your mobile device with the smart camera. Once you hear the tone, click on the | heard a prompt button.




If you experience any issues, reset the camera. If a Registered account added the camera through the app, then another user will be prevented from setting up the camera in a different account, unless permission is granted through the share access option.

<div>Step 5</div> 	<div>Step 6</div> 	<div>Device name</div>  	
<p>It will take around 30 seconds to pair the camera depending on the Wi-Fi connection. If pairing is successful, the Notification Added will be displayed on the screen. The device has been added as Smart battery camera.</p>		<p>To rename the device, click on the pencil icon on the screen, enter a different name, and click Save. The device is now ready to be configured through the Camera Settings menu.</p>	


Camera settings




	Screenshot: Takes a picture of what the camera is viewing.
	Speak: Allows voice communications through the microphone.
	Record: Starts recording a video.
	Playback: If a microSD™ card is installed, you can use the playback function to watch recordings.
	Motion Detection: Sets the motion detection settings.
	Gallery: View photos and videos.
	Theme color: Changes the interface's color tone from white to black or vice-versa to save smartphone battery.
	In a dark color it saves more battery.
	HD/SD: Switches between High Definition and Standard Definition.
	Mute: Mutes the microphone on the camera.
	Full screen: Switches to full screen mode.
	Signal: Shows the Wi-Fi signal strength.
	Battery information: Indicates the power remaining in the batteries

	<p>Cloud storage: Users can set up an account to store footage in the cloud.</p>
	<p>Night vision: Displays and records infrared images.</p>
	<p>Siren: Sounds an alarm to alert of a person inside the camera's field of view.</p>
 
## Menu settings

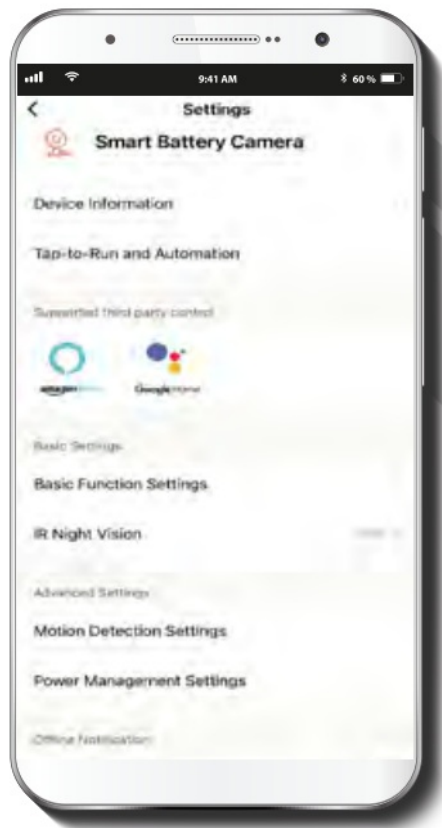

## Battery camera

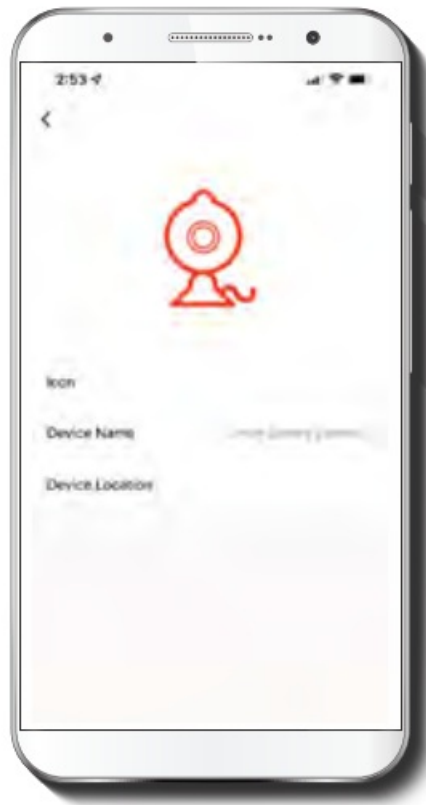 


It allows the user to rename the device, To change the default name, click on Device Name. You may also change the icon and location.

### Device information



 This menu will display information about the camera.

### Basic function settings

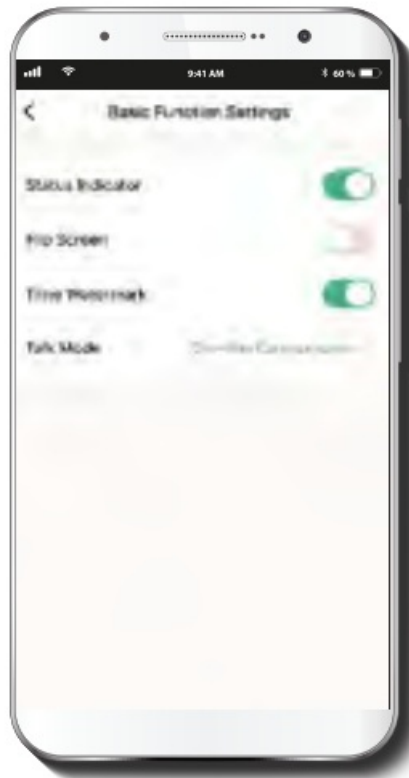


Flip screen: Flips the image 180 degrees if the camera is mounted upside down.

Time watermark: Enables and disables the time and date stamp shown on the recorded videos.


Talk mode: Allows either one-way or two-way speech.

### **Night Vision:**

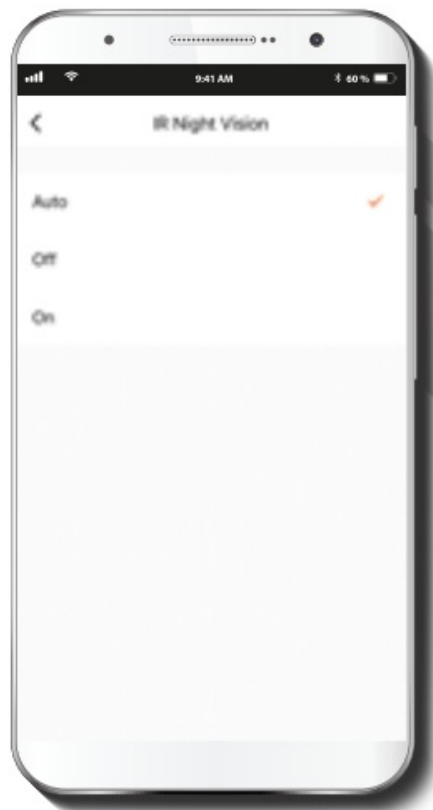 


Set the infrared night vision in auto, off, or on.

### **Motion detection settings**

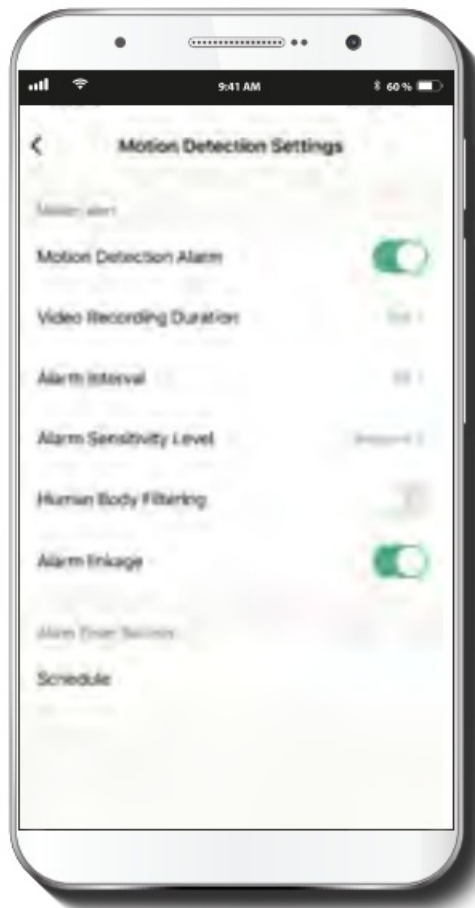 


Motion detection settings: Turns the motion detection feature on and off. Sets up a space of time between alarms. Changes the sensitivity between Low, Medium, or High. Activates or deactivates image filtering to differentiate between animal and human shapes.

### Cloud storage purchase options

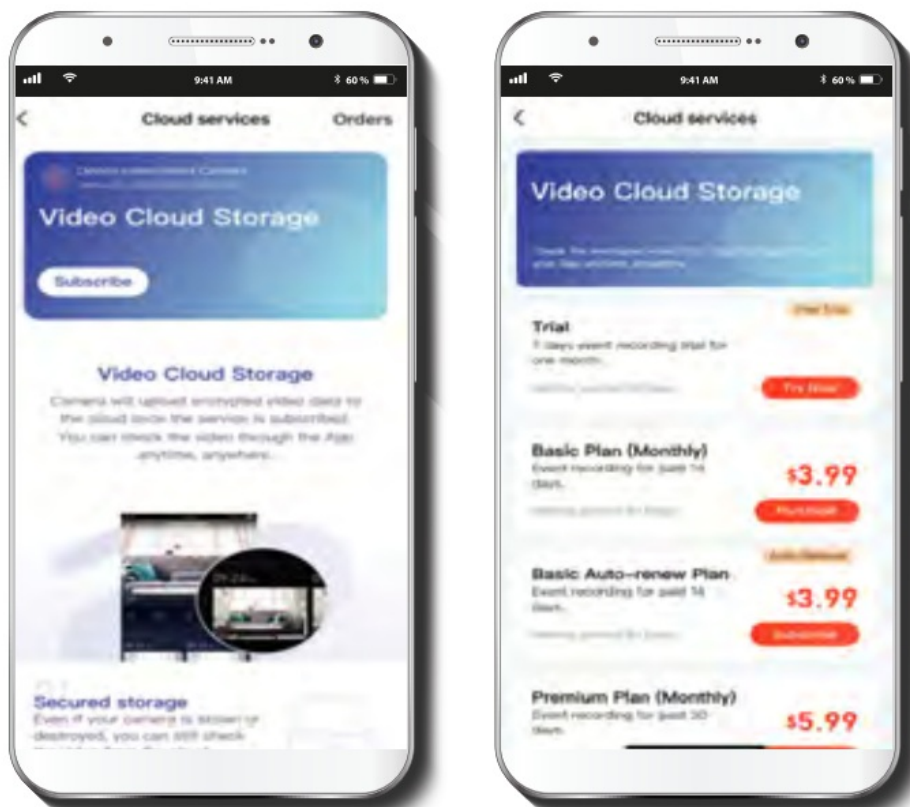 


Cloud storage: Provides the option to purchase a selection of cloud storage services.

## Power management settings

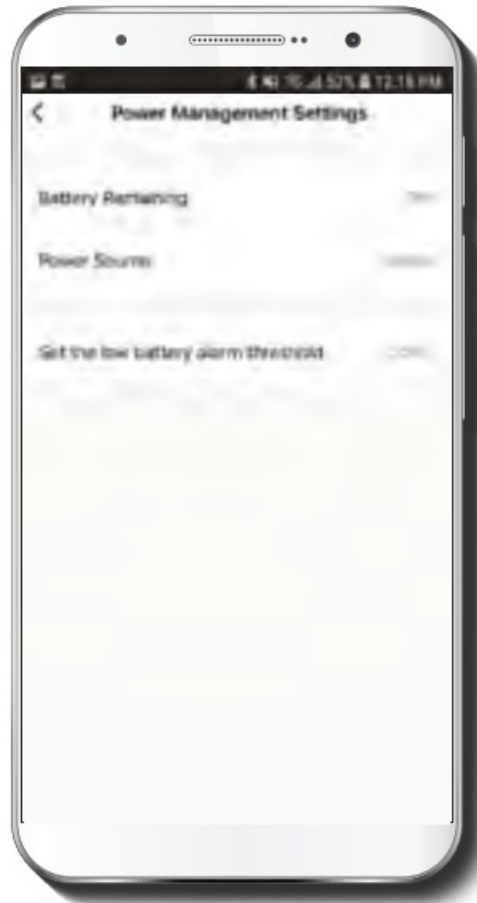 

Power management settings :Displays the battery percentage. Configure the percentage on which the low battery alarm activates .

## Memory card settings

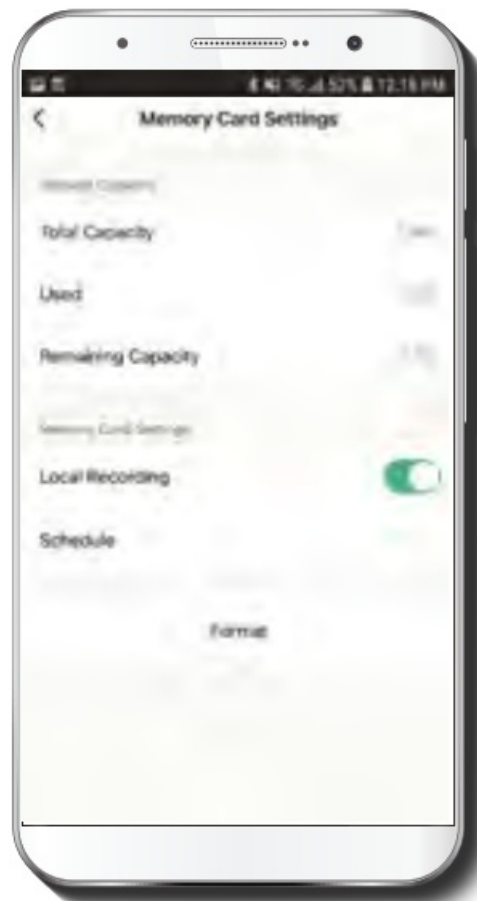 



Total capacity: Shows the capacity of the microSD™ card.

Used: Shows how much memory has been used.


Remaining capacity :

Shows how much space is left on the microSD™ card.

Local recording: Activates video recording on the memory card.


Schedule: Sets up a schedule to turn local recording on and off.

## Offline notification

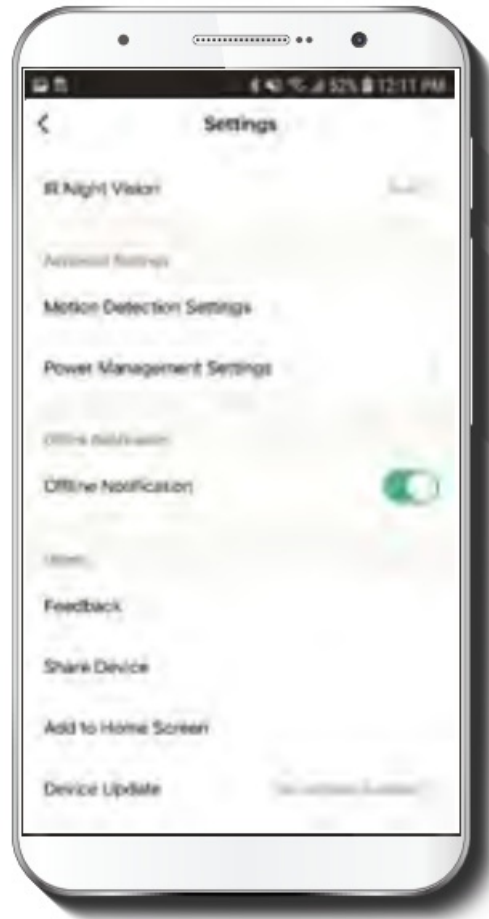 


Will send a notification if the device remains offline over 30 minutes.

## Share device

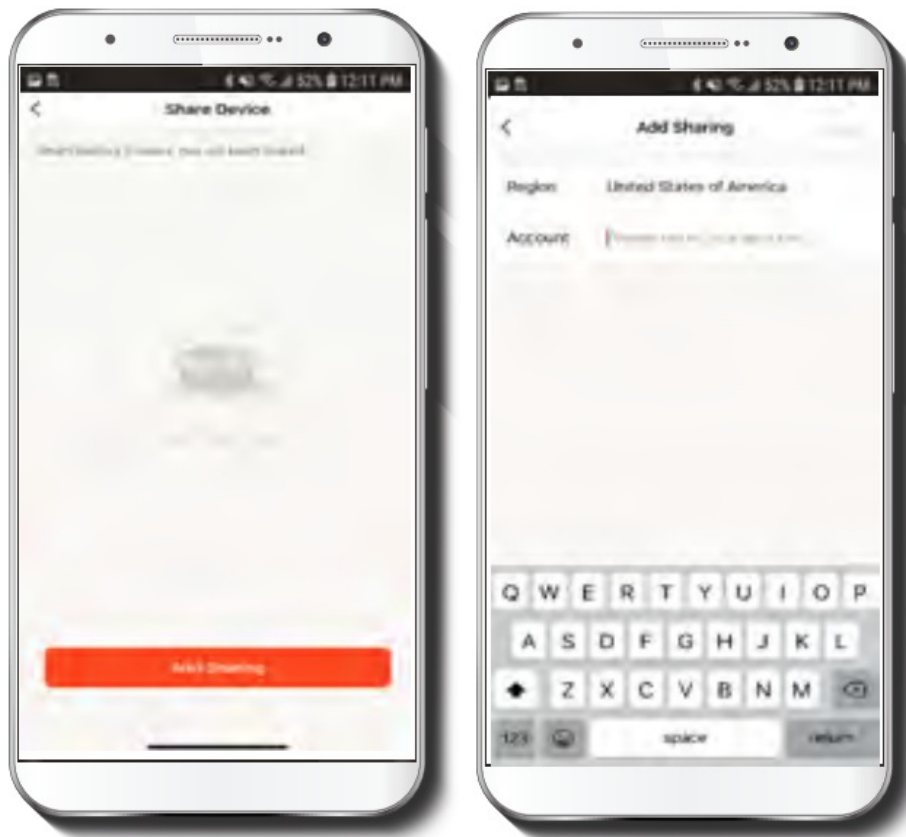 


Additional users will need their own Nexxt Home account .  
 Select Add sharing and then enter the Region and the e-mail address of family or friends . Tap on Save.

### Feedback and firmware

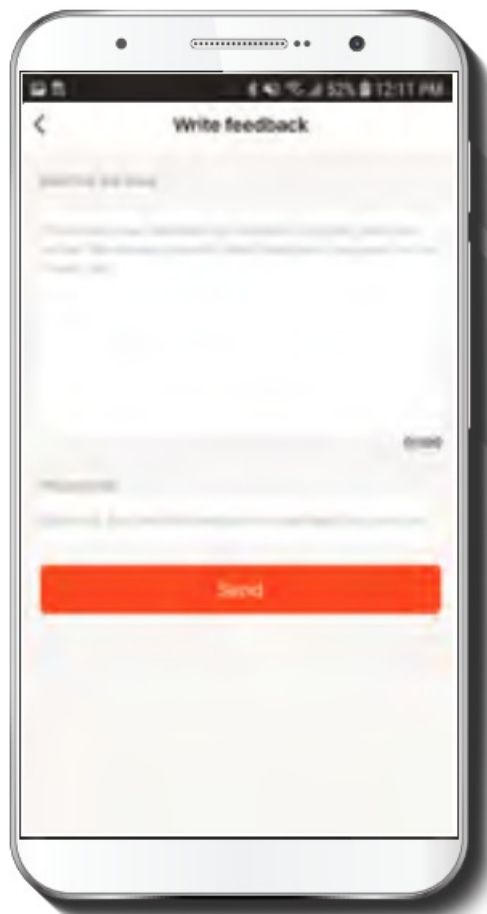 

Write feedback: Please let u s know if you have any issues setting up the product.

 Firmware information: We will sometimes add new features or provide updates with a new firmware upgrade .  
Remove device: Remove the camera from your account.  
Tap on Confirm when done.

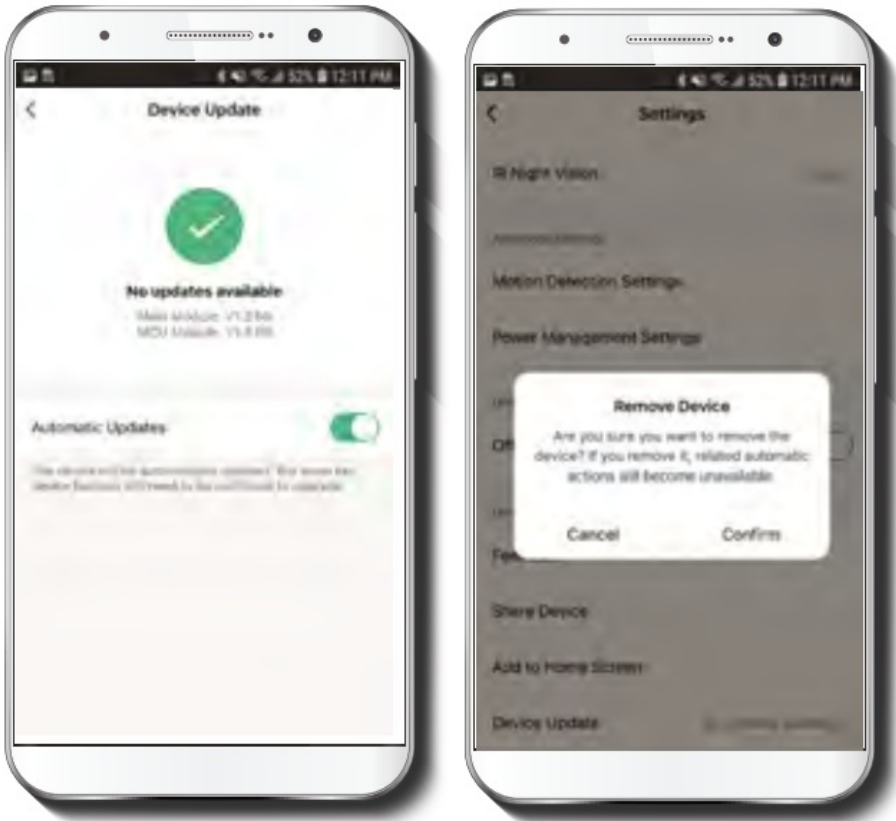

**FCC ID: X4YHACO40**

Nexxt Solutions® is a registered trademark. All rights reserved .  
Amazon, Alexa, and all related logos are trademarks of Amazon.com, Inc. or its affiliates. Google, Android, and Google Play are trademarks of Google LLC. SD™ and microSD™ are trademarks owned by SD-3C, LLC. All other brand names and trademarks are the property of their respective owners. Made in China.

**Documents / Resources**

	<p><a href="#">NEXXT SOLUTIONS NHC-0640 Smart Wifi Battery Camera</a> [pdf] User Guide HACO40, X4YHACO40, NHC-0640 Smart Wifi Battery Camera, NHC-0640, Smart Wifi Battery Camera, Battery Camera, Camera</p>
---	---