

NEXXT SOLUTIONS NHE-R100 Smart WiFi Relay Switch User Guide

Home » Nexxt Solutions » NEXXT SOLUTIONS NHE-R100 Smart WiFi Relay Switch User Guide



Contents

- 1 NEXXT SOLUTIONS NHE-R100 Smart WiFi Relay
- **Switch**
- 2 Package content
- 3 Safety information
- **4 Product overview**
- 5 Hardware installation
- 6 Installing the Nexxt Home App
- 7 Add device
- 8 Main interface
- 9 Timer
 - 9.1 Setting
- 10 Relay status
- 11 Light mode
- 12 Child lock
- 12.1 Settings
- 13 Smart relay switch
 - 13.1 Device information
- 14 Device network
 - 14.1 Share device
- 15 Create group
- 16 Feedback
- 17 Add to home screen
- 18 Device update
- 19 Documents / Resources
 - 19.1 References
- **20 Related Posts**



NEXXT SOLUTIONS NHE-R100 Smart WiFi Relay Switch



Thank you for purchasing the Smart relay switch from Nexxt Solutions. We are excited for being a part of making your life easier, safer, and bringing peace of mind inside and outside your home.

Package content

- Smart relay switch (1)
- Terminal screw cover (2)
- Fastening screw (4)
- User guide (1)

Safety information

Precautions

Please read and understand this entire manual before attempting to install and operate this electrical switch. This smart relay switch works with 110-240-volt AC.

This device has been tested by the manufacturer according to all international electrical standards. However, every state has different standards and rules for installing electrical cabling and equipment in a home. Improper installation of this product may cause electrical injury to an individual. Installation of this product must be performed by a qualified electrician or a certified electrical technician. Do not attempt to perform the installation if you are not familiar with hardwired electrical connections. Improper installation can lead to loss of warranty. Nexxt Solutions assumes no liability for the improper installation of this product.


• Turn power off at the circuit breaker or fuse.

WARNING:


To avoid risk of electric shock or electrocution, install the smart relay switch away from any water source.

- A neutral wire is needed to power the relay switch.
- This device is single band and will only work with 2.4GHz Wi-Fi routers.

Product overview

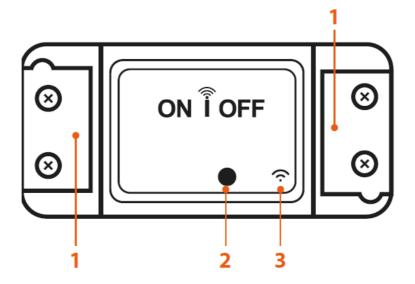

- 1. Terminal screw covers
- 2. Pairing button/manual switch/reset
- 3. Wi-Fi LED status light

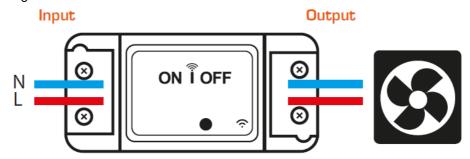

Initial inspection

Before installing the electrical relay switch, ensure that all parts are included in the package. If any part is missing or damaged, do not attempt to install, or operate this product.

Estimated installation time: 10 minutes.

Tools that may be required but are not included for installation



· Phillips screwdriver



· Flathead screwdriver



• Wire strippers/cutters

Hardware installation

• Step 1


Cut in half the fixture or device cable that you wish to connect to the smart relay switch. Strip the cable's jacket to to leave the wires bare and facilitate the connection to the relay terminals.



• Step 2


Remove the terminal screw covers. On the output side, attach the wires coming from the fixture or device to the L (Live) and N (Neutral) terminals on the relay switch.

Proceed to tighten the terminal screws to make sure the connection is secure.

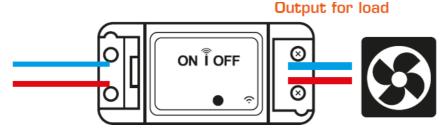

• Step 3


Repeat the same procedure on the input side of the relay switch, but this time connecting the two electric wires from the grid. Make sure to match the N (Neutral) wire with Neutral terminal on the input section of the relay. Do the same with the L (Live) wire. Avoid accidentally reversing the wires to prevent malfunction or damaging the device.

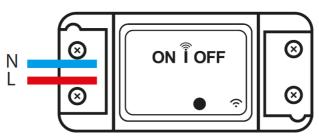


Installing the Nexxt Home App

Scan the QR code or download the Nexxt Home app.



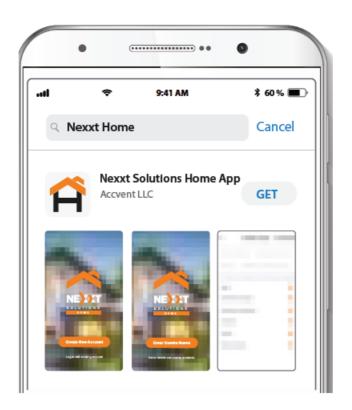



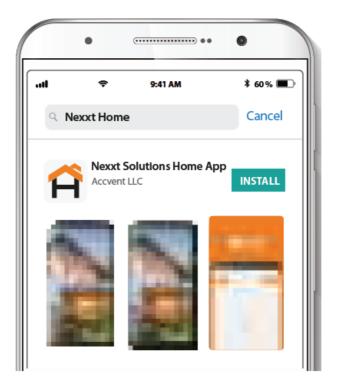




Download the Nexxt Home app from Google Play or Apple App Store and create a new account.

Step 1
 Register by email. Fill in the required fields.



• Step 2
Enter the verification code you received.

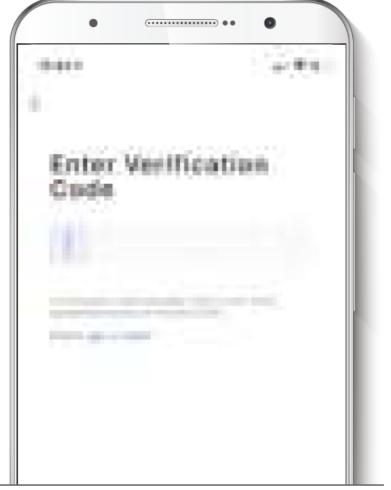


Step 3
 Create a new password and then select Done.



• Step 4

T he Nexxt Home account has been successfully configured.

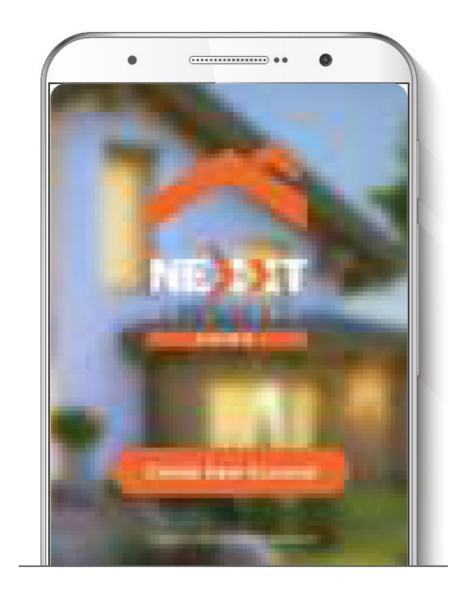

Add device

• Step 1

Press Add device or click on + icon, followed by the smart relay switch.



• The LED indicator light must start blinking. Otherwise, press and hold the reset button on the unit for 10 seconds until the blue LED blinks fast.



• Step 2

You must connect to a 2.4GHz Wi-Fi network. Enter your network password. Make sure you enter the correct password, otherwise the device will not connect. It may take around 30 seconds to add the device, depending on the Wi-Fi connection.



Step 3
 If pairing is successful, the notification Added will be displayed on the screen.



Device name

To rename the device, click on the pencil icon on the screen, enter a different name, and then click on Save to store your settings.



Main interface



The main interface has a menu at the bottom of the screen which includes: Power, Timer, and Setting. Tap on Power on the screen to turn the relay switch on or off.

Timer

The Timer function includes:

• Countdown: Allows you to set a countdown timer for a given amount of time to cause the device to tun on or

off.

- **Schedule:** Click on Add Schedule to access the Add Schedule screen. Set the day or days you wish to schedule and then the times. Click on Save on the upper right-hand corner to store a schedule.
- **Sequence:** Creates a cycle with times to turn the relay switch on and off.
- Random: Sets up a period of time when the switch turns on and off randomly.
- Auto-Off: Configures a period of time that once is complete, the relay switch turns off.
- **Astronomical:** Configures the city or town and the time zone in the Nexxt Home app. The app detects the local time and sets up turn on and off times according to sunrise and sunset.



Setting

This setting menu at the bottom of the screen enables the configuration of the following functions:

- Switch Log: Displays the activity log on the screen.
- · Relay Status
- · Light Mode
- · Child Lock



Relay status

Relay Status: Determines the status of the switch when electrical power comes back after a power outage. It can be set in status On, Off, or Remember last status before a power outage occurs.



Light mode

Light Mode: This setting offers three options to configure the LED light.

- Indicate switch on/off: The LED light is on when the switch is on, and the LED light is off when the switch is off to easily identify the current status of the device.
- Indicate switch location: Suitable for dark places or in the middle of the night, the LED is on, to make it easier to locate the switch.
- Indicate LED off: Keeps the LED light always off.



Child lock

Allows the user to enable or disable the physical control of the switch.

Note: The lock can be manually disabled by pressing the button on the switch four consecutive times.



Settings



Smart relay switch

Click on the pencil icon to change the icon, name, and location of the switch.



Device information

Displays the device ID, IP address and time zone.



Device network

- Displays the network that the relay switch is connected to, and the signal strength.
- Tap to run and automation: Links the smart relay switch with other smart products to automatically control them through a customized command.
- Offline notification: Provides a selection button to enable/disable this feature.



Share device

Click on Add sharing. Enter the e-mail address of family and friends. Tap on Done. The newly configured users will now have access to your smart relay switch.

Note: Family or friends need their own Nexxt Home account to access the device.



Create group

Makes management of devices easier by selecting and arranging multiple units under a single group.



Feedback

Let us know if you have any issues setting up the product.



Add to home screen

This is a newly added UI interface which provides direct access to the main controls of the device by adding a shortcut to the main screen on your mobile phone.



Device update

Adds new features or provide updates with a new firmware upgrade. You can choose to have it automatically updated by clicking the button below.

Remove device: allows you to unbind the device from the Nexxt Home Account.



FCC ID: X4YHAER100

Nexxt Solutions® is a registered trademark. All rights reserved. Amazon, Alexa, and all related logos are trademarks of Amazon.com, Inc. or its affiliates. Google, Android, and Google Play are trademarks of Google LLC. All other brand names and trademarks are the property of their respective owners. Made in China.

Documents / Resources



References

• a Amazon.com. Spend less. Smile more.

Manuals+,