neza S1 Portable Bluetooth Speaker





neza S1 Portable Bluetooth Speaker User Manual

Home » neza » neza S1 Portable Bluetooth Speaker User Manual



Contents

- 1 neza S1 Portable Bluetooth Speaker
- 2 Package List
- **3 Outline Picture and Function**

Description

- 4 Using Your Speaker
- **5 Button Controls**
- **6 Technical Specifications**
- 7 Safety Information
- 8 Documents / Resources
 - 8.1 References
- 9 Related Posts

neza


neza S1 Portable Bluetooth Speaker



- · Bluetooth Speaker
 - 1pcs
- 3.5mm Audio Cable
 - 1pcs
- 3.5mm FM Antenna
 - 1pcs
- Type-C Charging Cable
 - 1pcs
- Sling
 - 1pcs
- User's Manual
 - 1pcs

Outline Picture and Function Description


- 1. Type C charging port
- 2. USB in port
- 3. 3.5mm Aux input
- 4. Power On/Power off/Play/Pause
- 5. volume +/Next Song
- 6. FM mode
- 7. volume -/Previous Song
- 8. Light mode
- 9. Indicator light
- 10. Type-C Charging Cable
- 11. 3.5mm Audio Cable
- 12. 3.5mm FM Antenna

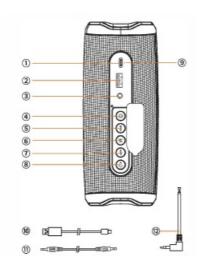

Using Your Speaker


Turn on/off @

Functional status	Key operation	Voice prompts
On	Press and hold for 3 seconds	Power on
Off	Press and hold for 3 seconds	Power off

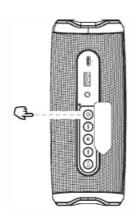

Bluetooth Pairing

After turning on the speaker, turn on the bluetooth on the mobile phone search for 51, and make a Bluetooth connection to pair successfully. Note: When turned on, 51 will automatically connect to the last connected device if available.

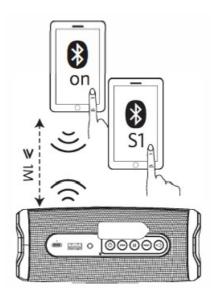

Connect via AUX


Plug in the 3.5mm audio cable, and connect to mobile phones/computers/ tablets and so on, it can be used as an external speaker. Note: To return to Bluetooth mode, remove the AUX cable from your S1 speaker.



Speaker Charging

Functional status	Indicator light	Voice prompts
Low battery	Flashing red	Battery low
Charging	Steady red	/
Fully charged	Red light off	/

Note: To preserve battery lifespan, fully charge at least once every 30 days

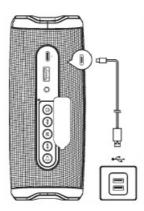

FM Mode@

Plug in the 3.5mm FM antenna in the "AUX", then press the FM Button once to switch to FM radio(Voice prompt "FM mode"), and then press the power button to search for channels. Note: Press the FM Button again to switch the Bluetooth function(Voice prompt "Bluetooth mode")




Light Switch Mode@

Press the light button to switch the flashing mode of the magic light. There are 7 light modes in total.



Button Controls

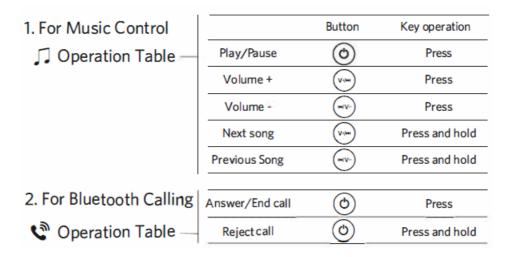

Technical Specifications

Product Weight:	460g
Bluetooth Version:	V5.1
Play Time (varies by volume level and au	dio content): 18H
Transmission Range:	100FT
Frequency Response:	50Hz-20KHz
Battery Type:	Lithium-ion polymer(3.7V,4400mAh)
Battery Charge Time:	3.5H
Bluetooth Transmitter Frequency Range:	2.402-2.480 GHz
SNR:	≥60dB
Bluetooth Transmitter Power:	O-4dBm
Size:	172*67*67mm

Safety Information

- Do not use corrosive cleaners to clean this product.
- Do not heat up or place this product near a source of fire.
- Do not expose this product to direct sunlight for an extended period of time.
- Do not dispose of this product in a fire to avoid explosions.
- Do not attempt to dismantle this product for any modifications.

Activation & Warranty

Please follow up on the user's manual step-by-step and we will always stand by if you have any problems while playing 51 speaker. If you have any other questions, please contact us. Activate Permanent After-sales Service: Permanent replacement of damaged, defective, not upgraded, or missing items (no need to return the original)Please activate via email below within 15 days. Our Customer Service Email: nezaseller@outlook.com

Documents / Resources



neza S1 Portable Bluetooth Speaker [pdf] User Manual

S1 Portable Bluetooth Speaker, S1, Portable Bluetooth Speaker, Bluetooth Speaker, Speaker

References

• User Manual

Manuals+, Privacy Policy