



NGS SKY CHARM Tower Speaker with Bluetooth User Manual

[Home](#) » [NGS](#) » NGS SKY CHARM Tower Speaker with Bluetooth User Manual 

Contents

- [1 NGS SKY CHARM Tower Speaker with Bluetooth](#)
- [2 INSTALLATION](#)
- [3 DESCRIPTION OF TOP PANEL](#)
- [4 DESCRIPTION OF REAR PANEL](#)
- [5 DESCRIPTION OF REMOTE CONTROL](#)
- [6 BLUETOOTH MODE](#)
- [7 AUX MODE](#)
- [8 USB PLAYBACK MODE](#)
- [9 PLUG 2 INTO STEREO](#)
- [10 FM MODE](#)
- [11 TECHNICAL SPECIFICATIONS](#)
- [12 DECLARATION OF CONFORMITY](#)
- [13 Documents / Resources](#)
 - [13.1 References](#)
- [14 Related Posts](#)

 


NGS SKY CHARM Tower Speaker with Bluetooth



INSTALLATION


1. After all the screws are screwed in, tighten them evenly clockwise to avoid misplacement of the stand and the base plate.
2. Do not force excessively in case of irreparable damage to the speaker cabinet

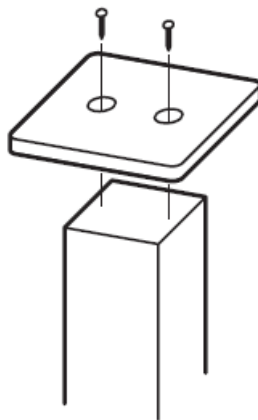

DESCRIPTION OF TOP PANEL


1. USB audio input
2. On / Off

 3. Play / Pause
4. Mode
5. Equaliser (6 modes)
6. Aux input
7. Next / Forward
8. Previous / Back
9. Volume up
10. Volume down

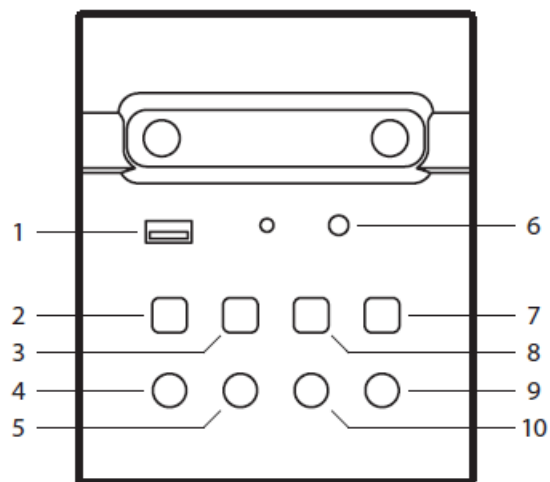

DESCRIPTION OF REAR PANEL

 
1. Optical input
2. Audio input
3. Audio output

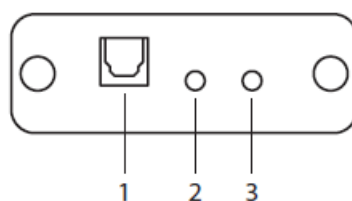

DESCRIPTION OF REMOTE CONTROL

1. On / Off
2. Equaliser (Choose between pop, rock, jazz, classical or country sound effects) Press and hold to restore default sound effect
3. Silence (Display symbol “= =”)
4. Volume up
5. Volume down
6. Play / Pause (Display symbol “II”)
7. Previous track
8. Next track

 9. Aux mode
10. FM mode
11. Optical mode *
12. Bluetooth mode
13. USB mode

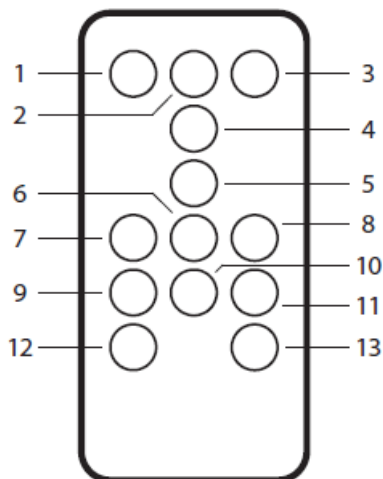

Only works when there is optical input signal. If there is no signal, it remains in the current mode.

BLUETOOTH MODE

- **Turn on the speaker and then switch to Bluetooth mode:** the “Bluetooth mode” prompt tone will sound and the indicator will flash in red. Keep the speaker and Bluetooth-enabled device within a radius of ten metres.
- Set your mobile phone to search for Bluetooth devices.
- When the Bluetooth enabled finds the speaker, select “NGS SKYCHARM” from the list of found devices.
- If required, enter the password “0000”.
- After successfully being paired, BT will light up on the display

AUX MODE

- Keep the unit powered on. Plug one end of the 3.5mm AUX cord to the headphone jack on your device.
- Plug the other end of the 3.5mm AUX cord into the AUX jack on the speaker.
- Use the connected device’s audio controls for music playback.

USB PLAYBACK MODE

Turn on the unit. Push USB disk with MP3 music(s) into USB port, it will switch to USB Playback Mode and then start to play music automatically.

PLUG 2 INTO STEREO

- Plug the second NGS Skycharm speaker into the main one using a 3.5mm jack cable. Plug one end of the audio cable into the output port of the main speaker, which is located on the rear panel, and the other end of the cable into the input port of the secondary speaker (also at the rear).
- Control all functions from the main speaker.

Important

If you plug an audio cable into the audio input on the rear panel without the other end of the cable being connected to a speaker, the tower automatically shuts down and must be turned on again

OPTICAL INPUT MODE

Plug one end of the optical cable into your TV, make sure it is turned on and plug the other end into the NGS Skycharm speaker. The display will show "OP".

Note: You must select the optical audio output from the TV so that the sound signal reaches the speaker.

FM MODE

- Select FM mode.
- Press and hold the PLAY / PAUSE button for two seconds to automatically search for available stations. Press again to discontinue and store the searched stations.
- Press and hold the NEXT or PREV keys to switch channels.
- Press the NEXT or PREV keys to increase or decrease the frequency by 0.1 MHz each time and select the desired station.
- Press the FM key to save the selected station.

Note: channels are automatically assigned and sorted by ascending frequency

TECHNICAL SPECIFICATIONS

- Power Output 50W
- Compatible with Bluetooth
- Connect 2 and make it stereo through audio cable *
- USB charging port
- FM Radio
- USB reader
- Aux input
- Aux output
- Optical input
- LED screen
- Wooden case

Connect 2 speakers in stereo using an Audio Cable, connecting the Audio output of the master speaker to the audio input of the slave tower. The slave speaker will then be controlled via the master tower.

DISPOSAL

If at any time in the future you should need to dispose of this product please note that: Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice. (Waste Electrical and Electronic Equipment Directive)

DECLARATION OF CONFORMITY

WE, AUTHORIZED REPRESENTATIVE, LURBE GRUPS.A, SAN SEBASTIAN, SPAIN, DECLARE UNDER OUR SOLE RESPONSIBILITY THAT THE FOLLOWING PRODUCT:

NGS: NGS SPEAKER COMPATIBLE WITH BLUETOOTH MODEL: SKYCHARM

HAS BEEN TESTED AND FOUND IN CONFORMITY WITH THE FOLLOWING HARMONIZED EUROPEAN STANDARDS:

- IEC 62321-3-1:2013, IEC 62321-5:2013,
- IEC 62321-4:2013+AMD1:2017, IEC 62321-7-1:2015,
- IEC 62321-7-2:2017, IEC 62321-6:2015,
- IEC 62321-8:2017

AND THEREFORE COMPLY WITH THE ESSENTIAL REQUIREMENTS AND PROVISIONS OF THE FOLLOWING DIRECTIVES OF THE EUROPEAN PARLIAMENT AND EUROPEAN COUNCIL:
ELECTROMAGNETIC COMPATIBILITY DIRECTIVE (EMC) 2014/30/EU RADIO EQUIPMENT DIRECTIVE 2014/53/EU LOW VOLTAGE DIRECTIVE (LVD) 2014/35/EU ROHS DIRECTIVE 2011/65/EU & (EU) 2015/863
AUTHORIZED REPRESENTATIVE: LURBE GRUP S.A

Documents / Resources



[NGS SKY CHARM Tower Speaker with Bluetooth](#) [pdf] User Manual
SKY CHARM, Tower Speaker with Bluetooth, SKY CHARM Tower Speaker with Bluetooth, SKY CHARM Tower Speaker, Tower Speaker, Speaker

References

-  [NGS | Altavoces y auriculares compatible Bluetooth, teclados, ratones y más ...](#)
-  [NGS](#)