




niceboy 24-01 Snacker S3 User Manual

[Home](#) » [niceboy](#) » niceboy 24-01 Snacker S3 User Manual 

Contents

- [1 niceboy 24-01 Snacker S3](#)
- [2 DEVICE DIAGRAM](#)
- [3 CLEANING AND MAINTENANCE](#)
- [4 PARAMETERS](#)
- [5 SAFETY INSTRUCTIONS](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)

niceboy ion®

niceboy 24-01 Snacker S3



DEVICE DIAGRAM



1. Safety latch
2. Plates for panini
3. Button to release the bottom plate
4. Top plate release button
5. Power indicator light
6. Maximum temperature indicator light
7. Handle
8. Plates for panini
9. Waffle plates
10. Plates for toasts

MANIPULATION

Place two identical plates in the toaster to make waffles, toast or panini. When correctly inserted, the plates click into place. Always preheat the toaster closed. The green light goes out after successful heating (approx. 3-5 min.) to the maximum temperature. During food preparation, the green light will always light up at the moment when the toaster reaches the maximum temperature.

CLEANING AND MAINTENANCE

Before first use, wash all replaceable plates carefully with warm soapy water. Do not wet the body of the toaster. To maintain a non-stick surface, you can lightly coat the interchangeable plates with vegetable oil before use, or use an oil spray.

PARAMETERS

- Dimensions: 222 x 221 x 95 mm
- Plate size: 220 – 225 x 125 mm
- Power supply: 240 V, 50-60 Hz
- Power: 750W
- Number of exchangeable plates: 3 (toast, panini, waffle)

NICEBOY s.r.o. hereby declares that the type of equipment Niceboy ION Snacker S3 Stainless steel complies with Directives 2014/30 / EU, 2014/35 / EU, and 2011 /65 / EU. The full content of EU Declaration of Conformity is available on the following websites:

[https:// niceboy.eu/cs/declarati on/ion-snacker-s3](https://niceboy.eu/cs/declarati on/ion-snacker-s3)

PACKAGE CONTENTS

- Toaster, manual,
- waffle plates,
- toast plates,
- panini plates

SAFETY INSTRUCTIONS

- The appliance should be operated by an adult
- Before using this product for the first time, please read all instructions carefully and use it correctly based on the user manual.
- Use only original accessories from the manufacturer.
- If you need to hand the product over to a third party, attach the user manual to it.
- Any activity contrary to this manual may result in product damage and personal injury. This appliance is not intended as a toy. When using it, take care of your safety and those around you, especially children. Children under 8 years of age and people with reduced physical, sensory and mental abilities and knowledge must not operate the product unless they are supervised by a person responsible for their safety.
- Do not use the product if it malfunctions due to dropping, damage, outdoor use, or water ingress. To avoid injury, the product should be repaired by the manufacturer or its aftersales service.
- Do not use the product if the power cable, socket or charging dock is damaged.
- Do not touch the appliance with wet hands.
- The use of the product in an environment with an open fire is prohibited.
- Do not use the product in extreme heat (above 40 °C) or in extreme cold (below 4 °C). Keep hair, clothing, fingers and other body parts away from the operating parts of the product.
- Do not use the product on wet or waterlogged ground.
- Use the power cord carefully to avoid damage. Do not use the power cord to pull or pull the device.
- Do not use the power cord as a handle.
- Before cleaning or maintaining the product, the product must be switched off and the plug must be removed from the outlet.
- Use the product in accordance with the instructions for use. Any loss or damage caused by improper use is the responsibility of the user.
- Do not wipe or clean any part of the power cord with a wet cloth or wet hands.

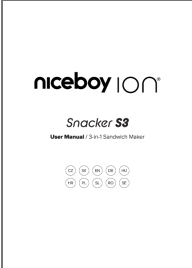
USER INFORMATION FOR DISPOSING ELECTRICAL AND ELECTRONIC DEVICES (HOME USE)



This symbol located on a product or in the product's original documentation means that the used electrical or electronic products may not be disposed together with the communal waste. In order to dispose of these products correctly, take them to a designated collection site, where they will be accepted for free. By disposing of a product in this way, you are helping to protect precious natural resources and helping to prevent any potential negative impacts on the environment and human health, which could be the result of incorrect waste disposal. You may receive more detailed information from your local authority or nearest collection site.

According to national regulations, fines may also be given out to anyone who disposes of this type of waste incorrectly. User information for disposing electrical and electronic devices (business and corporate use) In order to correctly dispose of electrical and electronic devices for business and corporate use, refer to the product's manufacturer or importer. They will provide you with information regarding all disposal methods and, according to the date stated on the electrical or electronic device on the market, they will tell you who is responsible for financing the disposal of this electrical or electronic device. Information regarding disposal processes in other countries outside the EU. The symbol displayed above is only valid for countries within the European Union. For the correct disposal of electrical and electronic devices, request the relevant information from your local authorities or the device seller.

Documents / Resources

	niceboy 24-01 Snacker S3 [pdf] User Manual 24-01 Snacker S3, 24-01, Snacker S3, S3
--	---

References

- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.