

niceboy ONE SPARK Contactless Payment Strip User Manual

Home » niceboy » niceboy ONE SPARK Contactless Payment Strip User Manual



niceboy ONE SPARK Contactless Payment Strip



Contents

- 1 CONNECTING TO THE APP
- **2 PAYING WITH A PAYMENT BRACELET**
- **3 COMMON MISTAKES WHEN PAYING WITH THE**

BRACELET

- **4 SECURITY NOTICES**
- **5 SPECIFICATIONS**
- **6 PACKAGE CONTENTS**
- 7 Customer Support
- 8 Documents / Resources
 - 8.1 References
- 9 Related Posts

CONNECTING TO THE APP

Install the Niceboy Pay app on your mobile phone (the app is only supported on Android 10 and above, iOS 8.2 and above for security reasons).

Turn on the NFC function on your mobile phone.

Open the downloaded Niceboy Pay app.

- If you have already created an account, log in with your email address and password.
- If you do not have an account, click on "Create an account". Enter your email and choose a password. Then click on register. The application will allow you to log into your account.


Now all you have to do is add your wearable. The chip is in the extended part of the bracelet.




Click on "Add Device." Then attach your device to your phone's NFC chip (for iPhones, the NFC chip is usually on the top of the phone, see Picture 1. For Android devices, it is most often seen in Picture 2. The exact position of your phone's NFC chip may vary on different devices. To find out the exact position of your phone's NFC chip, contact your phone manufacturer).

After adding the device to your account, you can add your credit card or create a business card.

• Figure 1 Common approximate location of the NFC chip on an iPhone

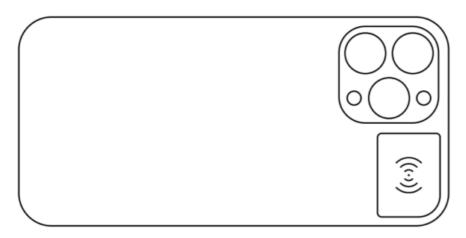

• Figure 2 Common approximate location of Android devices

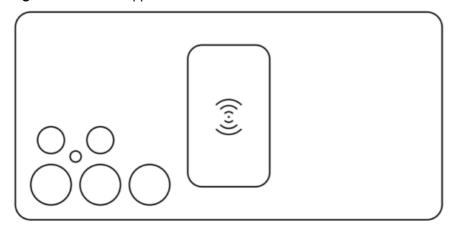

To add a card, first enter the card number, then its expiration date and CVV code. After filling in, it is necessary to confirm the conditions by clicking "confirm and continue". The card must then be tokenized into the device. You can do this by touching the device to your phone's NFC chip again. For a smooth process of tokenization, place the payment element on the table and place the phone next to it. Try not to move your phone. If you are unable to complete the tokenization, it will be necessary to bring the device closer to the NFC chip. Subsequently, all you have to do is authorize the card with a verification code using an SMS message and complete the activation.

ATTENTION! Limit movement when tokenizing the card to the device with the phone. Failed activation several times in a row can lead to blocking of the device. The device can be unlocked in the app under "Help" -> "Wearables" -> "My wearable is not responding" -> "Unlock wearable".

- If you want to remove the card, click "Remove Card".
- The card can be temporarily deactivated using the "Active/Inactive" button.

PAYING WITH A PAYMENT BRACELET

How to pay correctly with a bracelet?

- 1. Place the payment element at a distance of 1-2 cm from the logo for contactless payment
- 2. Keep the bracelet in the given position until you hear a beep or until the information and completion of payment appear on the terminal display.

COMMON MISTAKES WHEN PAYING WITH THE BRACELET

Do not rush to pay with a wristband. Always wait until the terminal displays information about a successful transaction.

SECURITY NOTICES

- Do not throw the device into a fire.
- The device is not suitable for children under 3 years of age.
- Attempting to disassemble the device will result in irreversible damage. The device may only be disassembled by an authorized Niceboy s.r.o. technician.

RETURNING OF THE PRODUCT WITHIN 14 DAYS / RETURN OF THE PRODUCT

- In case of returning the device within 14day period or in case of a product complaint, the customer is obliged to remove the payment card from his/her device. In the event of failure to do so, the manufacturer shall not be liable for any damages incurred.
- In case of mechanical damage by the customer, the claim cannot be accepted (scratches, dents, other visible damage).

SPECIFICATIONS

Device: Niceboy ONE Spark **Application**: Niceboy Pay Payment chip type: NFC Effective chip distance: 1-3 cm

PACKAGE CONTENTS

Payment bracelet Niceboy ONE Spark Instructions for use

Customer Support

MANUFACTURER:

NICEBOY s.r.o., 5. kvetna 1746/22, Prague 4, Nusle, 140 00, Czech Republic, ID: 294 16 876 Made in China.





Documents / Resources



References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.