



niceboy RAZE 3 GURU Bluetooth Speaker User Manual

[Home](#) » [niceboy](#) » niceboy RAZE 3 GURU Bluetooth Speaker User Manual 

Contents

- [1 niceboy RAZE 3 GURU Bluetooth Speaker](#)
- [2 PACKAGE CONTENTS](#)
- [3 PRODUCT DESCRIPTION](#)
- [4 CHARGING](#)
- [5 CONNECTING TO BLUETOOTH](#)
- [6 PARAMETERS](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)

niceboy®

niceboy RAZE 3 GURU Bluetooth Speaker




PACKAGE CONTENTS

Bluetooth speaker Niceboy RAZE 3 guru
USB-C charging cable
Audio cable
Instructions for Use

PRODUCT DESCRIPTION

1. Magic Button
2. On / Off, mode change
3. LED indicator
4. Increase volume / Next song
5. Play / Pause
Answer / End / reject call / last dialed number
6. Decrease volume / Previous song
7. Reset – factory settings
8. AUX input jack 3.5mm
9. Rechargeable USB – output, input for USB flash drive
10. Rechargeable USB-C input

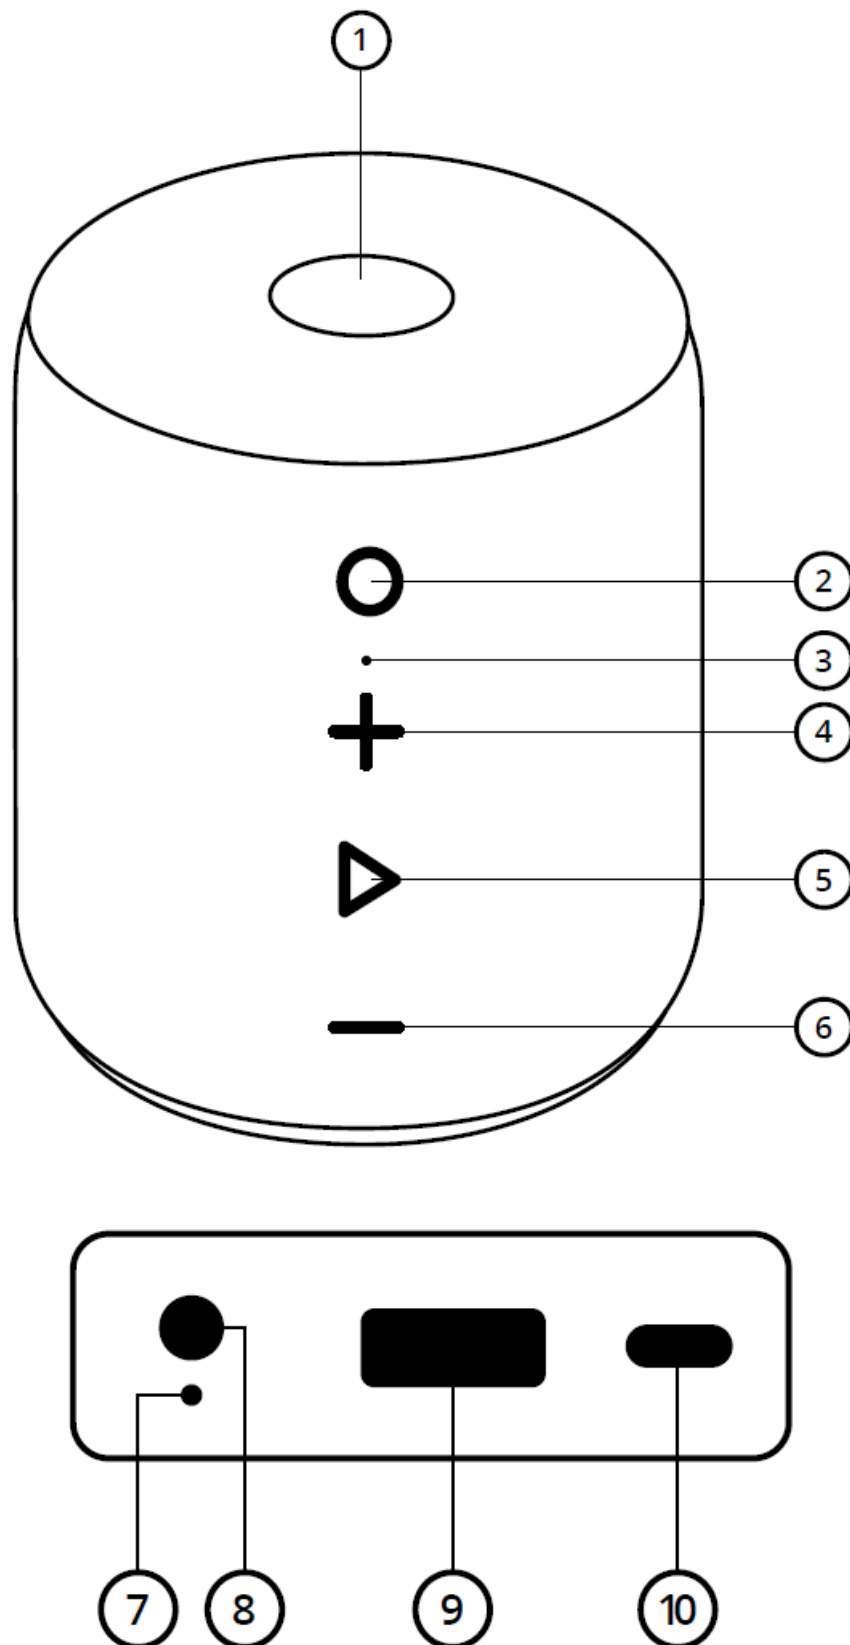

CHARGING

We recommend fully charging the speaker before its first use to maximize the battery's lifespan. The speaker takes approximately 3 hours to fully charge. Low battery is announced by an audible signal. To charge the speaker's battery connect the enclosed USB-C cable to the charging port (10) and connect to any charging adapter (voltage 5V and output current minimum of 1A) or to a USB port on your PC. The charging process is signaled by the charging LED diode (3), the diode will stop shining once the speaker has finished charging.

POWERING ON/OFF

Press and hold button (2) for 3 seconds to power on/off the speaker.

CONNECTING TO BLUETOOTH

1. Press the power on/off button (2) for 3 seconds to power on the speaker. The speaker is now in pairing mode ready for Bluetooth connection. Pairing mode is signaled by an LED diode flashing blue (3).
2. Activate Bluetooth on your own device. Select “Niceboy RAZE 3 guru” from the list of available devices.
3. Your device will connect to the speaker. Successful pairing is announced by an audio signal and the flashing of the LED diode (3).

PLAYBACK

Play or pause tracks by pressing button (5). Press and hold the volume controls, located on buttons (4) and (6) to change volume. Press the volume up button to jump to the next track and the volume down button to jump to the previously played track.

AUX MODE

1. Insert the enclosed 3.5 mm jack cable into the audio port (8) and the speaker will automatically switch to the relevant mode.
2. Use the device with which you are connected to the speaker to control music play-back. Press and hold the volume controls, located on buttons (4) and (6) to change the volume.

USB FLASH DRIVE

After inserting a USB flash drive, press button (2) and the USB mode will be announced by an audio signal. For both the SD card and USB flash drive, play or pause tracks by pressing button (5). Press and hold the volume controls, located on buttons (4) and (6) to change the volume. Press the volume up button to jump to the next track and the volume down button to jump to the previously played track. The device supports a maximum data capacity of 32GB and the following audio formats: MP3, WMA, WAV, APE, FLAC.

TELEPHONE CALLS

Press button (5) to accept and then end telephone calls. Press and hold the same button to decline a telephone call. Press the same button twice to call the last number in your call list.

MAGIC BUTTON

Press button (1) to switch between the two audio modes. The reinforced bass mode has been activated when the button is backlit.

Note: You will need to keep in mind that the Magic Button mode uses up more of the battery life.

FACTORY SETTINGS

Should you encounter technical difficulties, return the speaker to its factory settings. The speaker must be powered on. Insert any thin object (needle, pin) into the reset opening (7). The speaker will automatically power off. Manually power the speaker back on to complete the reset process.


PARAMETERS

Bluetooth version:	5.0
Supported codecs:	SBC, A2DP, AVRCP, HFP
Power:	24W
Electrical impedance:	4Ω

Sensitivity:	>83dB
Frequency range:	65 Hz – 20 kHz
Bluetooth transmission distance:	10 meters
Supported data carrier:	USB flash disk, max. 32GB
Battery:	Li-Ion 2500 mAh
Battery life:	10 hours (at 50% volume)
Waterproof Level:	IP67

This product meets all basic EU regulation requirements placed upon it.

Documents / Resources

	niceboy RAZE 3 GURU Bluetooth Speaker [pdf] User Manual RAZE 3 GURU Bluetooth Speaker, RAZE 3 GURU, Bluetooth Speaker, Speaker, RAZE Speaker, RAZE 3 Speaker, GURU Speaker
---	---